

Notice

This manual provides general information, preparation for use, installation and operating instructions for the Black Lion Audio Auteur DT.


The information contained in this manual is subject to change without notice. Black Lion Audio makes no warranties of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Black Lion Audio shall not be liable for errors contained herein or direct, indirect, special, incidental, or consequential damages in connection with the furnishing, performance, or use of this material.

©2022 Black Lion Audio. The Black Lion Audio 'Lion Face' logo, BLA, are trademarks or registered trademarks of Black Lion Audio. This manual and any associated intellectual property are subject to copyright protection. No part of this document may be reproduced in any form without explicit written consent from Black Lion Audio.



Auteur DT

Transformer-coupled Desktop Preamplifier

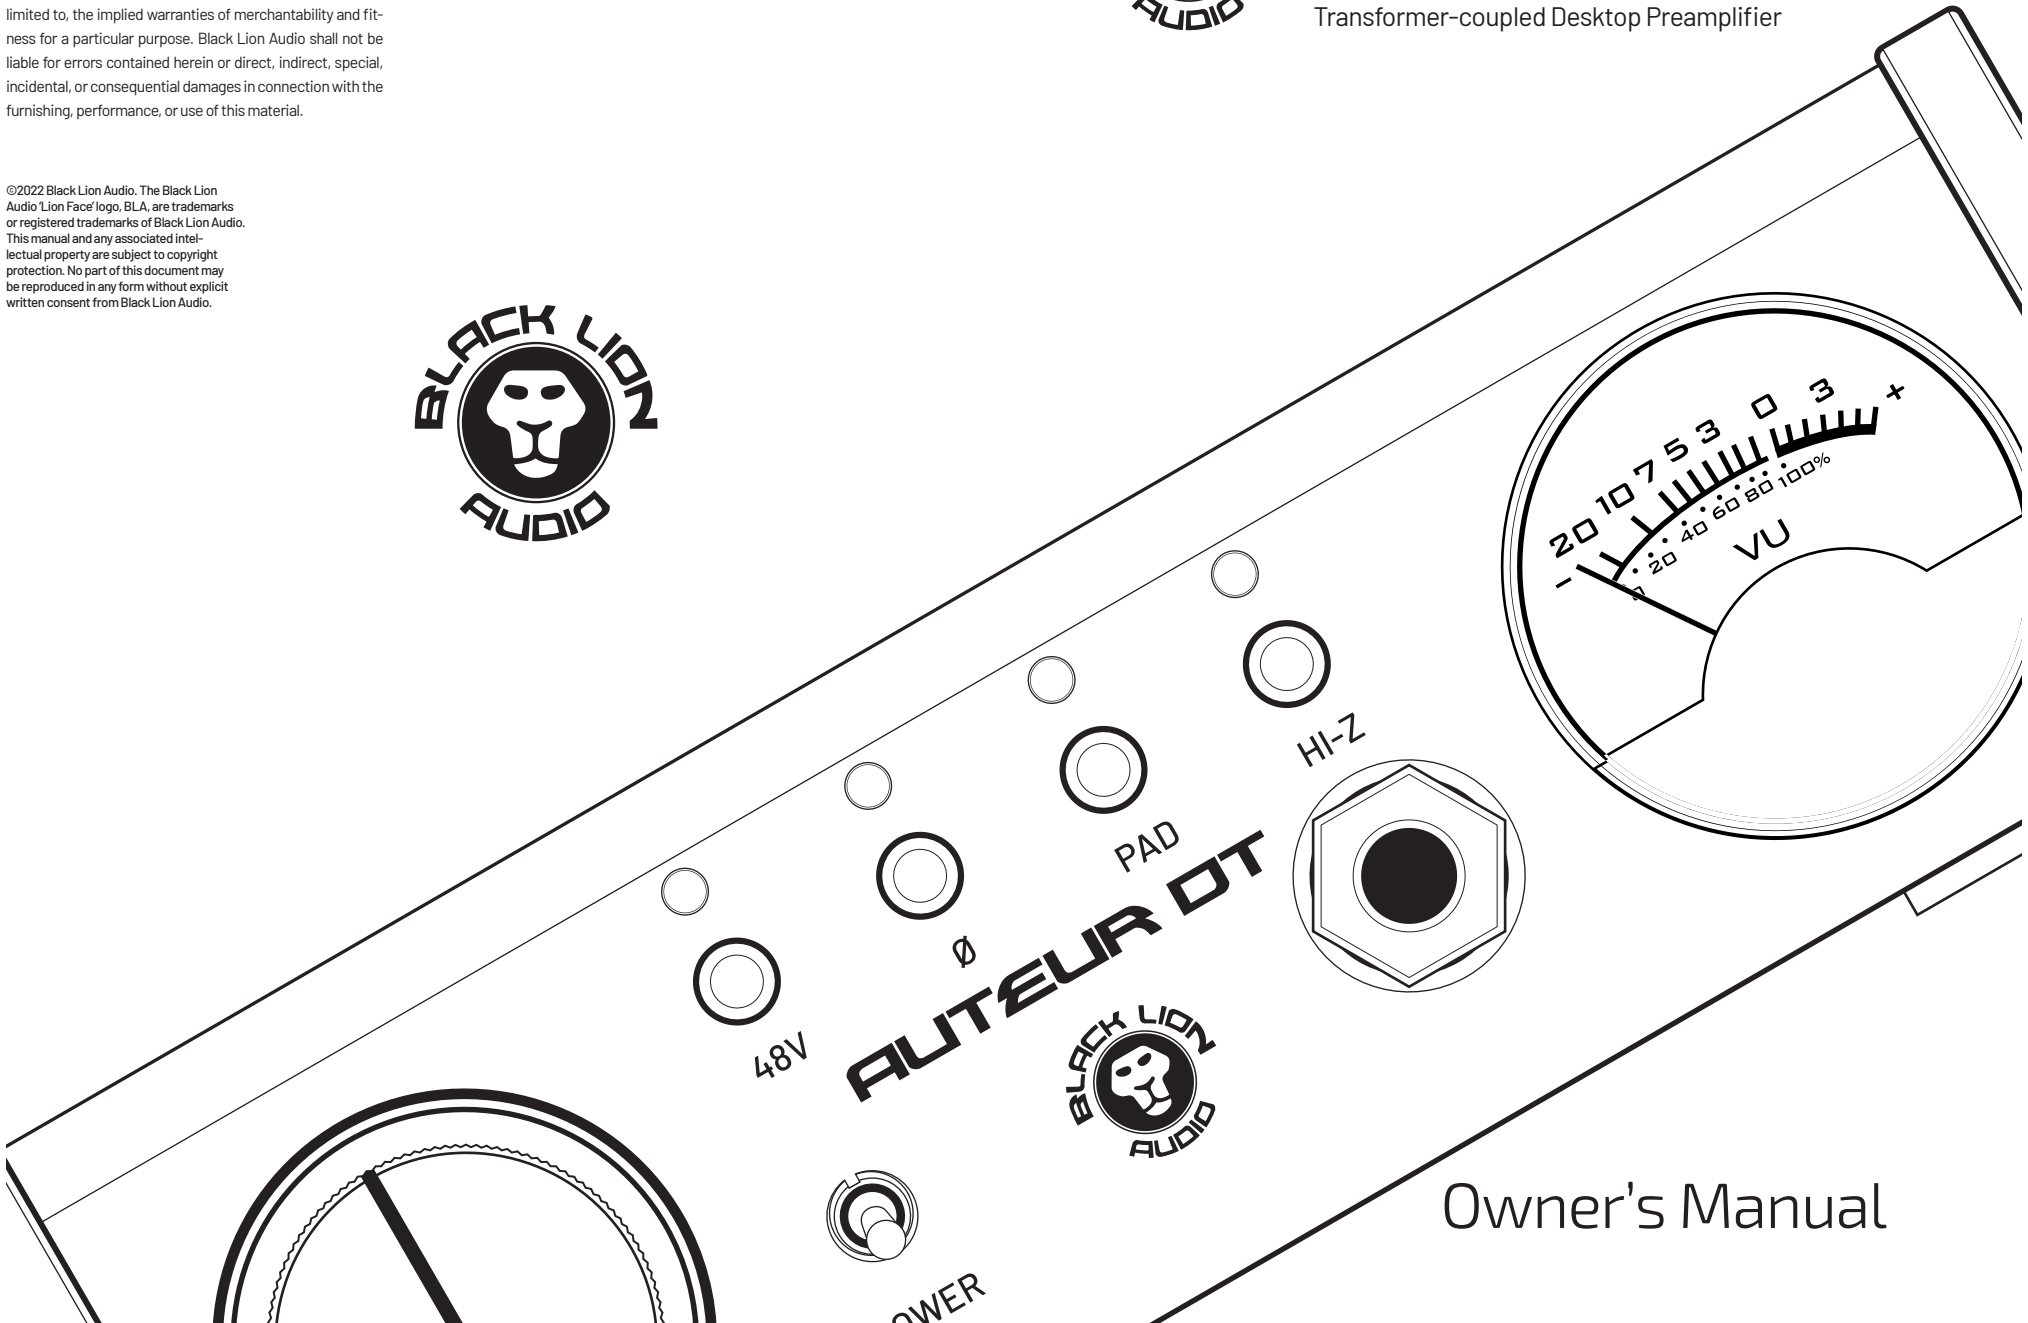

Owner's Manual

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. If the power cord becomes frayed, stop using immediately.
11. Use only attachments/accessories specified by the manufacturer
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This apparatus shall not be exposed to dripping or splashing, and no object filled with liquids, such as vases, shall be placed on the apparatus.
16. Note that this apparatus is not completely disconnected from the AC mains service when the power switch is in the OFF position.
17. The mains plug or power inlet on the product is used as the disconnect device, so the disconnected device shall remain readily operable when reconnected.
18. Any changes or modifications not expressly approved in this manual could void your authority to operate this apparatus.

IMPORTANT!

Be sure to use a three prong AC cable that properly fits the power source. Please use the correct fuse designated on the rear panel before plugging in the power cord. Improper selection can result in damage to the unit that will not be covered under the warranty.



The lightning flash with an arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The Black Lion Audio Auteur DT complies with all applicable / RoHS/ WEEE European Union directives.

Do not attempt to service this unit yourself, as it will void your warranty. Please check your unit carefully upon receipt and return to place of purchase immediately if there are any problems with the product. After that, the standard Black Lion Audio 3 YEAR warranty will apply to defects in materials and workmanship.

INTERNATIONAL

For service or warranty assistance, please contact the Black Lion Audio distributor in your country through the dealer from whom you purchased this product.

LIMITED 3-YEAR WARRANTY

Black Lion Audio's Auteur DT is warranted by Black Lion Audio to be free from defects in materials and workmanship for the period of THREE (3) YEARS to the original purchaser. In the event of such defects, the product will be repaired without charge or, at our option, replaced with a new one if delivered to Black Lion Audio prepaid, together with a copy of the sales slip or other proof of purchase date. The warranty excludes problems due to normal wear, abuse, shipping damage or failure to use the product in accordance with the specifications.


All parts and labor are covered under this Limited Warranty. However, if it is determined by Black Lion Audio that the device was damaged or made defective through abuse, we reserve the right to charge the customer for the cost of the repair.

Black Lion Audio shall not be liable for damages based upon inconvenience, loss of use of the product, loss of time, interrupted operation or commercial loss or any other damages, whether incidental, consequential or otherwise. This warranty gives you specific legal rights, and you may have other rights, which will vary from state to state.

This warranty is not transferable.

HOOKUP AND QUICK START

1. On your sound system, mute your studio monitors.
2. Connect AC power to the Auteur DT and set **power switch** to OFF.
3. Connect your input source(s) via balanced XLR or TRS cable(s). Microphone-level sources connect to the back panel **XLR input**, while instrument-level and line-level sources utilize the front panel **TRS input**.
4. Connect your Auteur DT's **Output** to your patch bay, audio interface, or subsequent signal processor using the appropriate TRS cable.
5. Set all controls to the fully counter-clockwise position, and all push-buttons deselected or to the off position.
6. Set Auteur DT's **Power switch** to ON.
7. Engage the pushbutton options according to the requirements of the input source (**HI-Z** for instruments or **48V** for condenser mics).
8. Unmute studio monitors.
9. Turn **Gain Knob** clockwise until the desired signal amplitude is achieved.

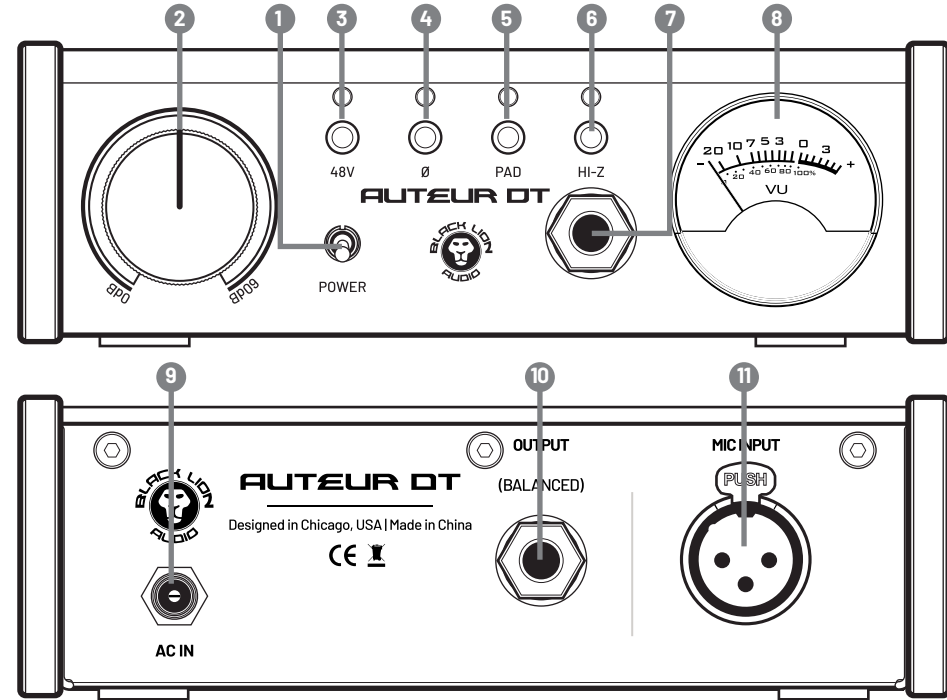

1. **Power:** Flip switch up to turn preamp on, flip switch down to turn preamp off.
2. **Gain:** Clockwise rotation yields an increase in output signal amplitude, counterclockwise rotation yields a decrease in output signal amplitude.
3. **48V:** Engage to turn phantom power on, disengage to turn phantom power off.
4. **Phase Inverse (Ø):** Engage to adjust input signal polarity by 180°, disengage to leave input signal polarity unchanged.
5. **Pad:** Engage to reduce input signal amplitude by 10dB, disengage to leave input signal amplitude unchanged.
6. **Hi-Z:** Engages the Hi-Z Instrument Input for DI use.
7. **Hi-Z Instrument Input:** Unbalanced, instrument level TS input for instrument connection.
8. **VU Meter:** Analog VU displays the output level of the Auteur DT.
9. **AC IN:** 24VAC input jack (only use a BLA-specified power supply).
10. **TRS OUT:** Balanced, line-level TRS output.
11. **XLR Microphone Input:** Balanced mic-level input.

SPECIFICATIONS

Preamp Type	Solid State
Number of Channels	1
Phantom Power	Yes
Pad	-10 dB
Analog Inputs	XLR / 1/4" TRS
Analog Outputs	1/4" TRS
Frequency Response	10 Hz-30 kHz bandwidth
Power Source	24 V AC power supply, minimum 300 mA 2.5 mm center pin
Dimensions	Width - 157 mm / 6.1875" Height - 49.2 mm / 1.9375" Depth - 171 mm / 6.75"
Weight	2.3 lbs.