

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| | |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EN | The DMX Delay channel is only activated in DMX modes when menu item DMX Delay is set to by DMX? Yes . |
| DE | Der Kanal DMX Delay ist in den DMX-Modi nur aktiviert, wenn im Menüpunkt DMX Delay unter by DMX? Yes eingestellt ist. |
| FR | Le décalage DMX de canal n'est activé dans le mode DMX que lorsque l'option DMX Delay est réglée sur Yes sous by DMX ? . |
| ES | El canal DMX Delay solo está activado en los modos DMX si en la opción de menú DMX Delay , en by DMX? , está ajustada la opción Yes . |
| PL | Kanał DMX Delay jest aktywowany w trybach DMX tylko wtedy, gdy w pozycji menu DMX Delay w opcji by DMX? zostanie ustawiona wartość Yes . |
| IT | Il canale DMX Delay è attivo in modalità DMX solo se nella voce di menu DMX Delay l'opzione by DMX? è impostata su Yes . |

| ROOT PAR 4 | | 3-Channel Mode | | | | |
|------------|---------------------------------------------------------------------|----------------|--------------------------------------------------|-----|--------------------|--------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Color Presets & Color Jumping & Color Fading & User Colors | 000 | - | 005 | Color off | Color Preset |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Color Jumping stop | |
| 128 | - | 164 | Color Jumping speed slow -> fast / Color 1 -> 12 | | | |
| 165 | - | 201 | Color Fading speed slow -> fast / Color 1 -> 12 | | | |
| 202 | - | 207 | User Color_1 | | | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | no function | | | |
| 3 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 4 | | 5-Channel Mode 1 | | | | |
|------------|------------------------------------------------------------|------------------|--------------|-----|---------------------------------------------------------|-------------------------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional Strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 022 | Ramp up/down, slow -> fast | |
| | | 023 | - | 033 | Ramp up/down random, slow->fast | |
| | | 034 | - | 045 | Ramp up, slow -> fast | |
| | | 046 | - | 056 | Ramp up random, slow -> fast | |
| | | 057 | - | 068 | Ramp down, slow -> fast | |
| | | 069 | - | 079 | Ramp down random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break effect, 5s.....1s (short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| | | 251 | - | 255 | Strobe open | |
| 3 | Color Presets & Color Jumping & Color Fading & User Colors | 000 | - | 005 | Color off | Color Preset |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Color Jumping stop | |
| | | 128 | - | 164 | Color Jumping speed slow -> fast / Color 1 -> 12 | |
| | | 165 | - | 201 | Color Fading speed slow -> fast / Color 1 -> 12 | |
| | | 202 | - | 207 | User Color_1 | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | no function | | | |
| 4 | Sound (triggers Strobe, Color Jumping & Fading) | 000 | - | 005 | Sound Control off | Sound |
| | | 006 | - | 255 | Sound Control on, mic sensitivity low -> high | |
| 5 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 4 | | 5-Channel Mode 2 | | | | |
|------------|-----------|------------------|---|-----|--------------|------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Red | 000 | - | 255 | 0% to 100% | Red |
| 2 | Green | 000 | - | 255 | 0% to 100% | Green |
| 3 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 4 | White | 000 | - | 255 | 0% to 100% | White |
| 5 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

| ROOT PAR 4 | | 6-Channel Mode | | | | |
|------------|------------------------|----------------|--------------|-----|---------------------------------|-----------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe | 000 | - | 005 | Strobe open | Strobe |
| | | 006 | - | 255 | Strobe slow -> fast <1Hz - 20Hz | |
| 3 | Chase of Ch 4 and Ch 5 | 000 | - | 005 | No Chase, Color Preset 1 is on | Chase |
| | | 006 | - | 026 | Jump 10,0s -> 4,0s | |
| | | 027 | - | 127 | Jump 4,0s -> 0,1s | |
| | | 128 | - | 148 | Fade 10,0s -> 4,0s | |
| | | 149 | - | 255 | Fade 4,0s -> 0,1s | |
| 4 | Color Presets 1 | 000 | - | 005 | Color off | Color Preset 1 |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 201 | no function | |
| 202 | - | 207 | User Color_1 | | | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | no function | | | |
| 5 | Color Presets 2 | 000 | - | 255 | same as Color Presets 1 | Color Preset 2 |
| 6 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 4 | | 7-Channel Mode | | | | |
|------------|-----------|----------------|---|-----|---------------------------------|------------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe | 000 | - | 005 | Strobe open | |
| | | 006 | - | 255 | Strobe slow -> fast <1Hz - 20Hz | |
| 3 | Red | 000 | - | 255 | 0% to 100% | Red |
| 4 | Green | 000 | - | 255 | 0% to 100% | Green |
| 5 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 6 | White | 000 | - | 255 | 0% to 100% | White |
| 7 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

| ROOT PAR 4 | | 10-Channel Mode | | | | |
|------------|------------------|-----------------|---|-----|---------------------------------------------------------|-------------------------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Dimmer fine | 000 | - | 255 | 0% to 100% | |
| 3 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional Strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 022 | Ramp up/down, slow -> fast | |
| | | 023 | - | 033 | Ramp up/down random, slow->fast | |
| | | 034 | - | 045 | Ramp up, slow -> fast | |
| | | 046 | - | 056 | Ramp up random, slow -> fast | |
| | | 057 | - | 068 | Ramp down, slow -> fast | |
| | | 069 | - | 079 | Ramp down random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break effect, 5s.....1s (short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| | | 251 | - | 255 | Strobe open | |
| 4 | Red | 000 | - | 255 | 0% to 100% | Red |
| 5 | Green | 000 | - | 255 | 0% to 100% | Green |
| 6 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 7 | White | 000 | - | 255 | 0% to 100% | White |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS

DMX CONTROL TABLE



| | | | | | | |
|-----|----------------------------------------------------------------------------------------|-----|-------------------------------------------------|-----|--------------------------------------------------|---------------------|
| 8 | Color Presets & Color Jumping & Color Fading & User Colors (override RGBW) | 000 | - | 005 | Color off | Color Preset |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Color Jumping Stop | |
| | | 128 | - | 164 | Color Jumping Speed slow -> fast / Color 1 -> 12 | |
| 165 | - | 201 | Color Fading Speed slow -> fast / Color 1 -> 12 | | | |
| 202 | - | 207 | User Color_1 | | | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | no function | | | |
| 9 | Sound (triggers Strobe, Color Jumping & Fading) | 000 | - | 005 | Sound Control off | Sound |
| | | 006 | - | 255 | Sound Control on, mic sensitivity low -> high | |
| 10 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 6 | | 3-Channel Mode | | | | |
|------------|---------------------------------------------------------------------|----------------|-------------------------------------------------|-----|--------------------------------------------------|------------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Color Presets & Color Jumping & Color Fading & User Colors | 000 | - | 005 | Color off | |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Color Jumping stop | |
| | | 128 | - | 164 | Color Jumping speed slow -> fast / Color 1 -> 12 | |
| 165 | - | 201 | Color Fading speed slow -> fast / Color 1 -> 12 | | | |
| 202 | - | 207 | User Color_1 | | | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | UV | | | |
| 3 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 6 | | 5-Channel Mode 1 | | | | |
|------------|------------------------------------------------------------|------------------|--------------|-----|---------------------------------------------------------|------------------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional Strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 022 | Ramp up/down, slow -> fast | |
| | | 023 | - | 033 | Ramp up/down random, slow->fast | |
| | | 034 | - | 045 | Ramp up, slow -> fast | |
| | | 046 | - | 056 | Ramp up random, slow -> fast | |
| | | 057 | - | 068 | Ramp down, slow -> fast | |
| | | 069 | - | 079 | Ramp down random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break effect, 5s.....1s (short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| | | 251 | - | 255 | Strobe open | |
| 3 | Color Presets & Color Jumping & Color Fading & User Colors | 000 | - | 005 | Color off | Color Preset |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Color Jumping Stop | |
| | | 128 | - | 164 | Color Jumping Speed slow -> fast / Color 1 -> 12 | |
| | | 165 | - | 201 | Color Fading Speed slow -> fast / Color 1 -> 12 | |
| | | 202 | - | 207 | User Color_1 | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | UV | | | |
| 4 | Sound (triggers Strobe, Color Jumping & Fading) | 000 | - | 005 | Sound Control off | Sound |
| | | 006 | - | 255 | Sound Control on, mic sensitivity low -> high | |
| 5 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 6 | | 5-Channel Mode 2 (compatibility mode for ROOT PAR 4) | | | | |
|------------|-----------|------------------------------------------------------|---|-----|--------------|------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Red | 000 | - | 255 | 0% to 100% | Red |
| 2 | Green | 000 | - | 255 | 0% to 100% | Green |
| 3 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 4 | White | 000 | - | 255 | 0% to 100% | White |
| 5 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

| ROOT PAR 6 | | 6-Channel Mode | | | | |
|------------|--------------------------------------------------------------|----------------|--------------|-----|---------------------------------|-----------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe | 000 | - | 005 | Strobe open | Strobe |
| | | 006 | - | 255 | Strobe slow -> fast <1Hz - 20Hz | |
| 3 | Chase of Ch 4 and Ch 5 | 000 | - | 005 | No Chase, Color Preset 1 is on | Chase |
| | | 006 | - | 026 | Jump 10,0s -> 4,0s | |
| | | 027 | - | 127 | Jump 4,0s -> 0,1s | |
| | | 128 | - | 148 | Fade 10,0s -> 4,0s | |
| | | 149 | - | 255 | Fade 4,0s -> 0,1s | |
| 4 | Color Presets 1 & Color Jumping & Color Fading & User Colors | 000 | - | 005 | Color off | Color Preset 1 |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 201 | no function | |
| 202 | - | 207 | User Color_1 | | | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | UV | | | |
| 5 | Color Presets 2 | 000 | - | 255 | same as Color Presets 1 | Color Preset 2 |
| 6 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| ROOT PAR 6 | | 7-Channel Mode | | | | |
|------------|-----------|----------------|---|-----|--------------|------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Red | 000 | - | 255 | 0% to 100% | Red |
| 2 | Green | 000 | - | 255 | 0% to 100% | Green |
| 3 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 4 | White | 000 | - | 255 | 0% to 100% | White |
| 5 | Amber | 000 | - | 255 | 0% to 100% | Amber |
| 6 | UV | 000 | - | 255 | 0% to 100% | UV |
| 7 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

| ROOT PAR 6 | | 9-Channel Mode | | | | |
|------------|-----------|----------------|---|-----|---------------------------------|------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe | 000 | - | 005 | Strobe open | Strobe |
| | | 006 | - | 255 | Strobe slow -> fast <1Hz - 20Hz | |
| 3 | Red | 000 | - | 255 | 0% to 100% | Red |
| 4 | Green | 000 | - | 255 | 0% to 100% | Green |
| 5 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 6 | White | 000 | - | 255 | 0% to 100% | White |
| 7 | Amber | 000 | - | 255 | 0% to 100% | Amber |
| 8 | UV | 000 | - | 255 | 0% to 100% | UV |
| 9 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |

| ROOT PAR 6 | | 12-Channel Mode | | | | |
|------------|------------------|-----------------|-------------|-----|---------------------------------------------------------|-------------------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Dimmer fine | 000 | - | 255 | 0% to 100% | |
| 3 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional Strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 022 | Ramp up/down, slow -> fast | |
| | | 023 | - | 033 | Ramp up/down random, slow->fast | |
| | | 034 | - | 045 | Ramp up, slow -> fast | |
| | | 046 | - | 056 | Ramp up random, slow -> fast | |
| | | 057 | - | 068 | Ramp down, slow -> fast | |
| | | 069 | - | 079 | Ramp down random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break effect, 5s.....1s (short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| 251 | - | 255 | Strobe open | | | |

ROOT PAR 4

7 X 4 W RGBW PAR SPOTLIGHTS
DMX CONTROL TABLE



| | | | | | | |
|-----|--------------------------------------------------------------------------------------------|-----|--------------------------------------------------|-----|-----------------------------------------------|---------------------|
| 4 | Red | 000 | - | 255 | 0% to 100% | Red |
| 5 | Green | 000 | - | 255 | 0% to 100% | Green |
| 6 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 7 | White | 000 | - | 255 | 0% to 100% | White |
| 8 | Amber | 000 | - | 255 | 0% to 100% | Amber |
| 9 | UV | 000 | - | 255 | 0% to 100% | UV |
| 10 | Color Presets & Color Jumping & Color Fading & User Colors (override RGBWA+UV) | 000 | - | 005 | Color off | Color Preset |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Color Jumping stop | |
| 128 | - | 164 | Color Jumping speed slow -> fast / Color 1 -> 12 | | | |
| 165 | - | 201 | Color Fading speed slow -> fast / Color 1 -> 12 | | | |
| 202 | - | 207 | User Color_1 | | | |
| 208 | - | 213 | User Color_2 | | | |
| 214 | - | 219 | User Color_3 | | | |
| 220 | - | 225 | User Color_4 | | | |
| 226 | - | 255 | no function | | | |
| 11 | Sound (triggers Strobe, Color Jumping & Fading) | 000 | - | 005 | Sound Control off | Sound |
| | | 006 | - | 255 | Sound Control on, mic sensitivity low -> high | |
| 12 | DMX Delay | 000 | - | 005 | No Delay | DMX Delay |
| | | 006 | - | 255 | 0,1s -> 2,0s | |