

Product Instruction



SM-3000-MKII 3000W Smoke Machine



Thanks for using the 3000W Smoke machine.

Please read over this manual before operation the light

Information:

Heat-up Time: 10 minutes

DMX512, Digital Circuitry Control and Remote Control

Tank capacity: 5.5 L

Spraying Distance: 10 m

Weight: 25 KG

Output: 40000cu.ff/min

Voltage: AC110V, 220-250V 50/60HZ

Powder: 3000 W

Size: 76*41*38 cm

Attention:

Please obey all notices about operation

Safe and repair to avoid getting an electric shock and keep the excellent effect

Keep clean

Use in door

The power must same as located

Put in the horizontal direction and don't incline and place upside down

Power off or pull out plug after use

No waterproof, if there are some humidity, water or smoke liquid in it, please switch off power and contact distributor as soon as possible

There are no spare parts with machine. If you need to repair it, please contact distributor or professional repair works

Avoid fire

Only for adults operate. Equip it over the touch of children and pay more attention during operation

Don't spray it to people directly and far away fire

The temperature of smoke is very high so that keep the space between machine and other material things more than 100cm

Put the machine at a drafty place and don't cover the cool holes to keep the best cool effect. Keep the space between the smoke machine and around things more than 20cm and between smoke machine and tinder more than 20cm. And without easily burnt things within 300cm

Avoid explode:

Don't add tinder liquid such as oil, gas, perfume and etc. in smoke machine
Pay more attention to all notices sign and operation instructions on all machines

Please use the high quality smoke liquid recommended by distributors. Bad quality smoke liquid may get blast or spray oil

Often check whether there has enough smoke liquid

Get out all smoke liquid before transport or post

Don't eat smoke liquid otherwise to see the doctor immediately. Use clean water to wash skin and eyes once smoke liquid touches them.

Remove package and check:

1. Open carton to check whether all necessary spare parts include accord the specification list.

Please contact distributor if there are something missed.

2. Check the appearance of machine and power line to see whether they have some obvious damage.

Please contact distributor once you find something and stop to use smoke machine.

Installation:

1. Take away all pack material especially the spray mouth.

2. Set in the horizontal direction and open the cover of liquid can.

3. Add high quality smoke liquid in the machine and screw the cover of liquid can. Bad quality Smoke liquid will damage smoke machine.

4. Plug the plug of remote console in the socket of the back of machine.

Operation:

1. Connect the power line to the power socket with earth line. Turn the switch at "On" and the machine heat. The red LED of line console will light once the machine finish heat.

2. Press red key, the machine will spray Smoke (Press it as long as you need).

3. The red LED of remote console light or not means the machine can spray smoke or heat itself.

4. Can set the machine at a high place (with hanger) or on the ground. Do not spray Smoke to people directly and the lean angle should less than 15.

5. Often check whether there has enough smoke liquid in machine. The operation will make big damage to the machine if there has no smoke liquid.
6. If the smoke is small, plum has noise or there has no smoke, please power off and check smoke liquid, fuse, the connector of remote console and power plug. If the problem could not be solved after check these parts, please stop check and send it back to distributor for repair.

Repair:

Please clean the Smoke machine timely to avoid the damage of spare parts and decrease the repair charge.

Don't make the smoke machine be dirty. Screw the cover of liquid can after add smoke liquid.

After about 40 hours continually use, please use 80% distilled water and 20% vinegar to clean the dirty in refractory pipe.

Disassemble the spray mouth and use vinegar to clean it to keep expedite before heat.

Reequip the spray mouth after cool and add smoke liquid for next use.

Others:

Clean timely to extend the lifespan of machine.

Use dry cloths to clean machine and keep dry while store.