

Rose[®] Quick Reference Guide

Preset Ladder

AUX
 Exp Pedal Buffer
 Mod/CV Relay
 MIDI Input Kill
 Kill-Dry

Preset

Press – Select Preset
 Hold – Save Preset
 Lit – Preset Loaded

Delay

Turn – Fine Delay
 Push and Turn – Coarse Delay



Comb Delay – Flip Phase
 Long Delays – Reverse Delay

Filter

Analog Low Pass Filter

Active LED

Red – Preset Active
 Green – Preset Modified

Mix

Analog Dry/Wet Mix

Feedback

Analog Feedback to the Delay Line
Warning: Due to Rose's analog signal path and multi-dimensional controls, feedback can go crazy

Depth

Modulation Intensity

Shape/Bank Ladder

Tap Tempo
 Inf Rep
 Mod Hld
 Mod Rst
 Alt A/B

Shape

Modulation Source


Rate

Modulation Speed



Delay Multiplier On/Off

Hotswitch LED

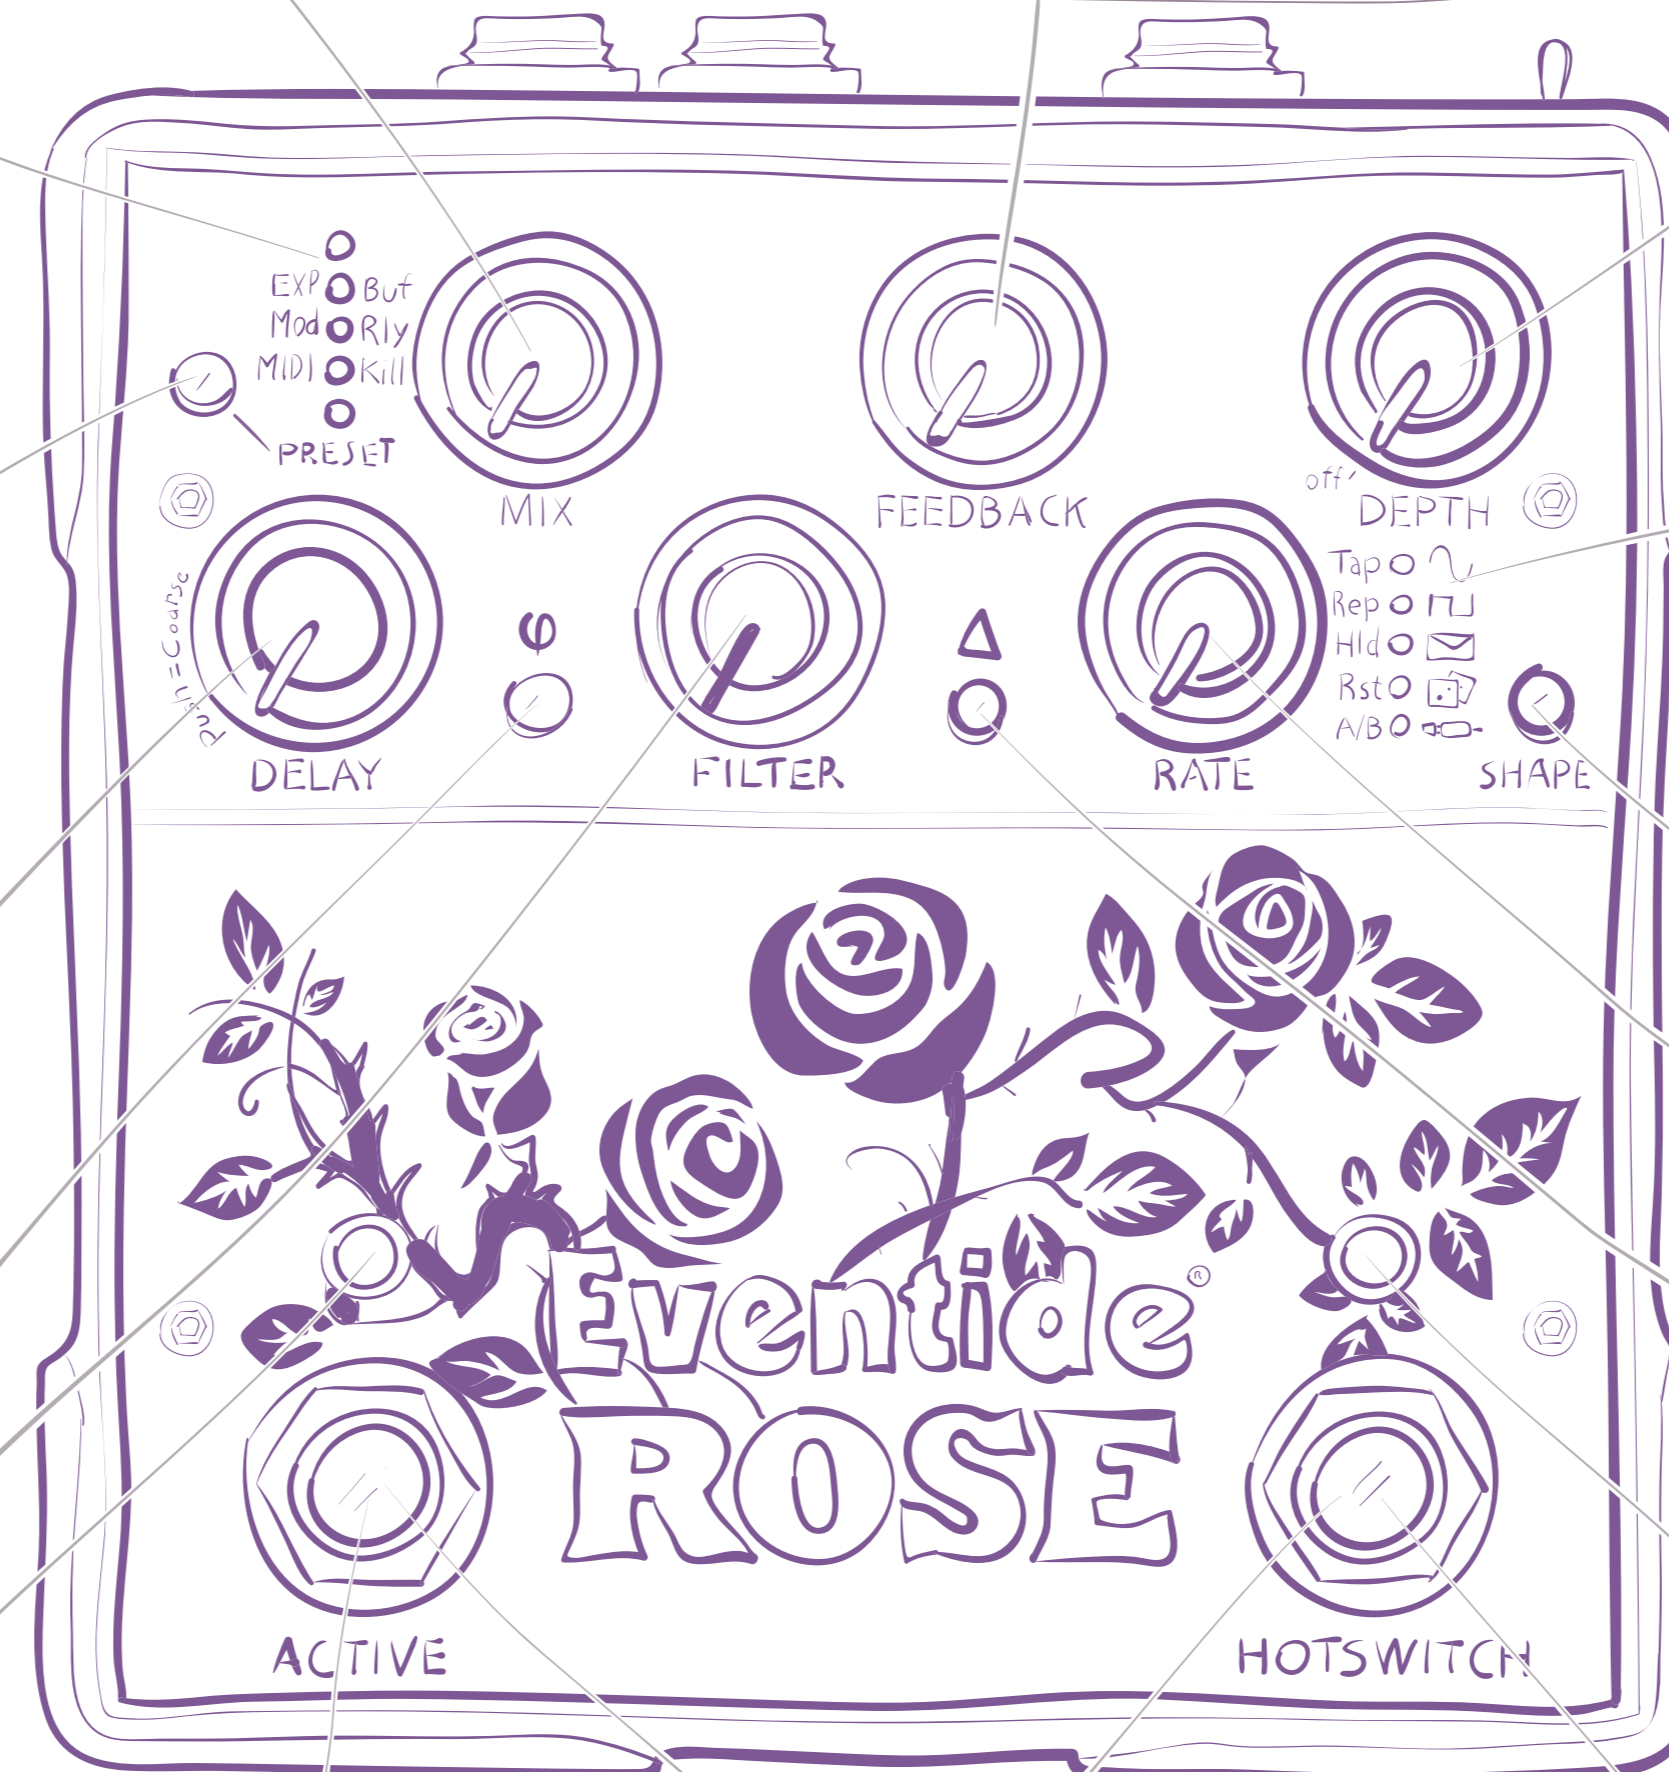

Active/Bypass
 Preset Load


Enter Preset Mode

Hotswitch
 Preset Select

Adjusting Delay


Rose is capable of very short delays for COMB and flanging effects and for extreme delays, up to 50 seconds, for looping and reverse effects.

Delay is divided into ten ranges. Press the Delay Knob to display the current Delay Range on the Preset LED Ladder:

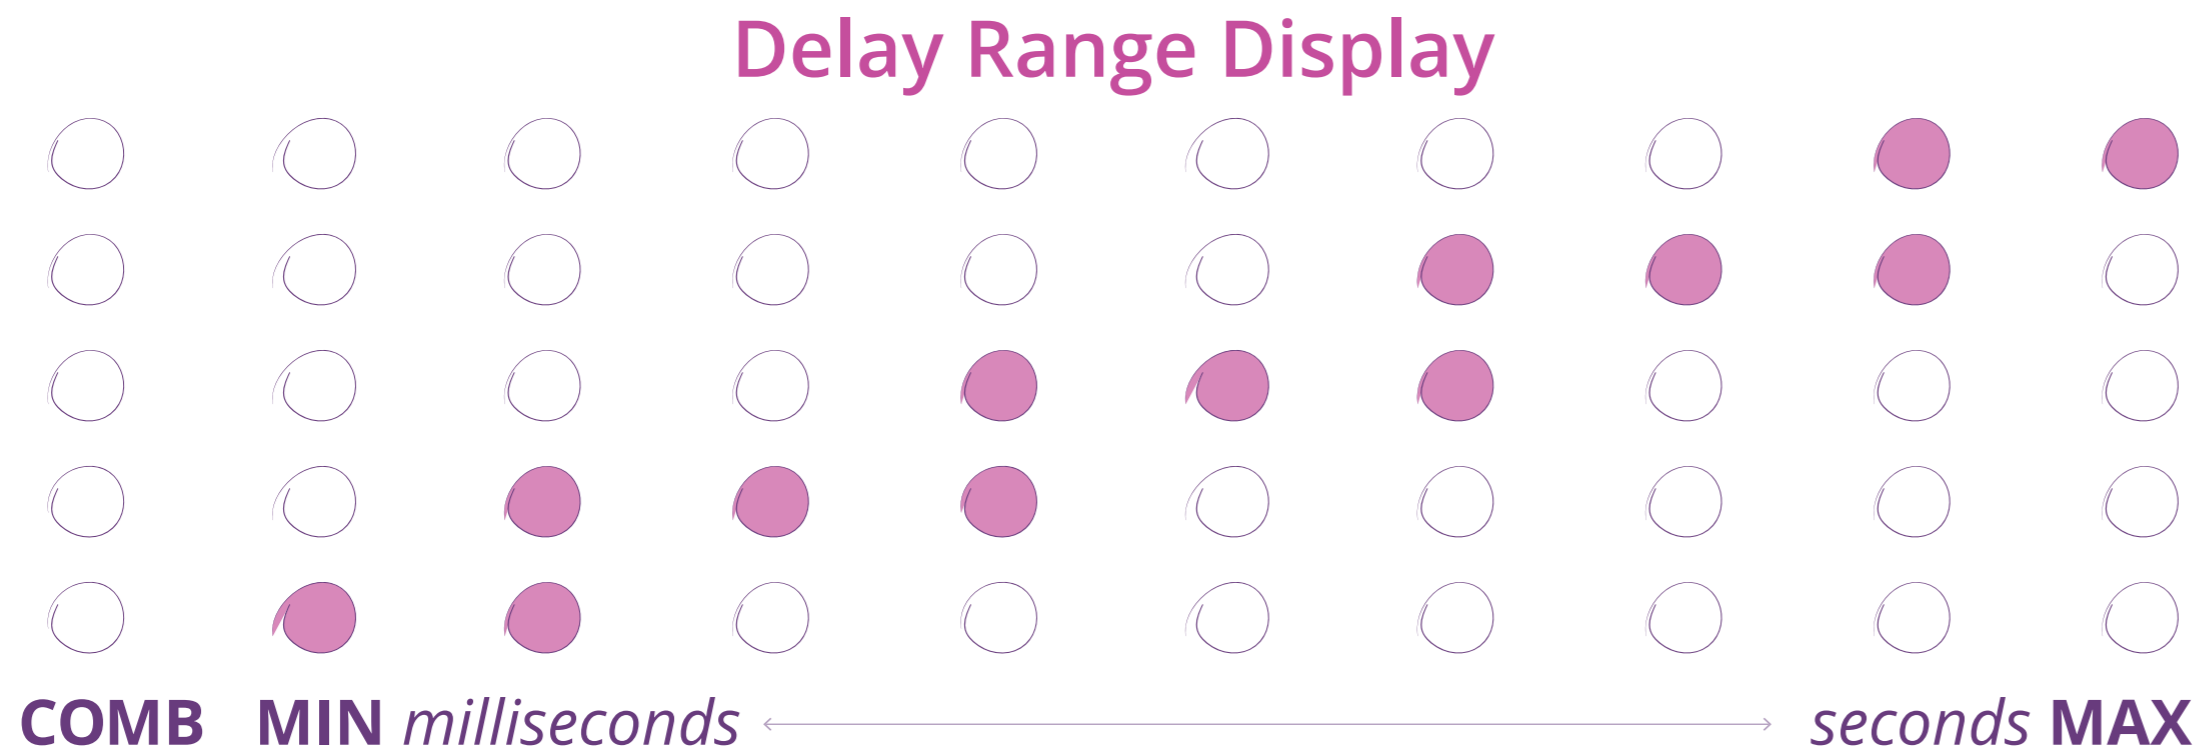


- Press and turn the Delay Knob to change the delay range
- Turn the Delay Knob (w/o pushing) to fine tune the delay within the selected Delay Range


Rear and Side Panels

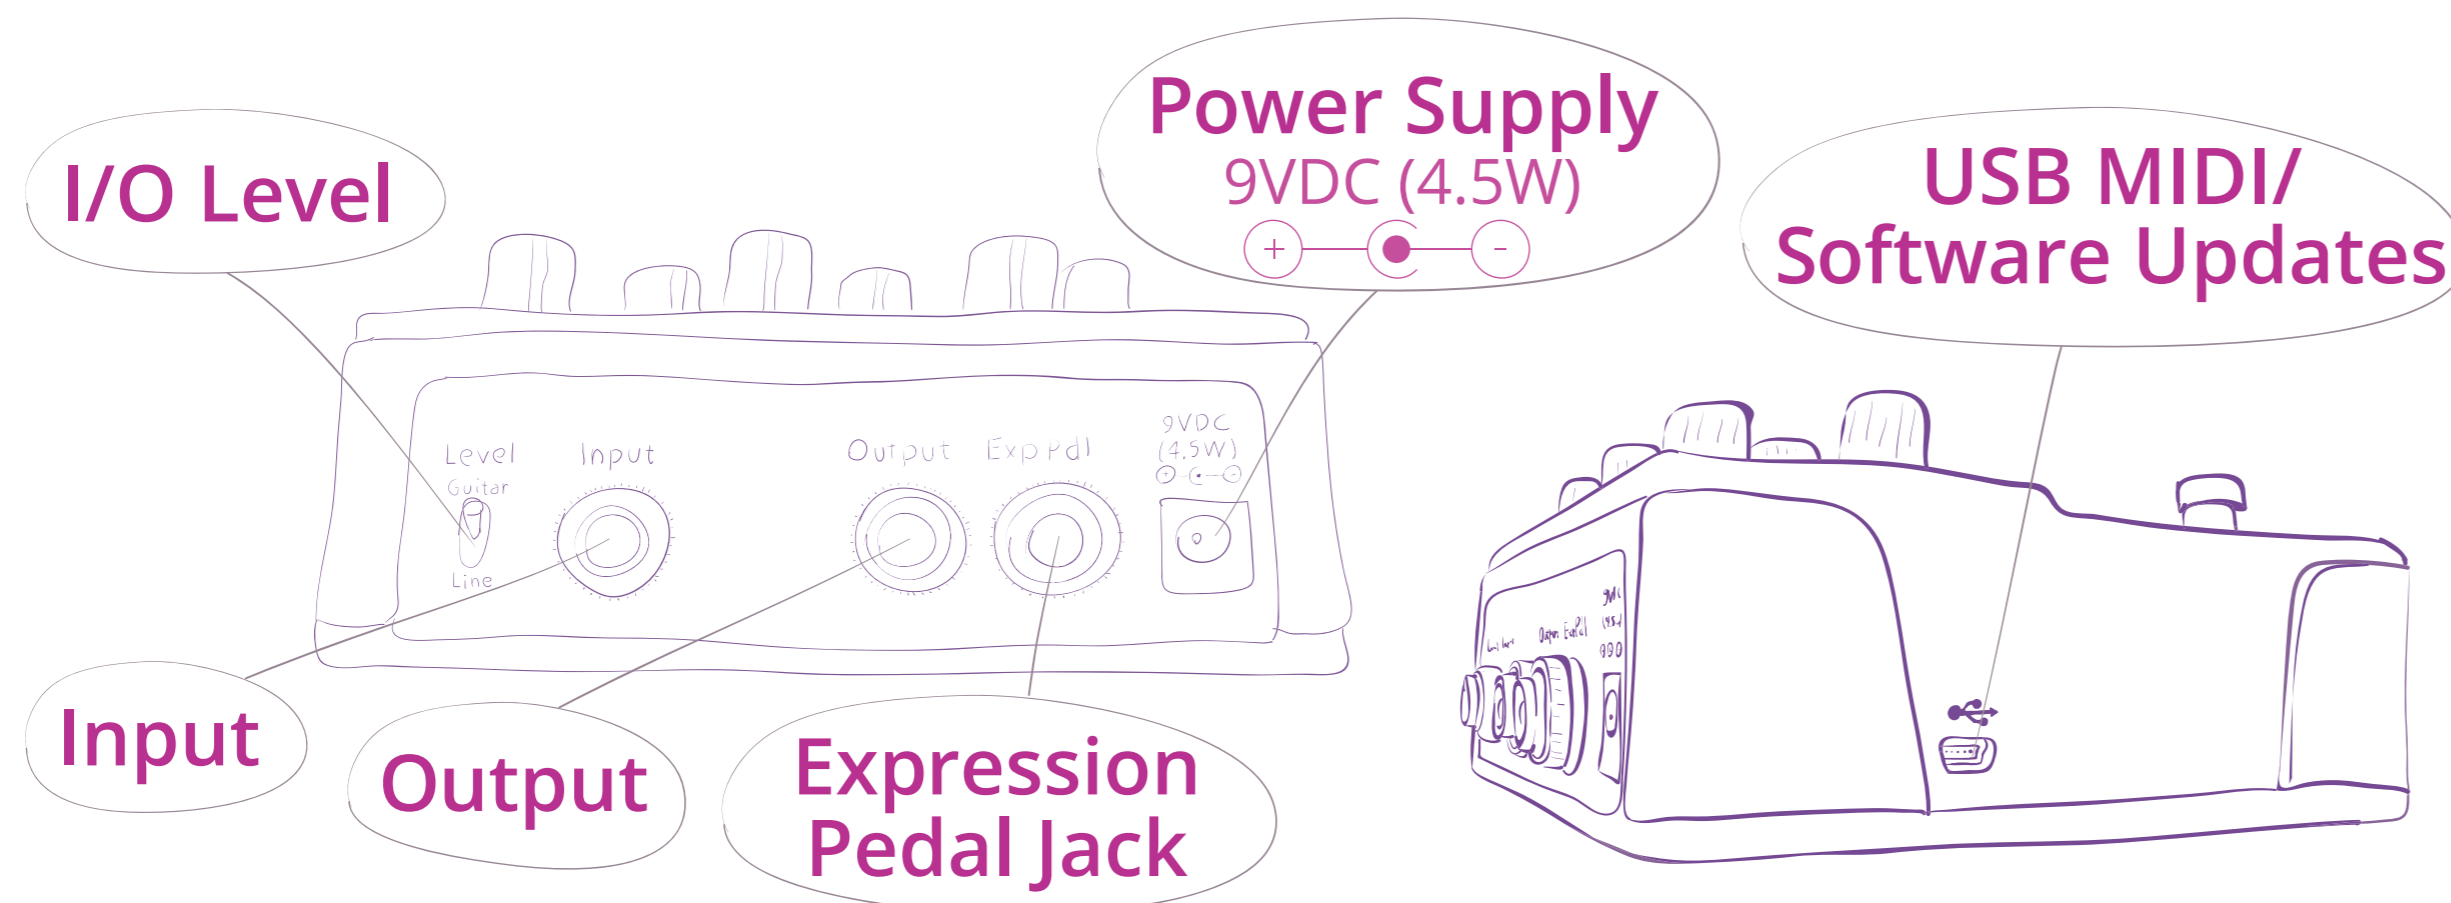

Δ Delay Multiplier

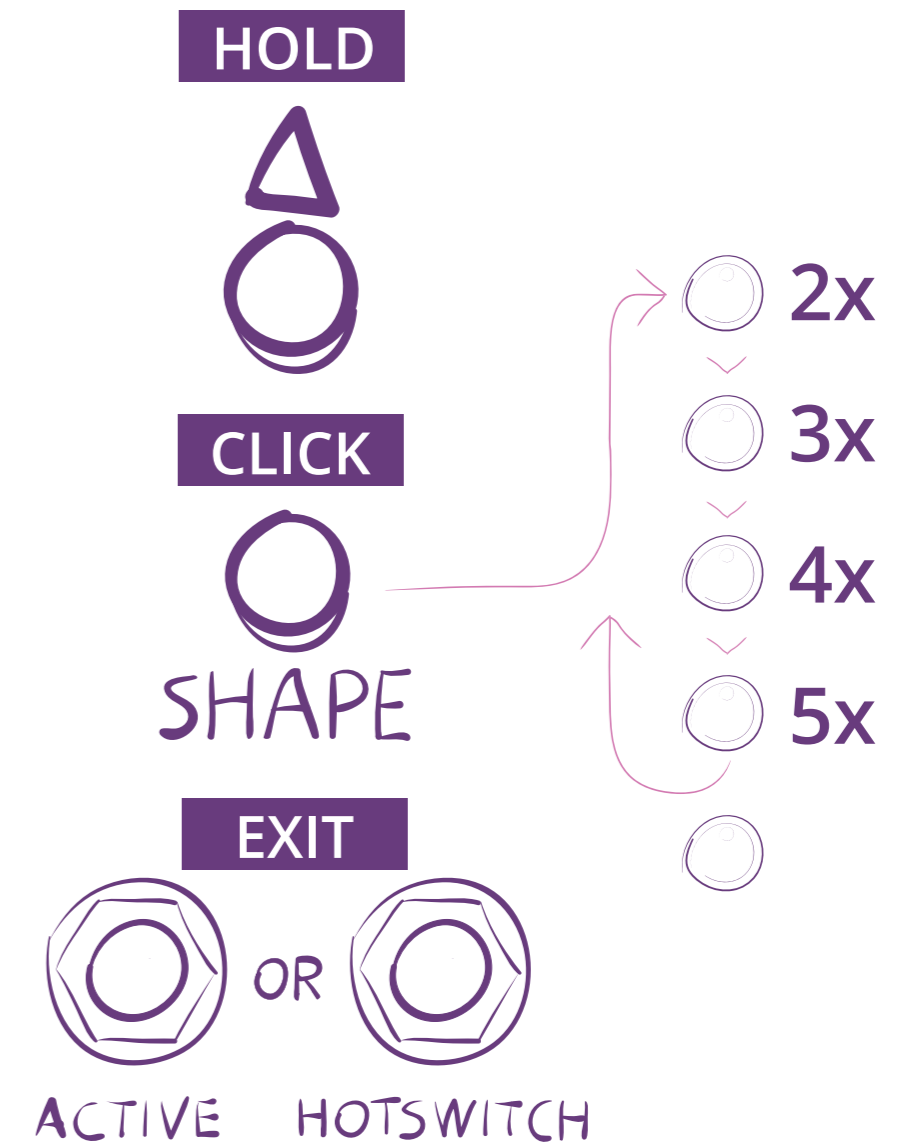

Set Tap Tempo Division

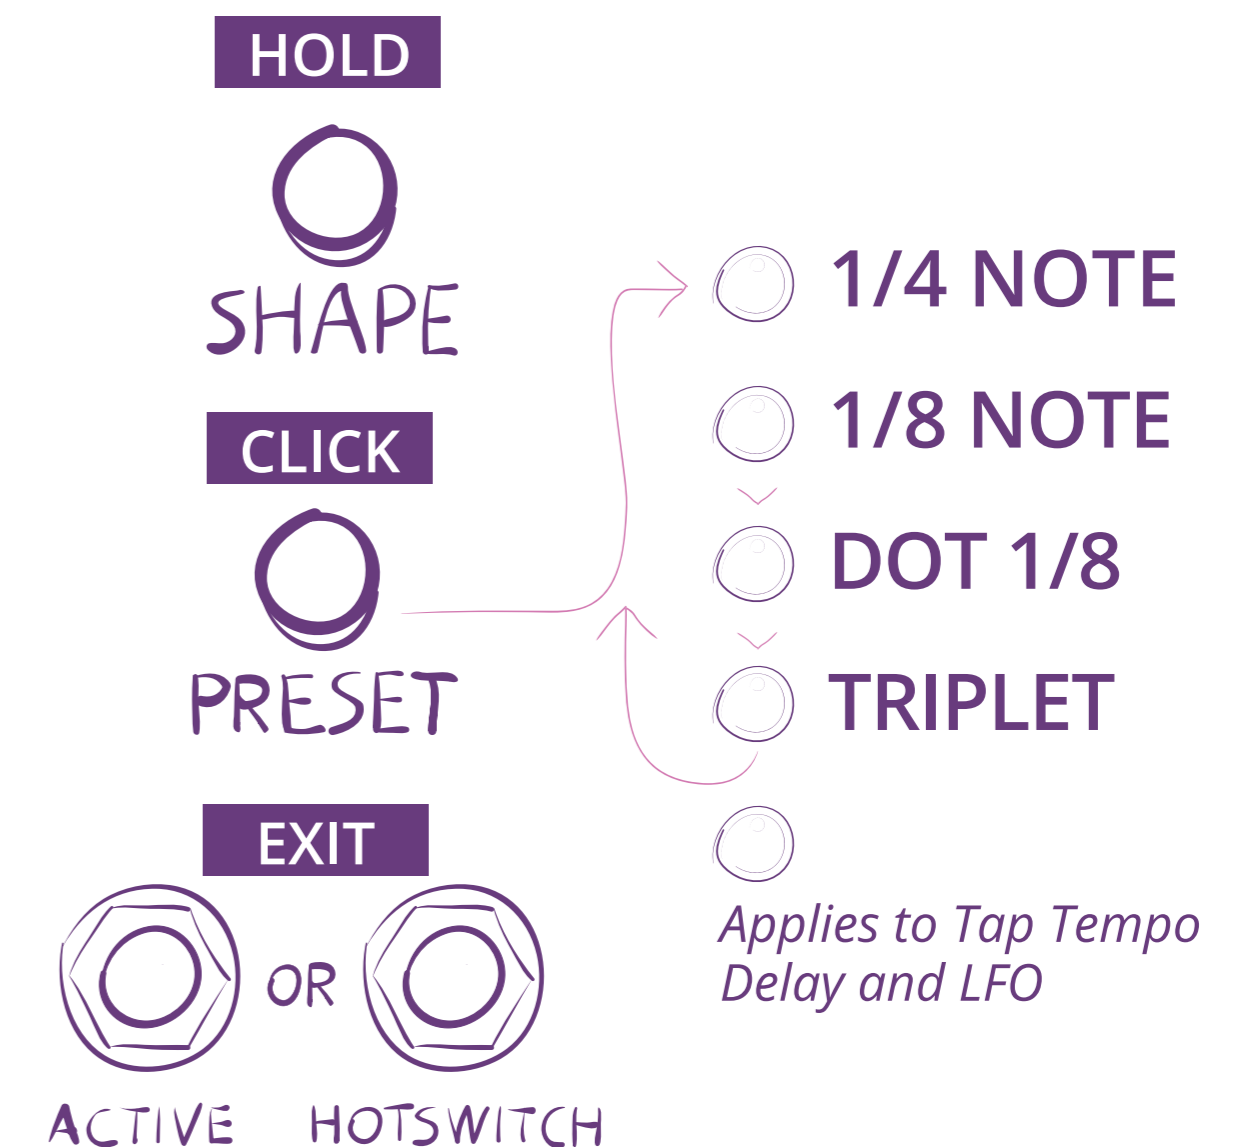

Using Alternate Settings: ALT A/B

Use the Hotswitch or Aux Switch (or MIDI CC#27) to toggle between A&B OR morph using an Expression Pedal.

Tip: When creating a new preset, you can copy all A settings to B by pressing and holding Ψ and Δ .

Tip: Hold down Ψ while turning knobs to adjust A & B settings simultaneously.

Programming Expression Pedal to Morph Between A/B

1. Confirm/Set Exp Pdl Jack to "EXP."
2. Move Expression Pedal to full heel-down position.
3. Move knobs, set Ψ , Δ , select Shape as desired.
4. Press and Hold $\Psi + \Delta$ to copy A to B.
5. Move Expression Pedal to full toe-down position.
6. Change one or more knobs, Ψ , Δ , and or Shape.

Programming HOTSWITCH to Toggle Between A/B


1. Confirm/Set HOTSWITCH Function to "ALT A/B."
2. Move knobs, set Ψ , Δ , select Shape as desired.
3. Press and Hold $\Psi + \Delta$ to copy A to B.
4. Press Hotswitch. LED lit.
5. Change one or more knobs, Ψ , Δ , and or Shape.

Expression Pedal Notes


1. Pedal is disabled when preset loads. Rock to enable.
2. Rock full heel to full toe to calibrate.

3. Ψ , Δ and Shape change from A to B settings at Pedal mid-point.
4. Ψ , Δ and ALT A/B are overridden by the Expression Pedal.

Set Bypass Mode

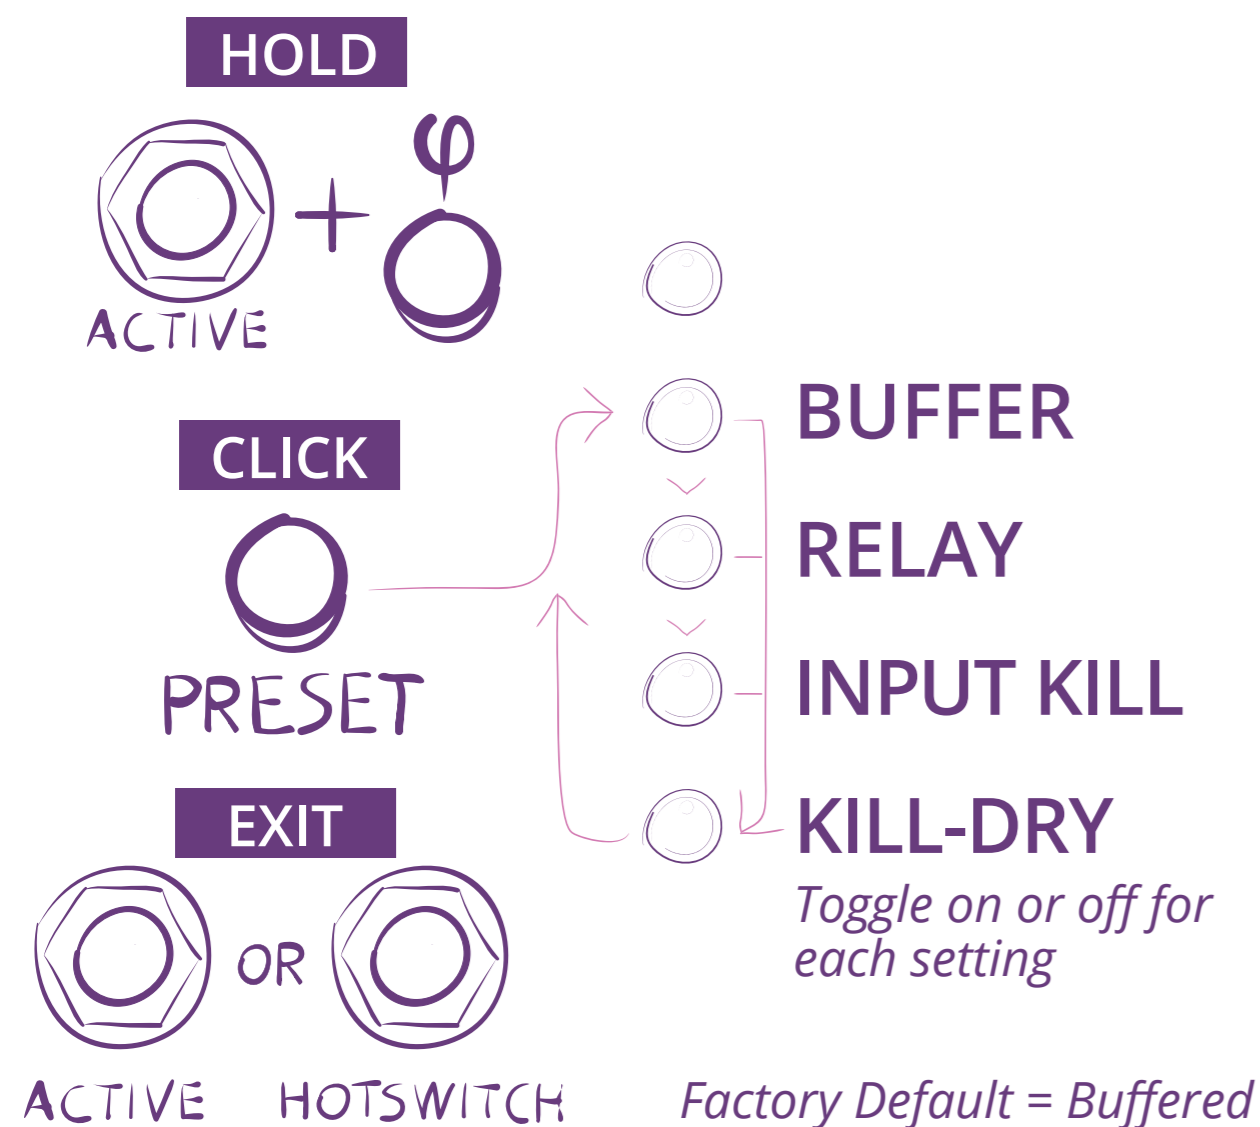

Set Exp Pdl Jack

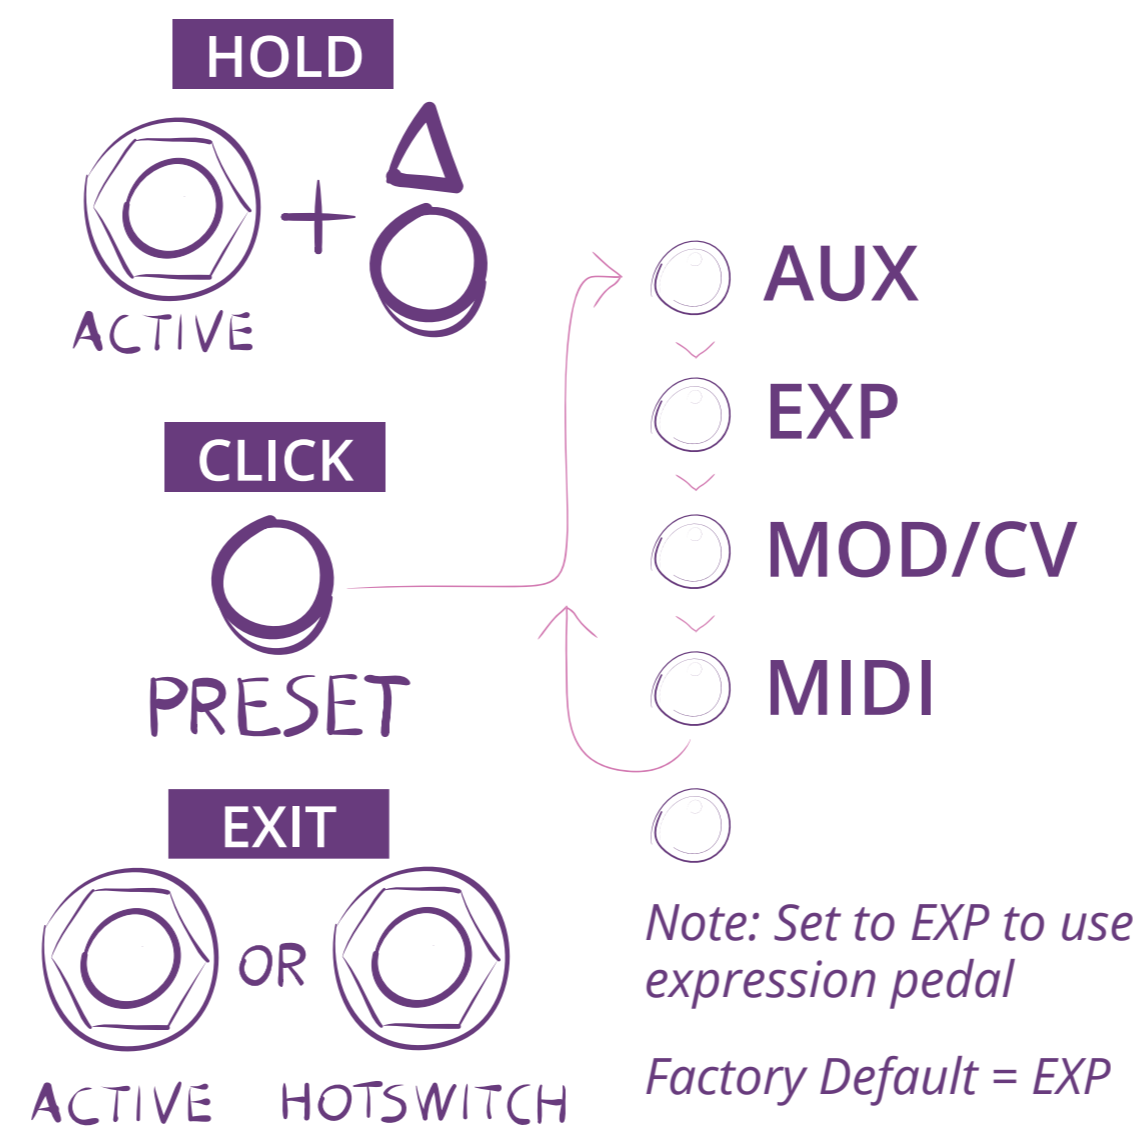

Expression Pedal

Recommended impedance: 5k - 25k ohm

Mod/CV - Control Voltage

Range = 0-3.3V


Input impedance = 10k ohm

MIDI Over TRS


Requires a TTL-MIDI adapter box

Set Tip to receive


Set HOTSWITCH Function

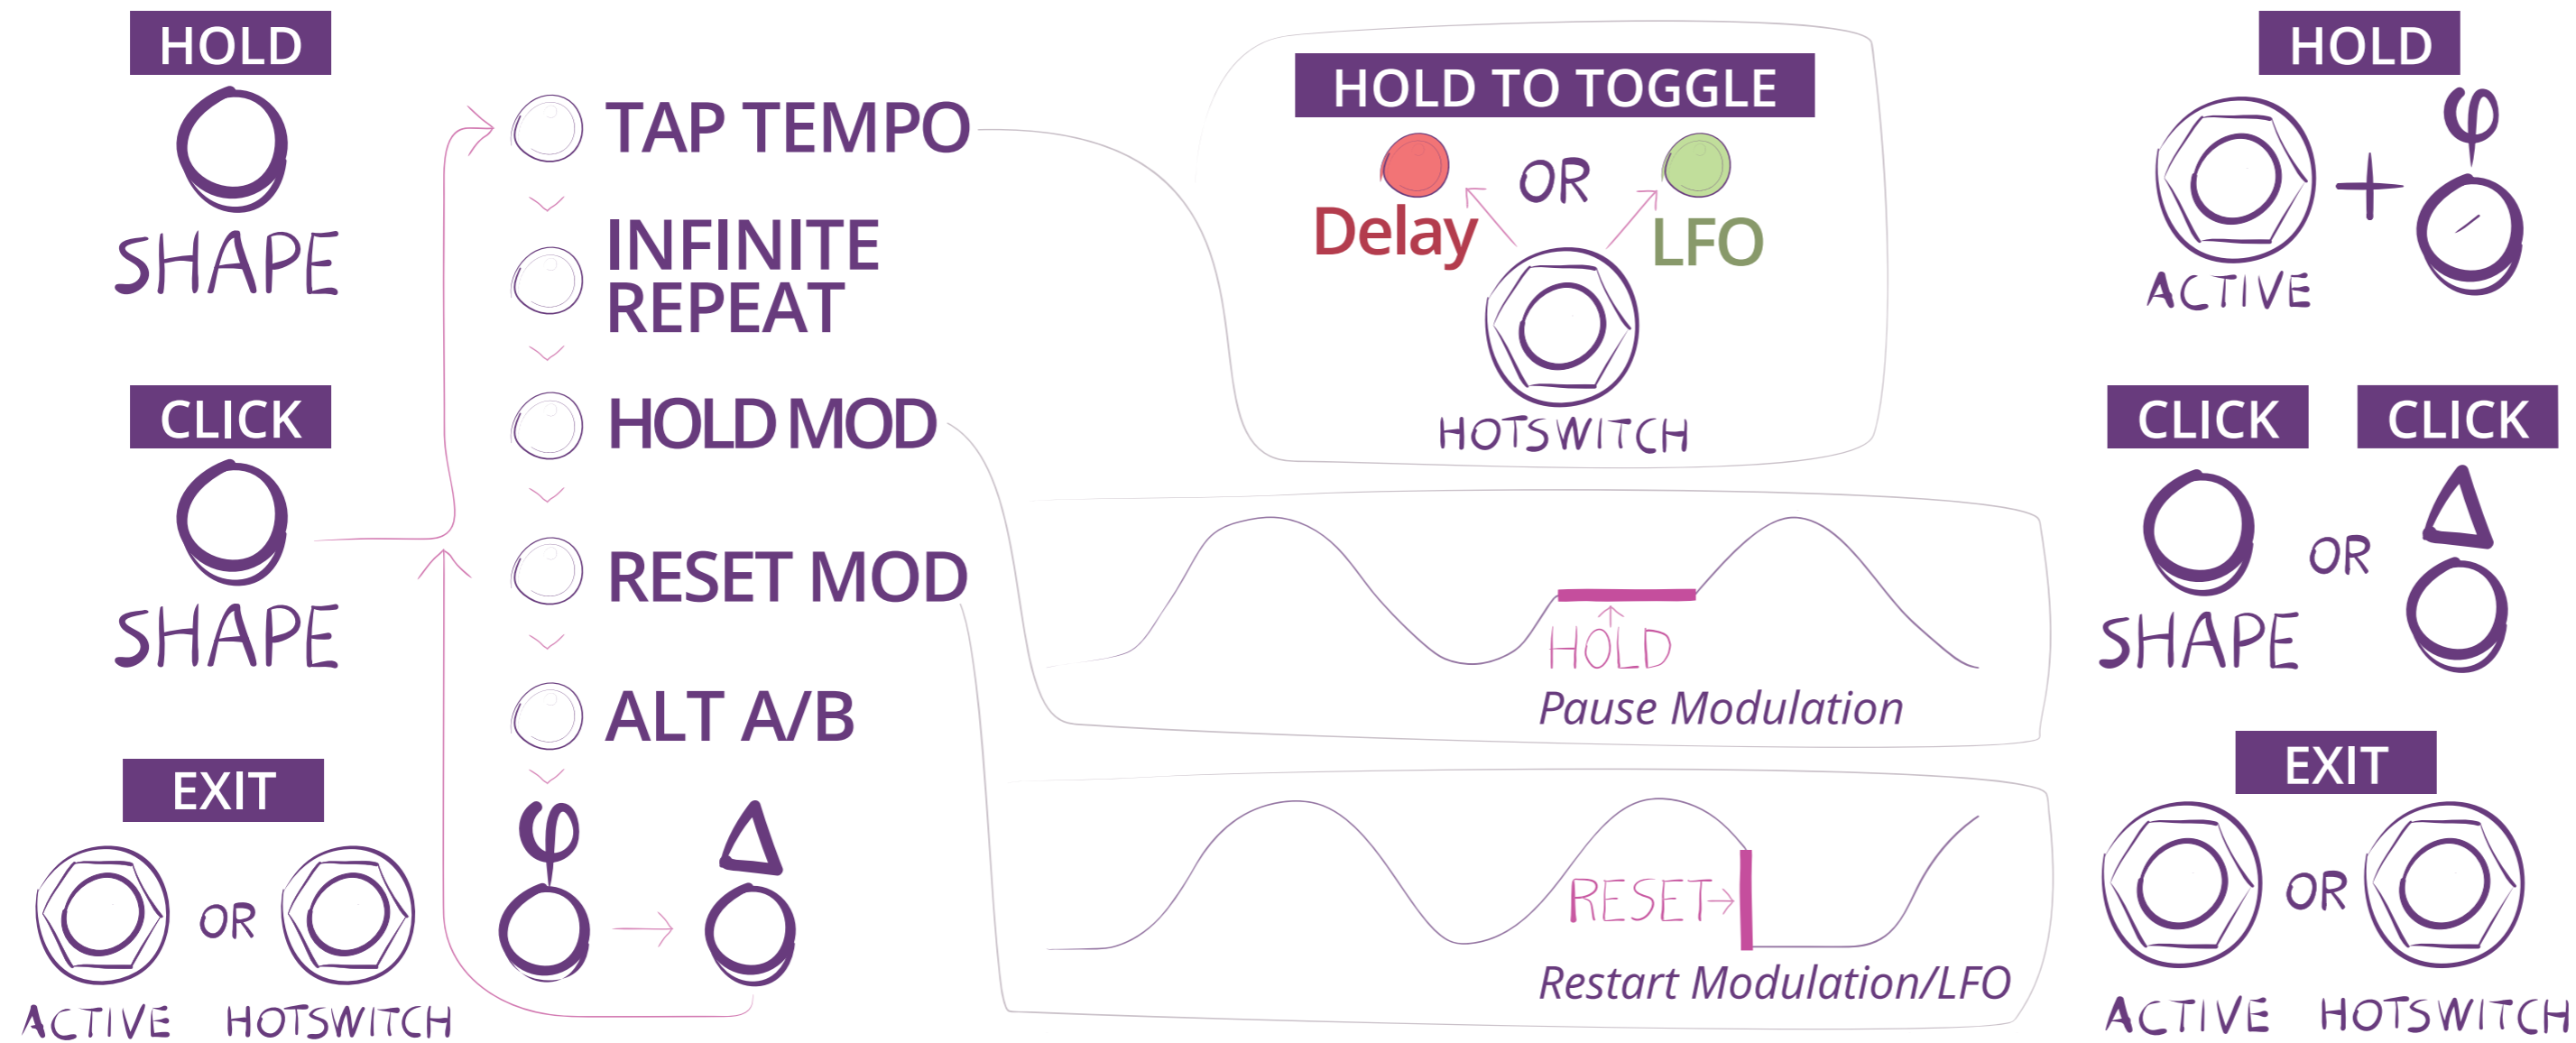


Set MIDI Channel/CC

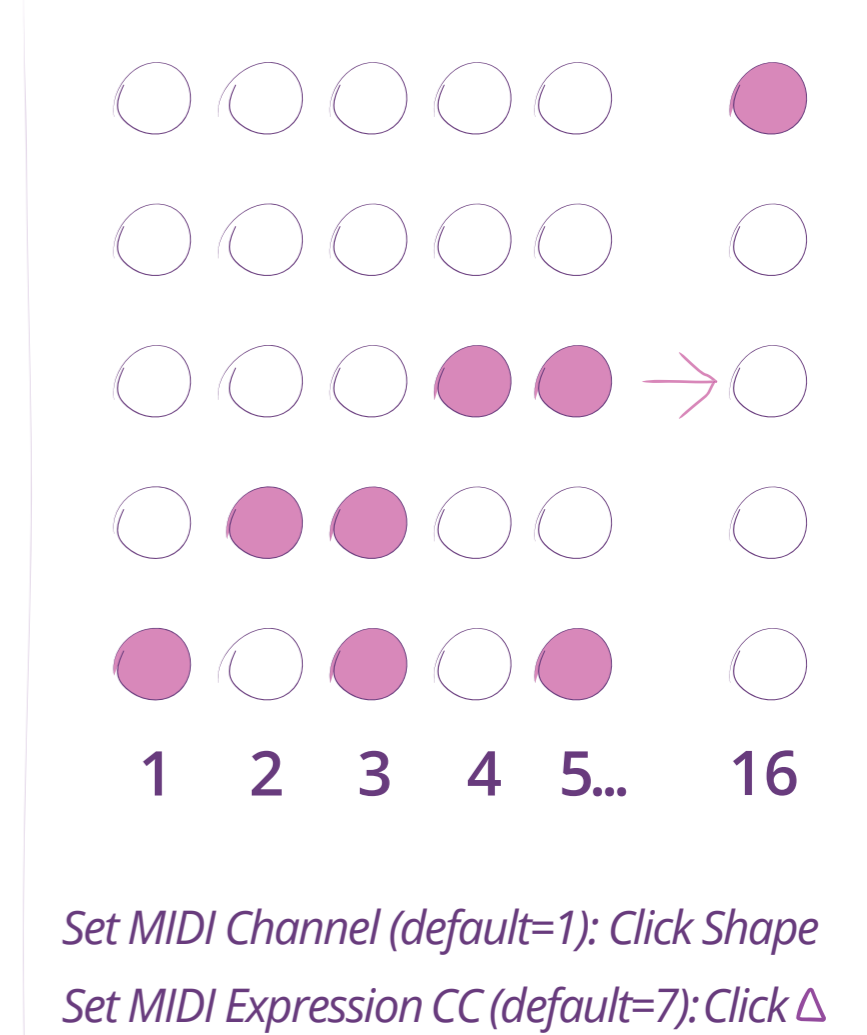

Set Auxiliary Switch Function (Set Exp Pdl Jack to AUX)

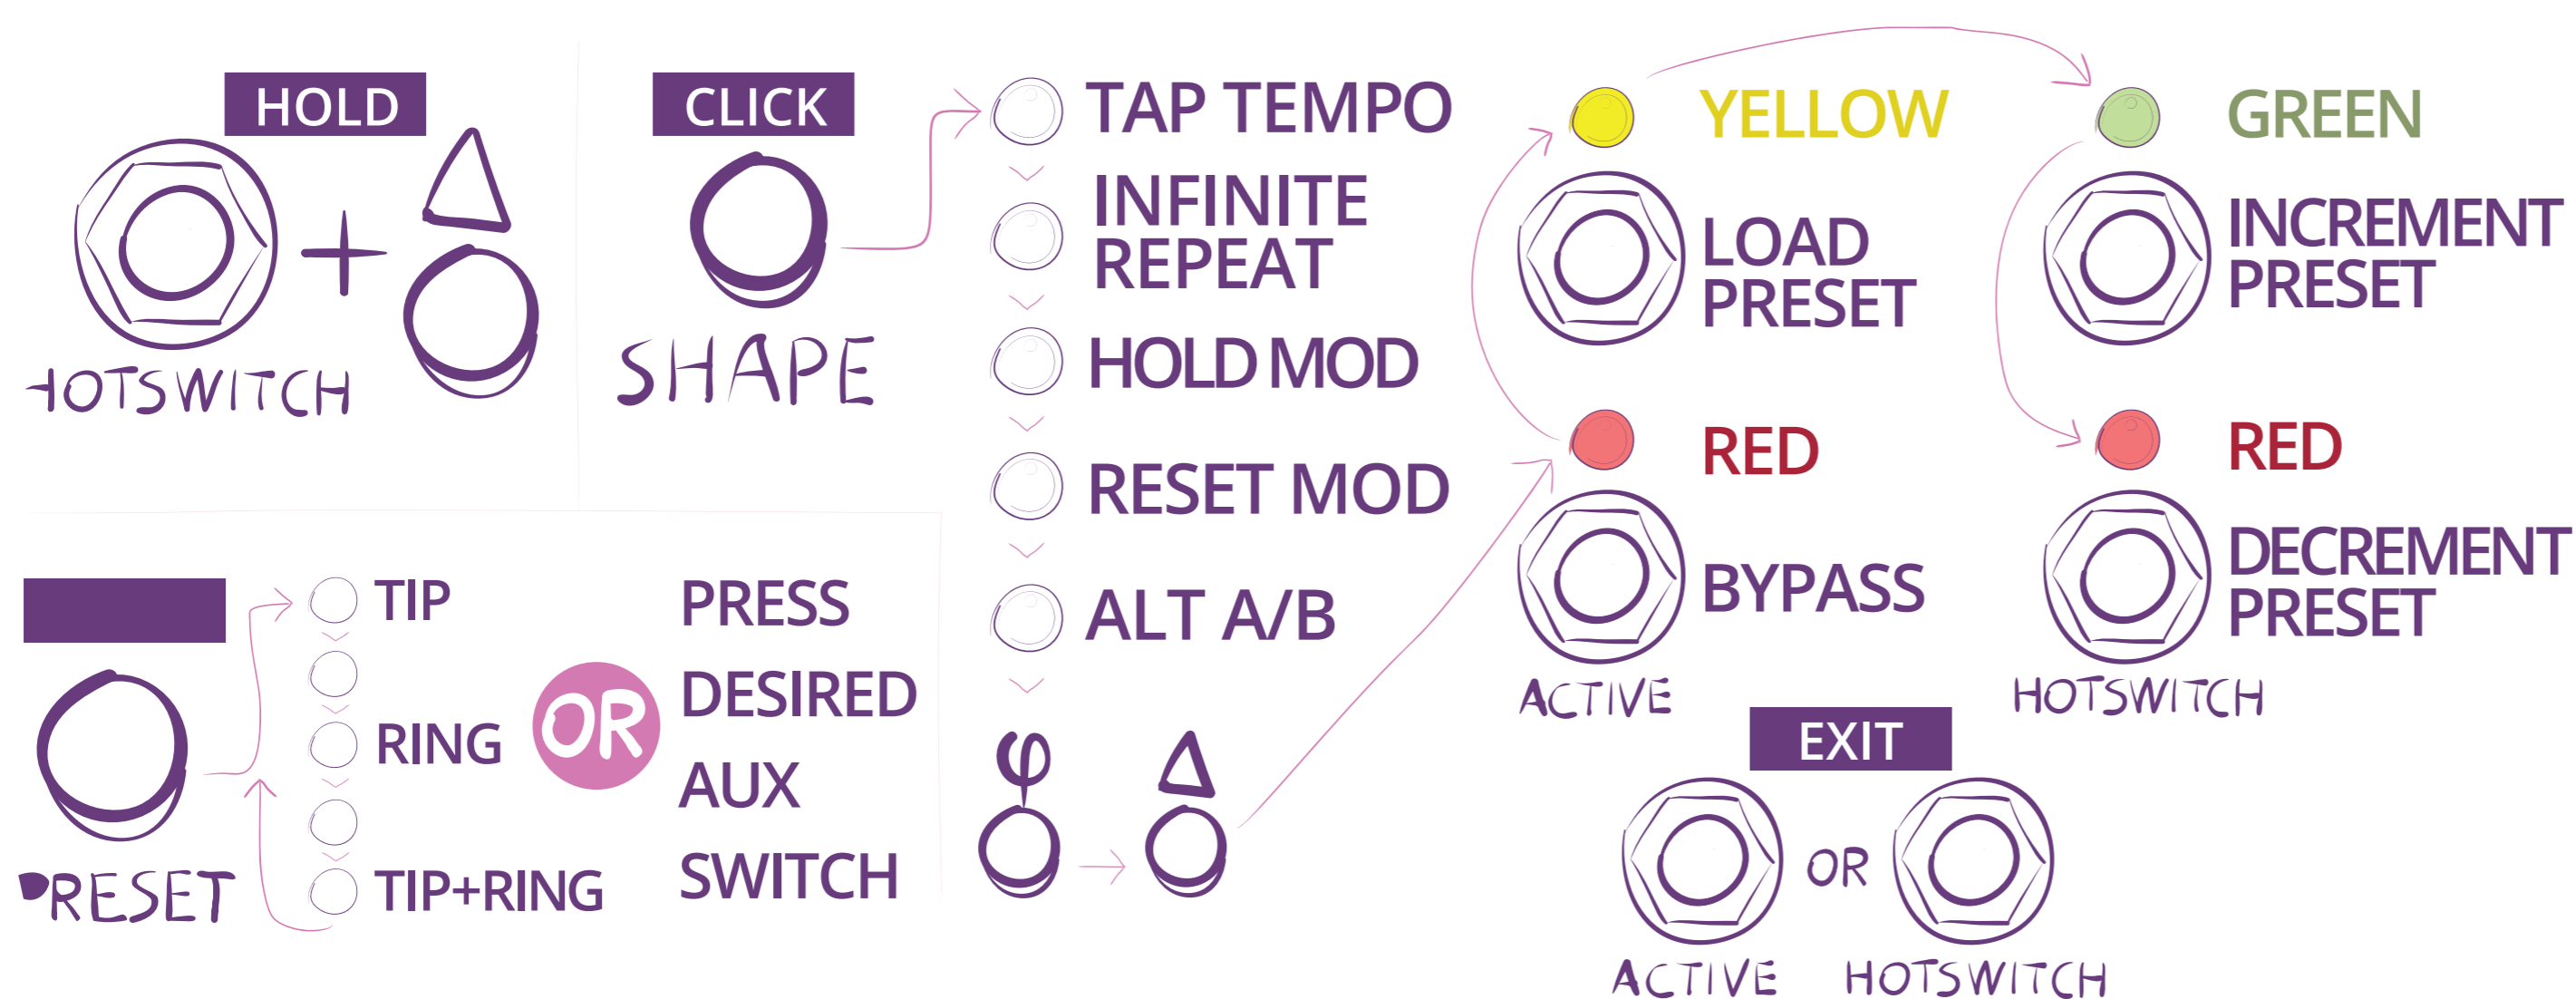

MIDI Clock On/Off

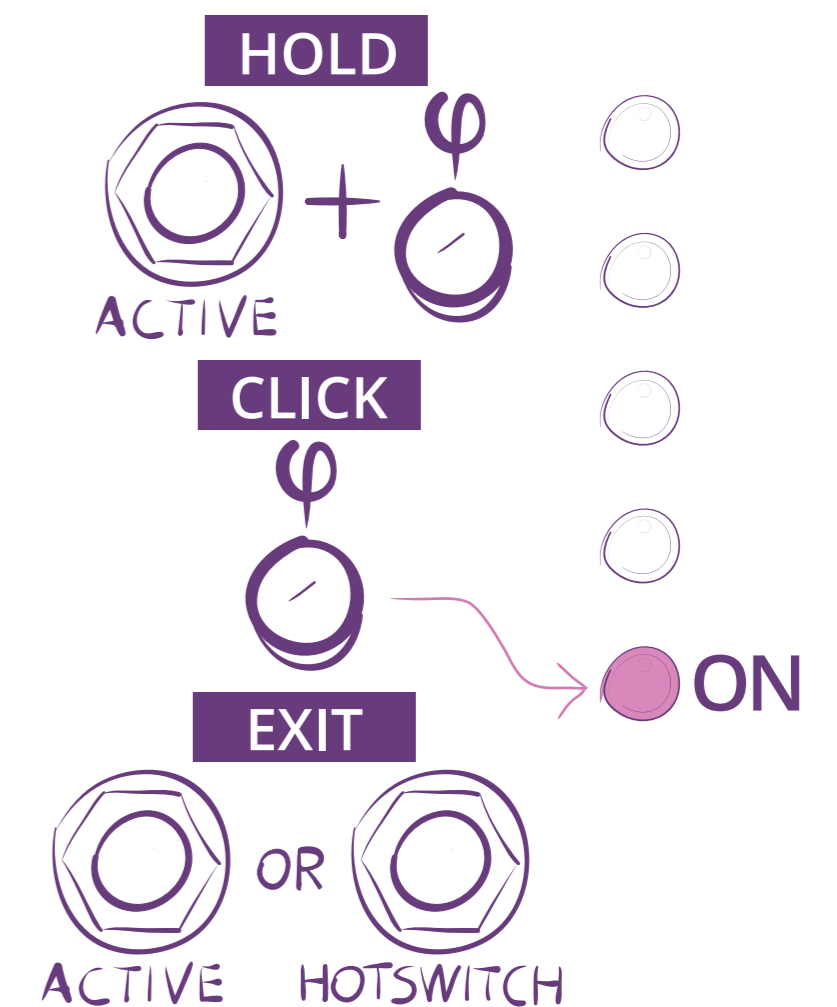

= Global Setting

Presets 25 Presets, 5 Presets in each of 5 Banks

Load Preset Presets can be loaded using either the Preset Button or the Footswitches.

Load Preset Using Preset Button

Press Preset Button

- The Preset Button and Shape Button blink
- The LED Ladders indicate the current preset location
 - The Preset Ladder LED indicates Preset #
 - The Shape Ladder LED indicates Bank #
- If desired, press the Shape Button to select a different Bank
- Press Preset Button to select 1 of 5 presets in the selected Bank

Save Preset

- Press and Hold the Preset Button until LEDs flash
- Press Shape Button to select Bank indicated by Shape Ladder LED
- Press Preset Button to select Preset indicated by Preset Ladder LED
- Press and Hold the Preset Button until LEDs flash rapidly to save Preset

Load Preset Using Footswitches

Press both ACTIVE and HOTSWITCH Footswitches

- The Preset Ladder and Shape Ladder blink. The Preset Button is lit
 - The Preset Ladder LED indicates Preset #
 - The Shape Ladder LED indicates Bank #
- Press & Hold HOTSWITCH to toggle between Preset and Bank Select. Shape Button is lit to indicate Bank
- Press HOTSWITCH to select desired Preset or Bank
- Press ACTIVE Footswitch to load the Preset

Notes:


- *Preset loading and saving time out after a few seconds*
- *The ACTIVE LED turns green when a preset is modified*
- *Use Eventide Device Manager to manage your presets*

Factory Presets Each preset contains an A/B pair of settings for all Knobs and the Φ , Δ and Shape Buttons

	1	2	3	4	5
Bank 1	Lead Delay	Chorus	Slapback	Dirty Dub Delay	Infinte Pitch Bend
Alt B	Reverse	Leslie	Frenetic Filter	Toe Down	Toe Down
Bank 2	Crepitate	GreenThumb	Essence	FlyTrap	FiveMind
Alt B	Rustle	OverBloom	RoseHips	BugEyed	DroneDance
Bank 3	Wilting	Spores	ReOscillate	BlossomTrail	GreenHouse
Alt B	Waxing	Halos	RePollinate	AromaTherapy	WindowSill
Bank 4	JustInVase	Organ-ic	RosesAreThread	Topiary	PlanterBox
Alt B	BouquetDecay	Cyanic	VioletsAreThrough	Airy	FertileStalks
Bank 5	SweetHearts	CitizenCaninae	CutAndDried	Hybrid	Rosenate
Alt B	ValenTines	RoseBuds	RowsofRose	HydRate	Sonorose

Restore Factory Settings: Boot pressing HOTSWITCH & Δ Button. Presets will be overwritten.

Software Update: Boot pressing HOTSWITCH & φ Button.

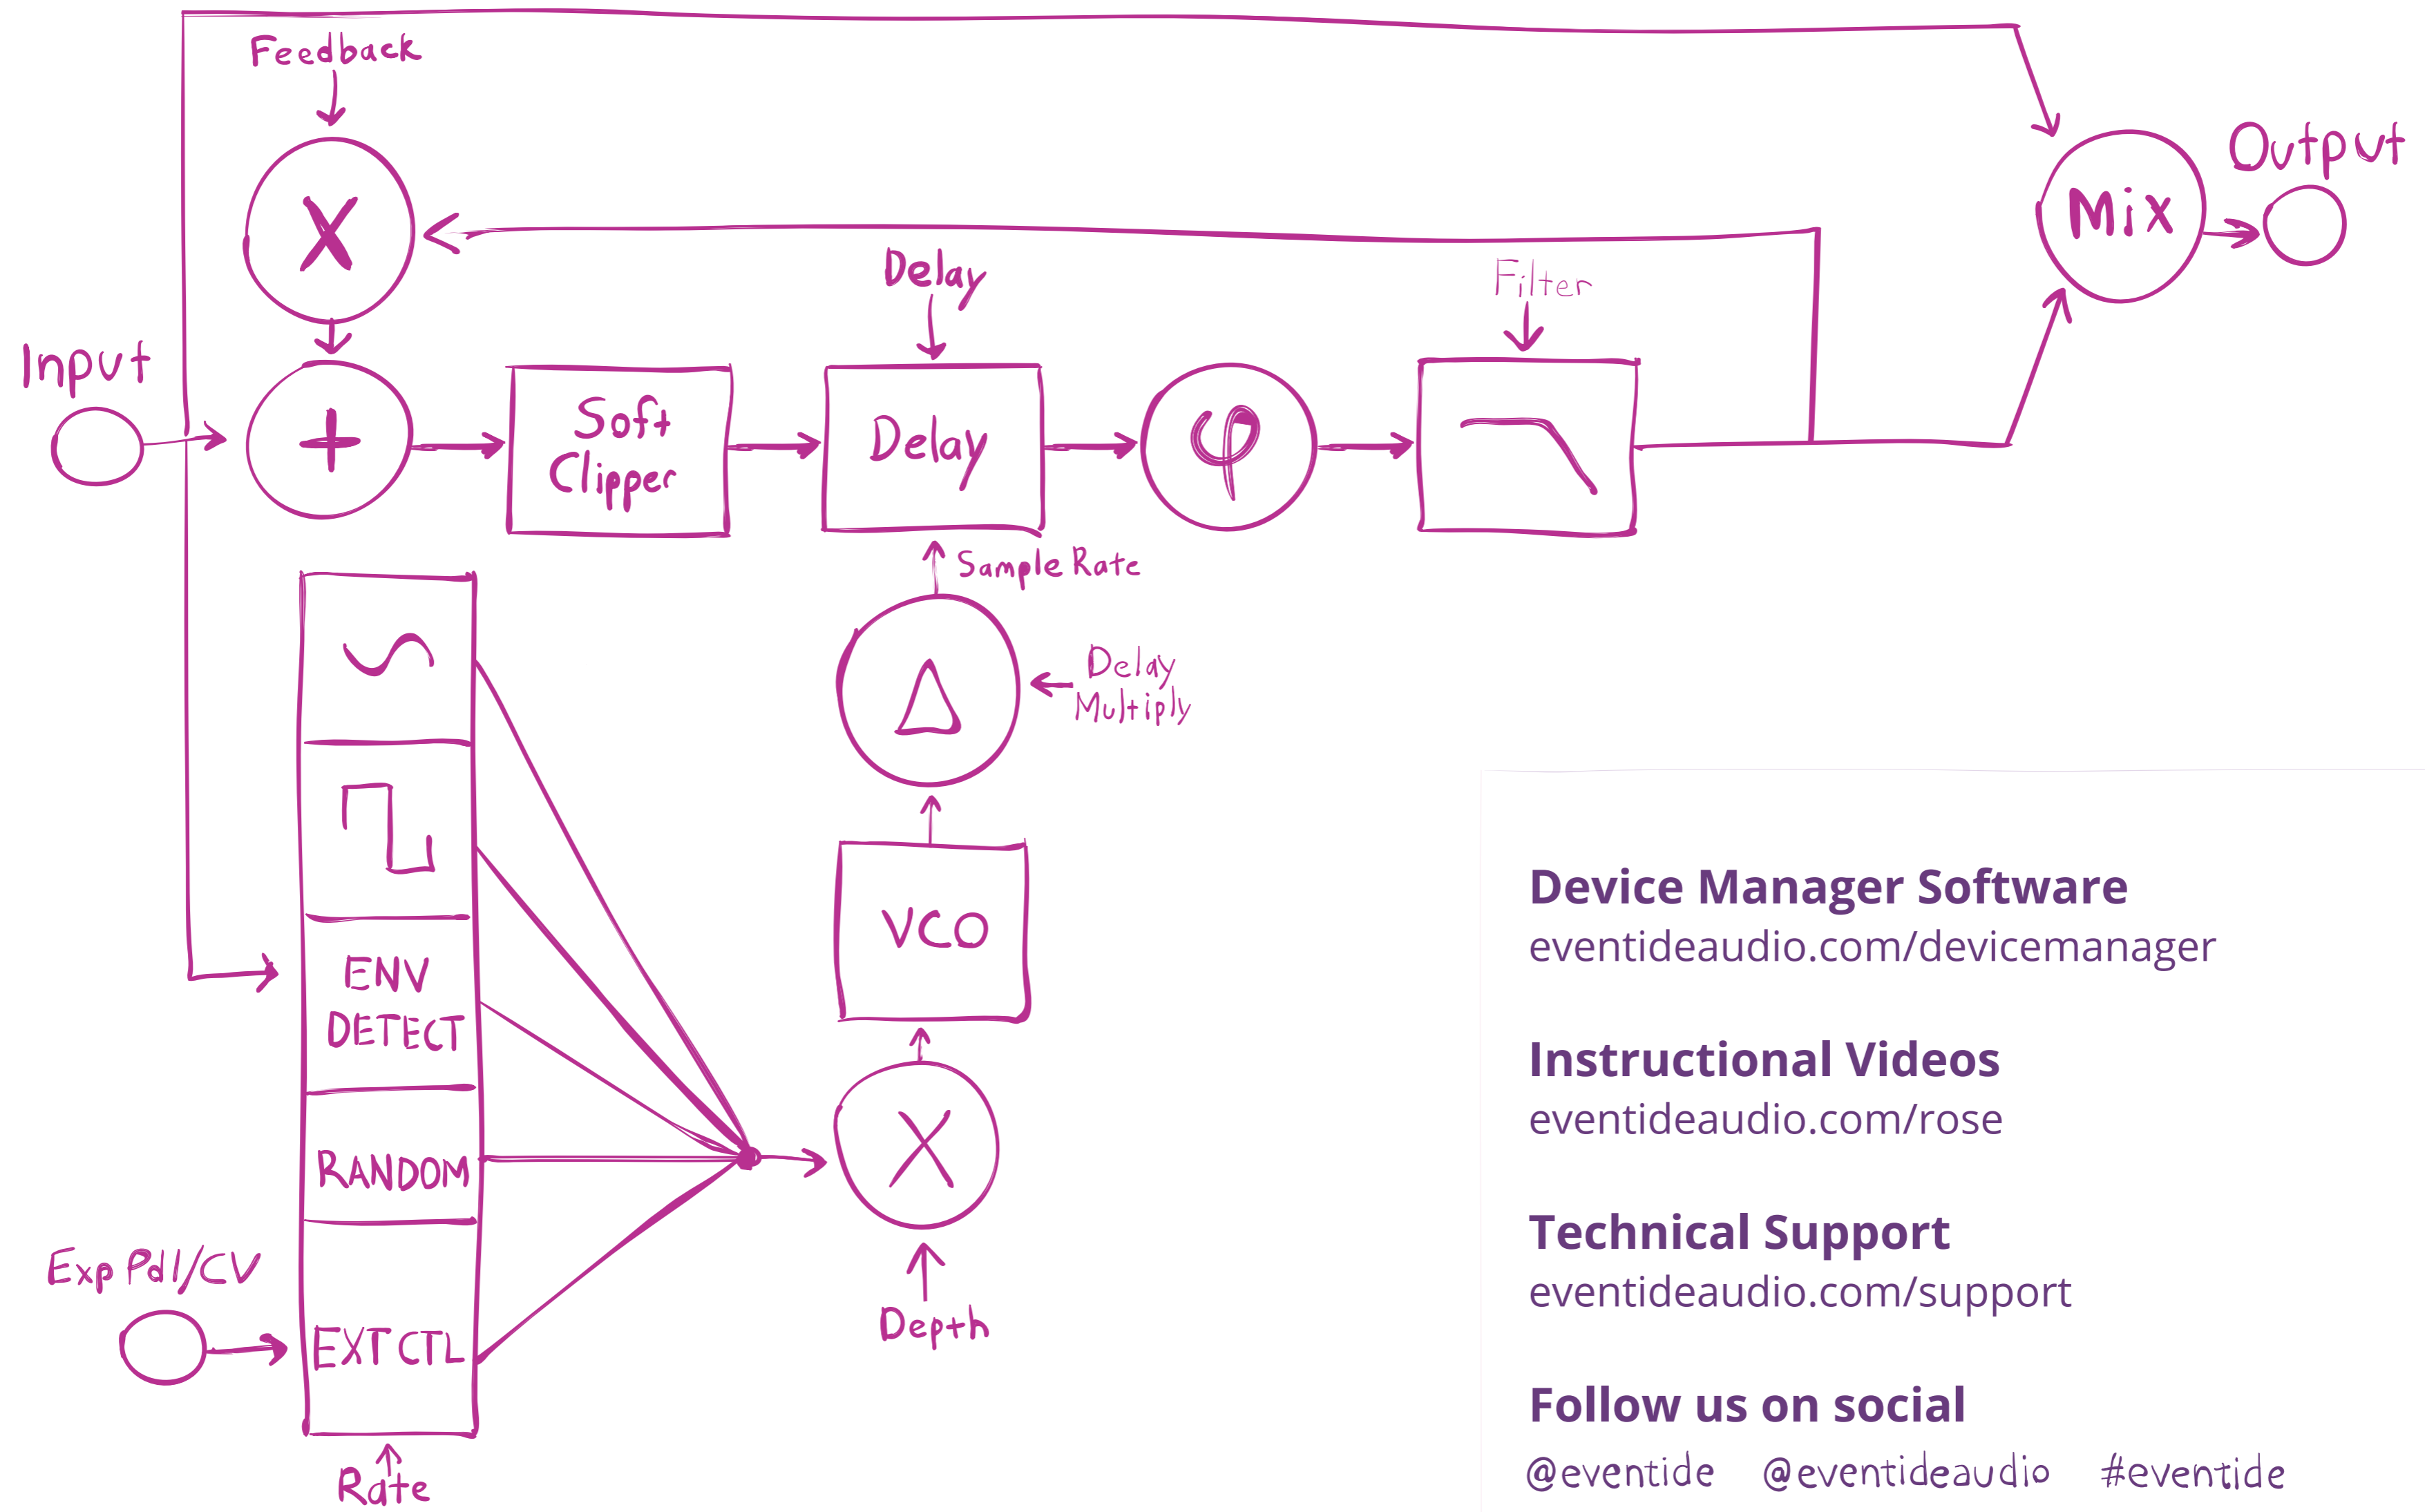

Device Manager Software

eventideaudio.com/devicemanager

Instructional Videos

eventideaudio.com/rose

Technical Support

eventideaudio.com/support

Follow us on social

@eventide @eventideaudio #eventide

