




**PROJECTEUR DE SON 100V  
LINE 100V HORN SPEAKER**

**AP-2320**



**GB - INSTRUCTION MANUAL  
F - MANUEL D'UTILISATION  
D - BEDIENUNGSANLEITUNG  
NL – HANDLEIDING  
PT - MANUAL DE INSTRUÇÕES  
RO – MANUAL DE UTILIZARE**

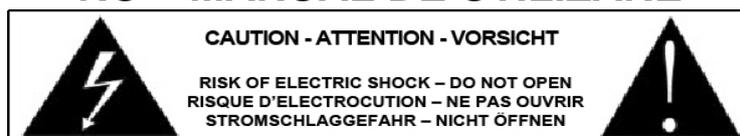

## FRANÇAIS

Nous vous remercions pour l'achat de cette **ENCEINTE BST PRO**. Pour votre sécurité, lisez attentivement ce manuel avant d'installer l'appareil.

### **ATTENTION :**


1. Les dommages résultant du non respect des instructions ou de la modification de l'appareil ne sont pas couverts par la garantie. Tenir loin des enfants et des personnes non-qualifiées.
2. L'appareil ne contient aucune pièce remplaçable ( à l'exception des batteries ). Vérifiez si toutes les pièces sont bien installées et que les vis sont bien serrées avant la mise en service. Ne pas utiliser l'appareil lorsque le boîtier est ouvert.

### **REGLES GENERALES**

- Utilisez cet appareil uniquement si vous vous êtes familiarisés avec ses fonctions. Ne pas autoriser une personne inexpérimentée d'utiliser cet appareil. La plupart des dommages résultent d'une mauvaise utilisation.
- Conservez l'emballage d'origine pour tout transport.

Pour des raisons de sécurité, il est interdit de modifier cet appareil de quelque sorte que ce soit. Toute manipulation non décrite dans ce manuel peut conduire à des courts-circuits, un choc électrique, l'explosion de la lampe, une chute, etc. et invaliderait la garantie


## MONTAGE

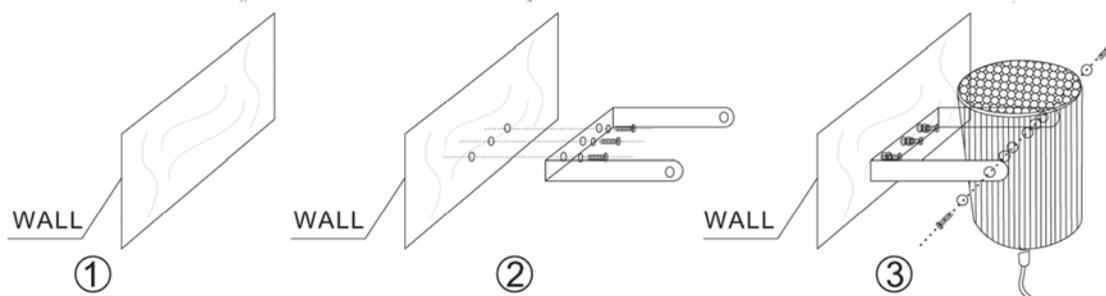

1. Le projecteur pèse 3.1Kg. Veillez à choisir un mur assez solide pour éviter que le projecteur ne se détache et tombe.

2. Positionnez l'étrier contre le mur et repérez les trois trous de fixation.

3. Fixez l'étrier sur le mur en utilisant 3 vis. Remontez le projecteur dans l'étrier.

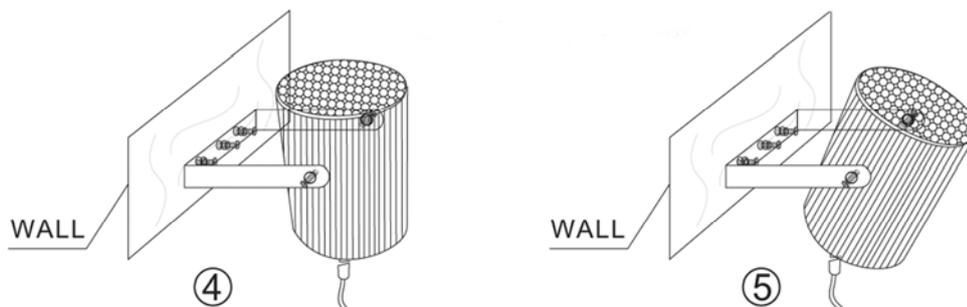

4. Le projecteur peut être orienté à  $\pm 90^\circ$  par rapport au mur. Pour figer le projecteur, vous devez utiliser les deux vis de fixation du projecteur

5. Une fois la position du projecteur trouvée, serrez au maximum les vis de fixation du projecteur jusqu'à ce que le projecteur ne puisse plus bouger

## CARACTERISTIQUES TECHNIQUES

Puissance :	7.5W / 15W
Entrée :	100V
Sélection puissance :	par fil
HP large bande :	6"
Réponse en fréquence :	250Hz – 14KHz
Sensibilité :	100dB
Dispersion :	90°
Matériaux :	Corps et support aluminium
Norme IP :	IP-65
Dimensions :	172x315mm
Poids :	2,7Kg
Utilisation intérieure comme extérieure	

### CONDITIONS DE GARANTIE :

Les équipements BST PRO sont couverts par une garantie de 2 ans pièces et main d'œuvre.

Les principes suivants s'appliquent à partir du moment où l'appareil quitte nos usines.

La facture de mise à la consommation sera foi de date de départ de la garantie, dans la mesure où celle-ci n'excède pas 12 mois par rapport à la date de fabrication.

Seules les compagnies agréées par BST PRO sont autorisées à opérer sur ces équipements.

La garantie devient nulle si l'intervenant appartient à un autre groupe.

Durant la période sous garantie, tout matériel défectueux doit nous être retourné dans son emballage d'origine sous colis pré-payé.

BST PRO vous retournera vos biens par colis pré-payé au cours de l'année de garantie. Au-delà, les frais d'expédition seront à la charge du client.

Les potentiomètres ont une durée de vie limitée et ne sont pas garantis par le fabricant en cas d'utilisation très intensive.

Pour toute demande relative à ces services, adressez-vous à votre distributeur habituel, qui sera le plus apte à vous renseigner

ENGLISH

Thank you for having chosen our **A BST PRO SPEAKER** . For your own safety, please read this user manual carefully before installing the device.

**SAFETY INTRODUCTION**

- If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.


**CAUTION:**

1. Please be aware that damages caused by manual modifications to the device are not subject to warranty. Keep away from children and non-professionals.
2. The speaker doesn't include any spare parts for repair, please check if all the parts are well installed and screws are fitted tightly before operating. Do not use the light when the cover is open.


**GENERAL GUIDELINES**

- Operate the device only after having familiarized yourself with its functions. Do not permit operation by person not qualified for operating the device. Most damages are the result of unprofessional operation.
- Please use the original packaging if the device is to be transported.

**INSTALLATION**

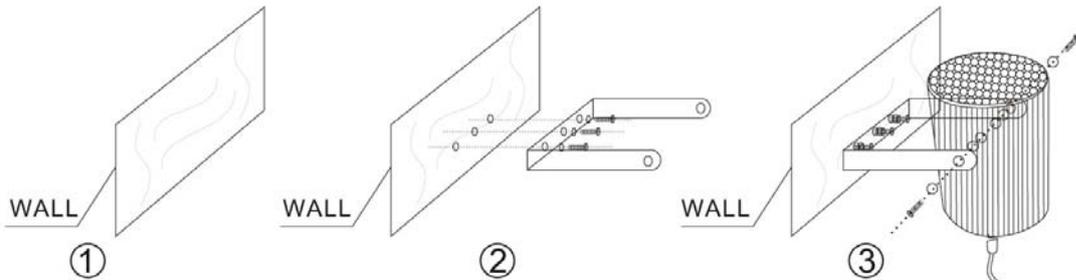

1. Speaker weight of 2.7/2.2Kg, must be chosen by our body strong and avoid unstable speakers falling or injuries.
2. Use of measuring tools, measure parts of the three round holes the size of speakers and the distance between pore spaces, and selected in line with the screw hole will be fixed Fortunately, speaker wall accessories.
3. The horn gently into the accessories have been installed on the walls, the speakers on both sides of pore spaces with walls on two other parts of the alignment holes. selected in line with the horn screw hole bit, fixed.

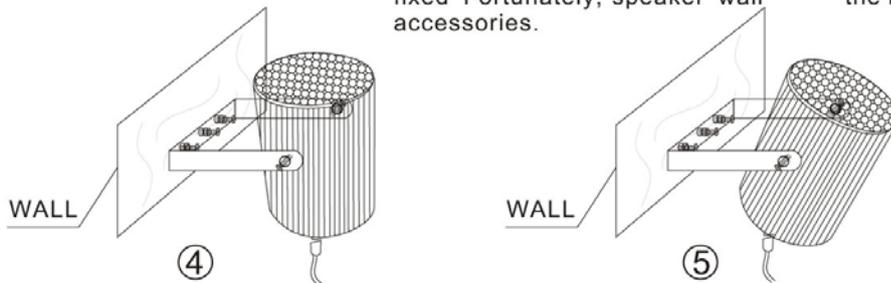

4. Figure, a 90-degree vertical installation in the wall fixed. Such as the need to change the point of view can be moved to install speakers.
5. Figure used to change the installation point of view, the installation of speakers.

## TECHNICAL SPECIFICATIONS

Power :	7.5W / 15W
Input :	100V
Power selection :	par fil
Full range speaker :	6"
Frequency response :	250Hz – 14KHz
Sensitivity :	100dB
Dispersion :	90°
Material :	Aluminium enclosure and support
IP norm :	IP-65
Dimensions :	172x315mm
Weight :	2,7Kg
Indoor and outdoor use	

## WARRANTY CONDITIONS

BST PRO equipment is covered by a 2 years warranty on parts and labour

The following rules apply from the day the equipment leaves the factory:

The date on the invoice is considered to be the date the warranty begins.

Only companies approved by BST PRO are allowed to work on the equipment. Warranty becomes void when other service technicians open the equipment.

During warranty period, defective equipment must be sent by pre-paid mail in the original box.

BST PRO will return the goods by pre-paid mail during the first year of warranty; thereafter the mailing cost is to be paid by the recipient

Potentiometers have a limited lifetime and are not covered by the manufacturer for more than normal use.

For all service enquiries, refer to your local distributor, as he is best able to help you.