



**BEAMZ**  
**MADE**  
**EAZY**


150.721 V1.0

**LCB1215IP**

**QUICK START GUIDE**


# CONTROL MENU

If the display is in standby, unlock it:

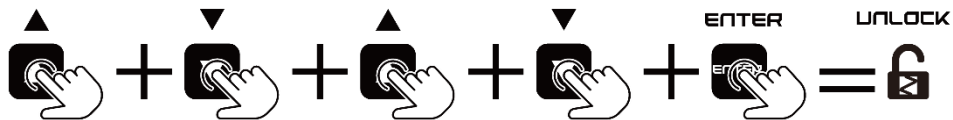

| MENU                |           |                  | DESCRIPTION                                 |
|---------------------|-----------|------------------|---|
| <b>MANUAL</b>       | Red       | 000-255          | Manual control                              |
|                     | Green     | 000-255          |   |
|                     | Blue      | 000-255          |   |
|                     | White     | 000-255          |   |
|                     | Amber     | 000-255          |   |
|                     | Lime      | 000-255          |   |
|                     | Strobe    | 00-20            |   |
| <b>DREAM</b>        | Program   | 001-031          | Select desired program                      |
|                     | Speed     | 000-100          | Select desired speed of dream program       |
|                     | Strobe    | 00-20            | Select desired strobe of dream program      |
| <b>AUTO RUN</b>     | FQN       | 01-99            | Select desired auto program                 |
| <b>DIMMER</b>       | Respon 01 |                  | Fixture response immediately on DMX changes |
|                     | Respon 02 |                  | Fixture response smoothly on DMX changes    |
| <b>DIMMER CURVE</b> | Linear    |                  | Dimmer curve linear                         |
|                     | Exp       |                  | Dimmer curve exponential                    |
|                     | I. Square |                  | Dimmer curve logarithmic                    |
|                     | S-Curve   |                  | Dimmer curve S-shaped                       |
| <b>DMX MODE</b>     | Address   | 001-512          | DMX address setting                         |
|                     | CH Mode   | 2Ch              | Select desired DMX mode                     |
|                     |           | 6CH1             |   |
|                     |           | 6CH2             |   |
|                     |           | 8CH              |   |
|                     |           | 11CH             |   |
|                     |           | 38Ch             |   |
|                     |           | 41 Ch            |   |
|                     |           | 74 CH            |   |
|                     |           | 77CH             |   |
| <b>SLAVE</b>        |           | Slave mode       |   |
| <b>LOCK KEY</b>     | On        |                  | Enable or disable the keylock function      |
|                     | Off       |                  |   |
| <b>VERSION</b>      | Vx.xx     | Software version |   |

## DIMMER CURVE

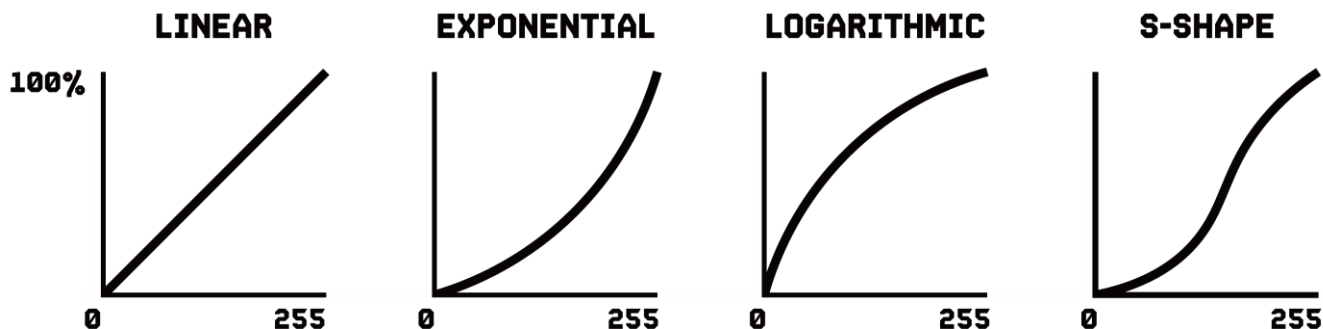

# DMX CHANNELS

## 2 CHANNELS

| CHANNEL | FUNCTION     | VALUE   | DESCRIPTION   |
|---------|--------------|---------|---|
| 1       | Dimmer       | 000-255 | Master Dimmer 0-100%                                |
| 2       | Colour macro | 000-005 | No function   |
|         |              | 006-013 | Red   |
|         |              | 014-021 | Amber   |
|         |              | 022-029 | Yellow warm   |
|         |              | 030-037 | Yellow  |
|         |              | 038-045 | Green   |
|         |              | 046-053 | Turquoise   |
|         |              | 054-061 | Cyan  |
|         |              | 062-069 | Blue  |
|         |              | 070-077 | Lavender  |
|         |              | 078-085 | Mauve   |
|         |              | 086-093 | Magenta   |
|         |              | 094-101 | Pink  |
|         |              | 102-109 | Warm White  |
|         |              | 110-117 | White   |
|         |              | 118-125 | Cold White  |
|         |              | 126-128 | Colour jumping stop                                 |
|         |              | 129-192 | Colour jumping Speed Colour 1-12, from slow to fast |
|         |              | 193-255 | Colour fading Speed Colour 1- 12, from slow to fast |

## 6 CHANNELS MODE2

| CHANNEL | FUNCTION | VALUE   | DESCRIPTION   |
|---------|----------|---------|---------------|
| 1       | Red      | 000-255 | Dimmer 0-100% |
| 2       | Green    | 000-255 | Dimmer 0-100% |
| 3       | Blue     | 000-255 | Dimmer 0-100% |
| 4       | White    | 000-255 | Dimmer 0-100% |
| 5       | Amber    | 000-255 | Dimmer 0-100% |
| 6       | Lime     | 000-255 | Dimmer 0-100% |

## 8 CHANNELS

| CHANNEL | FUNCTION | VALUE   | DESCRIPTION  |
|---------|----------|---------|--|
| 1       | Dimmer   | 000-255 | Master Dimmer 0-100%                                 |
| 2       | Strobe   | 000-005 | Strobe open  |
|         |          | 006-010 | Strobe closed  |
|         |          | 011-033 | Pulse random, from slow to fast                      |
|         |          | 034-056 | Ramp up random, from slow to fast                    |
|         |          | 057-079 | Ramp down random, from slow to fast                  |
|         |          | 080-102 | Random strobe effect, from slow to fast              |
|         |          | 103-127 | Strobe break effect, 5sec to 1sec (very short flash) |
|         |          | 128-250 | Strobe, from slow to fast 0-20Hz                     |
|         |          | 251-255 | Strobe open  |
| 3       | Red      | 000-255 | Dimmer 0-100%  |
| 4       | Green    | 000-255 | Dimmer 0-100%  |
| 5       | Blue     | 000-255 | Dimmer 0-100%  |
| 6       | White    | 000-255 | Dimmer 0-100%  |
| 7       | Amber    | 000-255 | Dimmer 0-100%  |
| 8       | Lime     | 000-255 | Dimmer 0-100%  |



# BEAMZ

**YOUR FUTURE  
YOUR SKILLS  
YOUR PLATFORM  
YOUR PARTY  
YOUR EVENT**



offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!

