




# **PLATFORM·B<sup>+</sup>**

Espansore della superficie di controllo MIDI / Audio per  
Platform B+



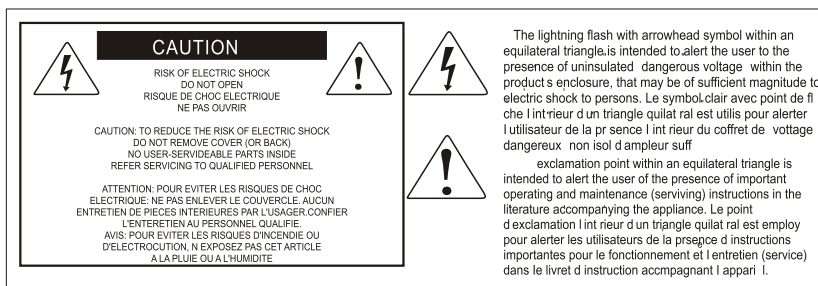

**Nota:** per ridurre il rischio di incendio o di scariche elettriche, non esponete questo apparecchio a pioggia o umidità. Per ridurre il pericolo di scariche elettriche evitate di rimuoverne il coperchio o il pannello posteriore. Non esistono all'interno dell'apparecchio parti la cui regolazione è a cura dell'utente. Per eventuale assistenza, fate riferimento esclusivamente a personale qualificato. Il fulmine con la punta a freccia all'interno di un triangolo equilatero avvisa l'utente della presenza di "tensioni pericolose" non isolate all'interno dell'apparecchio, tali da costituire un possibile rischio di scariche elettriche dannose per le persone. Il punto esclamativo all'interno di un triangolo equilatero avvisa l'utente della presenza di importanti istruzioni di manutenzione (assistenza) nella documentazione che accompagna il prodotto.

## Importanti Istruzioni di Sicurezza

1. Prima di usare l'apparecchio, vi preghiamo di leggerne per intero le istruzioni.
2. Conservate tali istruzioni per una eventuale consultazione futura.
3. Vi preghiamo di rispettare tutte le istruzioni di sicurezza.
4. Seguite tutte le istruzioni del costruttore.
5. Non usate questo apparecchio vicino ad acqua o umidità.
6. Pulite l'apparecchio esclusivamente con un panno asciutto.
7. Evitate di ostruire una qualsiasi delle aperture di ventilazione. Posizionate lo seguendo le istruzioni del costruttore.
8. Non posizionatelo vicino a sorgenti di calore come radiatori, scambiatori di calore, forni o altri apparecchi (amplificatori compresi) in grado di generare calore.
9. Non disattivate la protezione di sicurezza costituita dalla spina polarizzata o dotata di collegamento a terra. Una spina polarizzata è dotata di due spinotti, uno più piccolo ed uno più grande. Una spina dotata di collegamento a terra è dotata di due spinotti più un terzo spinotto di collegamento a terra. Questo terzo spinotto, eventualmente anche più grande, viene fornito per la vostra sicurezza. Se la spina fornita in dotazione non si adatta alla vostra presa, consultate un elettricista per la sostituzione della presa obsoleta.
10. Proteggete il cavo di alimentazione in modo che non sia possibile camminarci sopra né piegarlo, con particolare Nota alle prese, ai punti di collegamento e al punto in cui esce dall'apparecchio.
11. Staccate l'apparecchio dalla alimentazione in caso di temporali o tempeste o se non lo usate per un lungo periodo.
12. Per l'assistenza, fate riferimento esclusivamente a personale qualificato. È necessaria l'assistenza se l'apparecchio ha subito un qualsiasi Suggestivo di danno, come danni al cavo o alla spina di alimentazione, nel caso in cui sia stato versato del liquido o siano caduti oggetti al suo interno, sia stato esposto a pioggia o umidità, non funzioni correttamente o sia stato fatto cadere.

# Contenuto

Introduzione.....	4
Cosa c'è nella confezione?.....	4
Registrate nel vostro account il prodotto ICON Pro Audio acquistato.....	5
Features.....	6
Disposizione pannello superiore.....	7
Layout del Pannello Laterale.....	11
Operazioni preliminari.....	12
(Connected with Platform M+ and Platform X+ (1 - 3units)).....	12
Cubase.....	16
Pro Tools.....	18
Logic pro.....	19
Ableton Live.....	21
Operazioni preliminari (Connessione a Platform M+).....	22
Collegamento del dispositivo di controllo Platform B+.....	22
Cubase.....	24
Nuendo.....	25
Logic Pro.....	26
Samplitude.....	27
Bitwig.....	29
Reason.....	30
Reaper.....	31
Studio One.....	32
Ableton Live.....	33
Pro Tools.....	34
Audition.....	35
Sonar.....	36
Operazioni preliminari (Autonomo).....	38
Collegamento del dispositivo di controllo Platform B+.....	38
Cubase.....	40
Nuendo.....	41
Logic Pro.....	42
Samplitude.....	43
Bitwig.....	45
Reason.....	46
Reaper.....	47
Studio One.....	48
Ableton Live.....	49
Pro Tools.....	50
Audition.....	51
Sonar.....	52
I Scaricare i driver per Windows dalla pagina personale utente del sito <a href="http://www.iconproaudio.com">www.iconproaudio.com</a> .....	54
Istallazione di software iMap™ per Windows.....	55
Assegnazione modalità DAW (Controllo Mackie/HUI) o definizione funzioni MIDI con iMap™.....	57
Seleziona Definizi utente.....	57
Assegnazione modalità DAW (controllo Mackie/LogicPro/HUI) usando iMap™.....	58
Assegnazione messaggi MIDI in modalità Definito dall'utente usando iMap™.....	60
Configurazione elementi di controllo in modalità Definito dall'utente.....	62
Altre funzioni in iMap™.....	63
Aggiornamento del firmware.....	64
Ripristino delle impostazioni predefinite di fabbrica.....	67
Dati tecnici.....	68
Revisione.....	69
AppendixA.....	70
Cubase.....	70
Logic Pro X.....	84
Pro Tools HUI.....	106
Ableton Live 10.....	114
AppendixB.....	124
Cubase.....	124
Logic Pro X.....	125
Pro Tools HUI.....	127
Ableton Live 10.....	128
AppendixC.....	130
Cubase.....	130
Logic Pro X.....	131
ProTools HUI.....	133
Ableton Live 10.....	136

# Introduzione

La ringraziamo per aver scelto il ICON ProAudio Banco di controllo MIDI/Audio Platform B+. Siamo sicuri che questo dispositivo le fornirà eccellenti prestazioni per molti anni, ma nel caso in cui non sia completamente soddisfatto del Suo acquisto ce lo segnali e faremo tutto il possibile per soddisfare le Sue esigenze.

Le pagine che seguono elencano, in dettaglio, le caratteristiche dell' Banco di controllo MIDI/Audio Platform B+, e offrono una descrizione guidata dei pannelli frontali e laterali, istruzioni dettagliate per l'installazione ed uso, oltre a spiegazioni esaurienti.

Registrare il prodotto sul nostro sito web al seguente link [www.iconproaudio.com/registration](http://www.iconproaudio.com/registration):

Seguire la procedura guidata. Inserire il numero seriale del dispositivo, i dati personali e quant'altro richiesto. Registrando online il prodotto, è possibile accedere all'assistenza e al supporto post-vendita offertodal nostro HelpCenter. Visitare il sito web [www.iconproaudio.com](http://www.iconproaudio.com). Inoltre, nella pagina di prodotto personale del proprio account saranno elencati tutti i prodotti registrati. Qui è possibile ottenere informazioni sul proprio dispositivo: ad esempio, potrete ottenere l'upgrade di firmware e/o driver, acquisire il bundle software e scaricare il manuale utente.

Come per la maggior parte dei dispositivi elettronici, si consiglia vivamente di conservare la confezione originale. Nell'eventualità in cui il prodotto debba essere restituito per la manutenzione, è necessaria la confezione originale (o un equivalente simile).

Con la giusta cura e un adeguato ricambio d'aria, il Suo Banco di controllo MIDI/Audio Platform B+ funzionerà perfettamente per tantissimi anni. Si consiglia di scrivere il numero di serie nell'apposito spazio qui sotto per riferimenti futuri.

## Cosa c'è nella confezione?

- Controller Platform B+ USB MIDI x 1pc
- Guida di avvio rapido x 1
- Cavo USB 2.0 x 1
- Adattatore x 1pc



# **Registrate nel vostro account il prodotto ICON Pro Audio acquistato.**

## **1. Verificare il numero seriale del dispositivo**

Visitare la pagina <http://iconproaudio.com/registration> o fare la scansione del seguente codice QR



Inserire il numero seriale del dispositivo e le altre informazioni richieste dalla schermata. Fare clic su “Submit”.

Comparirà un messaggio in pop-up con le informazioni relative al dispositivo come il nome del modello e il numero seriale. Fare clic su “Register this device to my account”. Qualora non si visualizzi alcun messaggio, contattare la nostra assistenza post-vendita.

## **2. Accedere al proprio account personale se l'utente è già registrato. In caso di primo accesso, occorrerà registrarsi.**

Utente già registrato: Accedere alla propria pagina personale inserendo username e password.

Utente non registrato: Fare clic su “Sign Up” e completare con i propri dati.

## **3. Scaricare tutti i materiali utili**

Nella presente pagina verranno visualizzati tutti i dispositivi registrati nel proprio account. Ciascun prodotto verrà elencato insieme ai file disponibili come driver, firmware, manuale utente in diverse lingue, software bundle e altri materiali da scaricare. Assicurarsi di aver scaricato i file necessari come i driver prima di procedere all'installazione del dispositivo.

# Features



- Trasforma istantaneamente un Platform M+ in un potente controller
- 50 tasti funzione illuminati per il controllo di diverse funzioni DAW (Digital Audio Workstation)
- Supporta più di 10 diverse DAW tra le più diffuse.
- Il connettore USB autonomo è predisposto per l'uso come dispositivo indipendente
- Il connettore di espansione è predisposto per il collegamento diretto al Platform M+
- Sono incluse diverse coperture in silicon per DAW - Cubase/Nuendo, Samplitude, Logic Pro, Reaper, Studio One, Bitwig, Reason, Ableton Live, e Pro Tools
- Compatibilità di classe con Windows XP, Vista (32-bit e 64-bit), Windows 7 (32-bit e 64-bit), Windows 8 (32-bit e 64-bit), Windows 10 (32-bit e 64-bit), Mac OS X (IntelMac)
- Connettività ad alta velocità USB 2.0
- Controllo Mackie ed emulazione universale HUI
- iMap - Software per auto-mappatura midi è fornito per la modalità Definito dall'utente (Apprendimento MIDI)
- Aggiornamento del firmware disponibile in modo semplice mediante connessione USB e software iMap.
- Qualità struttura superiore e alloggiamento in metallo solido con porta di blocco Kensington
- Alimentatore 12V/0.35A fornito in dotazione

# Disposizione pannello superiore



**Nota:** Per sfruttare appieno il potenziale del Platform B+, è necessario collegarlo e utilizzarlo con il Platform M+. Le funzioni descritte qui sotto richiedono l'uso di entrambe le unità.

**Nota:** Funzione con leggere differenze tra i vari DAW. Cfr. manuale DAW per ciascuna funzione e sovrapporre il modello di etichettatura fornito in conformità a quello attuale per l'utilizzo del DAW. La seguente descrizione si basa sulle funzioni attive per Apple Logic™.

Dopo aver acceso il dispositivo, selezionare la modalità Logic Pro premendo il pulsante "LogicPro". Si noti che se è stata selezionata la modalità LogicPro sul Platform M+, il Platform B+ passerà automaticamente a tale modalità. Si potrà poi apporre l'overlay in silicone di LogicPro sul Platform B+.

**(Nota: le serie di piattaforme supportano l'emulazione MackieControl e HUI Universal. Quindi, supporteranno qualsiasi DAW con protocollo MCP o HUI integrato. Utilizzare l'overlay "User-Define" per etichettare tutte le funzioni dei pulsanti se l'overlay in silicone DAW non è incluso.)**

## 1) Sezione di selezione della modalità DAW

Selezionare "MCP", "HUI" o "LogicPro" sulla piattaforma M+ in base alla propria DAW. Di seguito si trova l'elenco che mostra la modalità appropriata selezionata per DAW diverse.

1. Nuendo/Cubase – MCP
2. Digital Performer – MCP
3. FL Studio – MCP
4. SamplitudePro – MCP
5. Reaper – MCP
6. Studio One – MCP
7. Bitwig – MCP
8. Reasons – MCP
9. Sonar – MCP
10. Audition – MCP
11. Ableton Live – MCP

12. LogicPro – Logic Pro
13. ProTools - HUI

*(Nota: Platform B+ passerà automaticamente alla stessa modalità DAW di Platform M+, se entrambi sono collegati.)*

*(Nota: Platform M+ / Platform B+ memorizzerà l'ultima modalità DAW selezionata e reinserisce la stessa modalità pochi secondi dopo che è stato acceso. (ad es. la selezione della modalità DAW non è necessaria se l'ultima modalità è stata utilizzata.)*

Per le descrizioni delle funzioni seguenti, posizionare l'overlay in silicone di LogicPro su Platform B+.

## 2) Assegnazione VPot

**Nota:** Queste funzioni vengono sempre utilizzate in combinazione con le manopole dei canali.

<b>Pulsante Traccia</b>	Attiva la funzione Traccia. Ruotare la manopola del canale per regolare il volume della traccia corrispondente
<b>Pulsante Invia</b>	Premere per assegnare un invio per ciascuna traccia. Ruotare il canale per regolare il bus e premere per effettuare l'assegnazione.
<b>Pulsante Pan/Surround</b>	Attiva la funzione Pan. Ruotare la manopola del canale per regolare il valore della funzione Pan.
<b>Pulsante Plug-in</b>	Premere per assegnare un plug-in per ciascuna traccia. Dopo aver assegnato un plug-in e aver effettuato l'accesso a una determinata schermata del plug-in, le altre manopole del canale saranno utilizzate per regolare i diversi parametri del plug-in. Inoltre, per alcuni plug-in, saranno utilizzati anche i 4 pulsanti freccia che circondano i pulsanti di zoom.
<b>Pulsante EQ</b>	Premere per regolare il valore dell'equalizzatore di ciascuna traccia. Dopo aver aperto la schermata EQ, le altre manopole del canale saranno utilizzate per regolare i vari parametri dell'equalizzatore. Anche i 4 pulsanti freccia saranno attivi.
<b>Pulsante Strumento</b>	Premere per regolare i parametri delle tracce degli strumenti.

## 3) Pulsanti di controllo definiti dall'utente (F1-F8)

<b>Pulsanti F1-F8</b>	Fare riferimento all'elenco delle funzioni nel presente manuale per le funzioni di questi pulsanti.
-----------------------	---

## 4) Vista globale

**Nota:** Il pulsante "Vista globale" deve essere prima attivato per poter utilizzarne le funzioni.

<b>Pulsante Vista globale</b>	Attivare questo pulsante per accedere alla modalità Vista globale e utilizzare le funzioni seguenti.
<b>Pulsante Tracce MIDI</b>	Premere per accedere alla vista "Tracce MIDI". Solo le tracce "MIDI" appariranno nella schermata.

<b>Pulsante Input</b>	Press to enter the “Inputs” view. Only the “Inputs” tracks will appear on the screen.
<b>Pulsante Tracce audio</b>	Premere per accedere alla vista “Input”. Solo le tracce di “Input” appariranno nella schermata.
<b>Pulsante Strum. Audio</b>	Premere per accedere alla vista “Tracce audio”. Solo le tracce “Audio” appariranno nella schermata.
<b>Pulsante AUX</b>	Premere per accedere alla vista “AUX”. Solo le tracce “AUX” appariranno nella schermata.
<b>Pulsante Bus</b>	Premere per accedere alla vista “Bus”. Solo le tracce “Bus” appariranno nella schermata.
<b>Pulsante Uscite</b>	Premere per accedere alla vista “Uscite”. Solo le tracce “Uscite” saranno visibili nella schermata.
<b>Pulsante Utente</b>	Premere per accedere alla vista “Utente”. Solo le tracce “Utente” appariranno nella schermata.

## 5) Utilities

<b>Salvare</b>	Attivare la funzione salva DAW.
<b>Annullare</b>	Attivare la funzione annulla DAW.
<b>Pulsante Cancel</b>	Attivare funzione annulla DAW.
<b>Pulsante Enter</b>	Attivare funzione accedi DAW.

## 6) Sezione Automazione

<b>TRIM</b>	Al momento non assegnato.
<b>TOUCH button</b>	Premere per impostare l'automazione della traccia selezionata su Touch.
<b>LATCH</b>	Premere per impostare l'automazione della traccia selezionata su Latch.
<b>GROUP</b>	Al momento non assegnato.

## 7) Sezione tasti di controllo fader motorizzati

<b>Tasto FLIP</b>	Premere il tasto FLIP per modificare le impostazioni dei parametri dei fader motorizzati e delle manopole di codifica rotanti.
-------------------	--

## 8) Sezione tasti di controllo zoom

<b>Tasto ZOOM</b>	Il tasto ZOOM viene tipicamente utilizzato congiuntamente ai tasti FRECCIA sotto descritti per effettuare lo zoom avanti e indietro nelle finestre nella applicazione DAW.
<b>Tasto SU</b>	Il tasto SU viene utilizzato per navigare (movimento in su) all'interno dell'interfaccia grafica dell'utente (GUI) dell'applicazione DAW. O ingrandire verticalmente quando si usa insieme alla funzione Zoom.

<b>Tasto GIU</b>	Il tasto GIU viene utilizzato per navigare (movimento in giu) all'interno dell'interfaccia grafica dell'utente (GUI) dell'applicazione DAW. O ridurre verticalmente quando si usa insieme alla funzione Zoom.
<b>Tasto SINISTRA</b>	Il tasto SINISTRA viene utilizzato per navigare (movimento a sinistra) all'interno dell'interfaccia grafica dell'utente (GUI) dell'applicazione DAW. O ingrandire orizzontalmente quando si usa insieme alla funzione Zoom.
<b>Tasto DESTRA</b>	Il tasto DESTRA viene utilizzato per navigare (movimento a destra) all'interno dell'interfaccia grafica dell'utente (GUI) dell'applicazione DAW. O ingrandire orizzontalmente quando si usa insieme alla funzione Zoom.

## 9) Modifica sezione

<b>Pulsante Shift</b>	Premere per passare al livello successivo di pulsanti funzione F9-F16.
<b>Option button</b>	Un pulsante a combinazione. Utilizzare con pulsanti diversi per eseguire varie funzioni. Fare riferimento all'elenco delle funzioni nel presente manuale.
<b>Alt button</b>	Un pulsante a combinazione. Utilizzare con pulsanti diversi per eseguire varie funzioni. Fare riferimento all'elenco delle funzioni nel presente manuale.
<b>Controllo</b>	Un pulsante a combinazione. Utilizzare con pulsanti diversi per eseguire varie funzioni.

## 10) Sezione display

<b>Nome / valore</b>	Premere per cambiare il display LCD da nome a valore, viceversa. Alcune delle funzioni come Pan, è possibile commutare il display LCD tra il nome del canale Pan e il valore Pan.
<b>Pulsante SMPTE/ BBT</b>	Questo display mostra la posizione di tempo del progetto sia in formato SMPTE che BBT.

## 11) Other section

<b>Drop</b>	Commuta Drop.
<b>Replace</b>	Commuta Replace.
<b>Click</b>	Commuta metronomo riproduzione o registrazione.
<b>Solo</b>	Commuta traccia singola (della traccia selezionata).
<b>Pulsante Marker Nudge</b>	Commuta in modalità Marker piccolo.
	Commuta in modalità Nudge piccolo.

# Layout del Pannello Laterale



## 1. Porta USB

Collegare Platform B+ al proprio Mac/PC tramite questa porta USB in caso di uso come dispositivo autonomo, altrimenti il collegamento non è necessario.

## 2. Porte di estensione

Collegare Platform B+ a Platform M+ con il cavo in dotazione.


## 3. Adattatore di alimentazione 12V/0.35A

Collegare in questo punto l'adattatore di alimentazione fornito.

**(Nota:** Platform B+ non è in grado di funzionare senza aver collegato l'adattatore di alimentazione fornito. L'alimentazione a bus USB non è in grado di fornire sufficiente alimentazione per Platform B+.)

# Operazioni preliminari

(Connected with Platform M+ and Platform X+ (1 - 3 units))

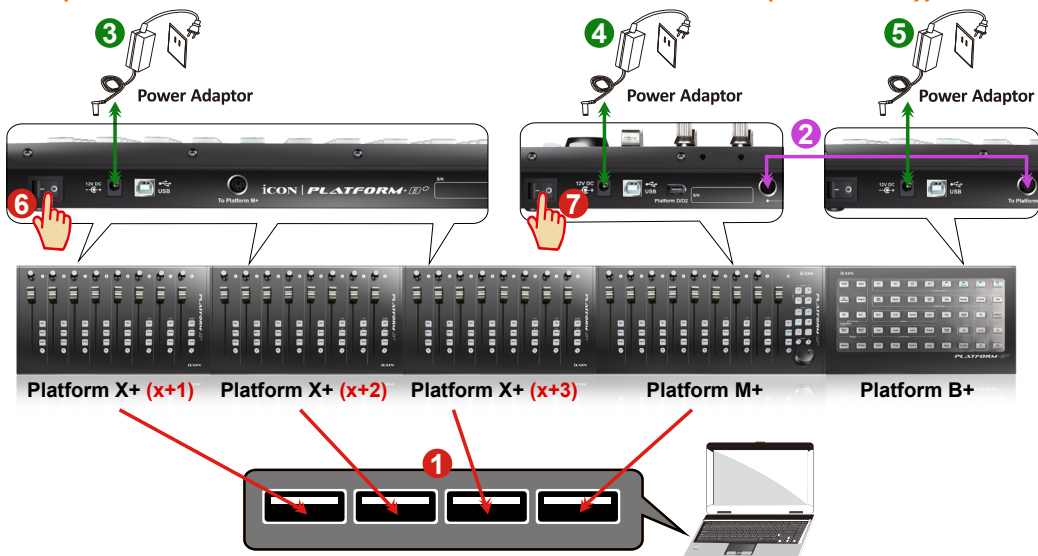

## 2 Collegare Platform B+ a Platform M+ con il cavo in dotazione.

Utilizzare il cavo fornito per connettere le unità Platform B+ e Platform M+ tramite le porte di espansione.

## 1 Selezione della DAW su Platform M+

Accendere Platform M+ e selezionare la DAW, come descritto nelle istruzioni seguenti.

Premere uno dei 4 pulsanti modalità in base alla DAW come nella tabella sottostante.


MCP	LogicPro	HUI	UserDefine
1. Nuendo/Cubase	Logic Pro	ProTools	User self mapping with iMap
2. Digital Performer			
3. FL Studio			
4. SamplitudePro			
5. Reaper			
6. Studio One			
7. Bitwig			
8. Reasons			
9. Sonar			
10. Audition			
11. Ableton Live			

**(Suggerimento:** Platform M+ memorizzerà l'ultima modalità DAW selezionata e reinserisce la stessa modalità pochi secondi dopo che è stato acceso. (ad es. la selezione della modalità DAW non è necessaria se l'ultima modalità è stata utilizzata.)


Poi, accendere Platform B+ che passerà alla stessa modalità DAW di Platform M+.



## 8 Platform X+ (X+1)

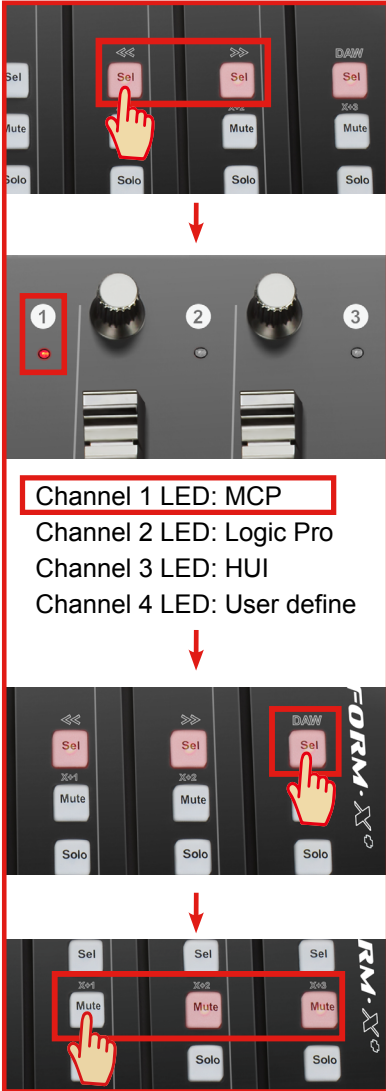

## 9 Platform X+ (X+2)

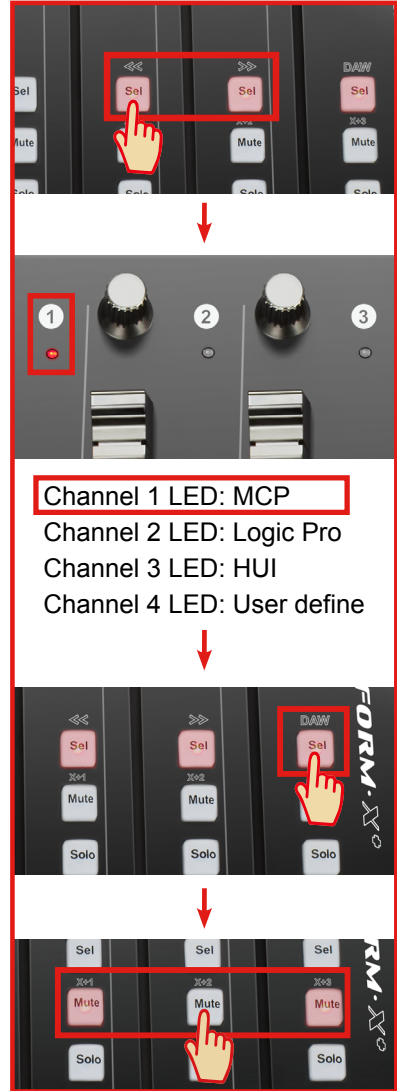

## 10 Platform X+ (X+3)



## 11 Platform M+



## 12 Platform B+









### 13. Impostazione DAW




Il Platform M+, Platform X+ e Platform B+ ha un protocollo Mackie Control, LogicPro e HUI integrato, che eviterà notevoli problemi di configurazione del dispositivo al proprio DAW. Basta aggiungere il dispositivo "Mackie Control" o "HUI" sotto "MIDI Controller" sul proprio software. Dopo che il dispositivo Mackie Control o HUI è stato aggiunto, selezionare il controller Platform B+ come proprio dispositivo di ingresso e di uscita MIDI in DAW.

*(Nota: Solo Platform M+ sarà visibile nell'elenco hardware, in quanto Platform B+ sarà riconosciuto come parte di Platform M+.)*





*(Suggerimento: È possibile anche fare riferimento al sito web [www.iconproaudio.com](http://www.iconproaudio.com), dove è possibile trovare illustrazioni di configurazione per i diversi DAW nella sezione "Demo Configurazione" di della pagina prodotto di ogni controller (Platform B+).*

*Per DAW non indicati nella lista demo configurazione, fare riferimento la manuale utente del proprio software per la configurazione dell'hardware.)*

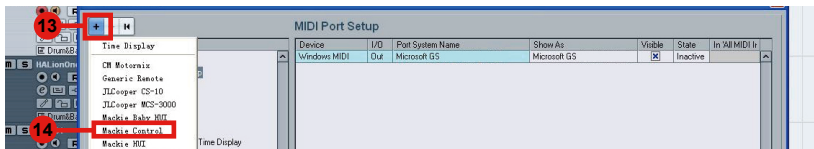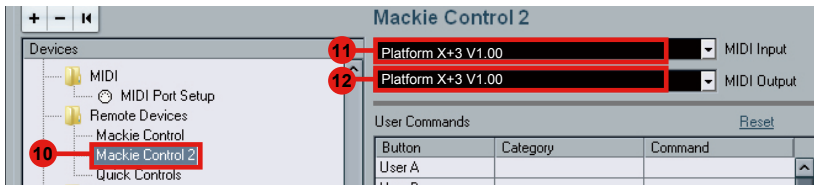
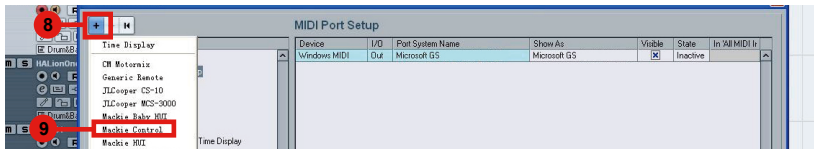
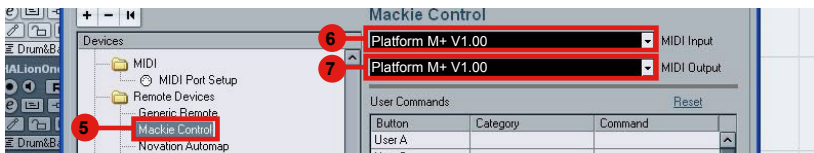
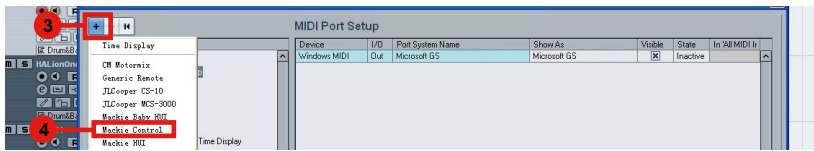
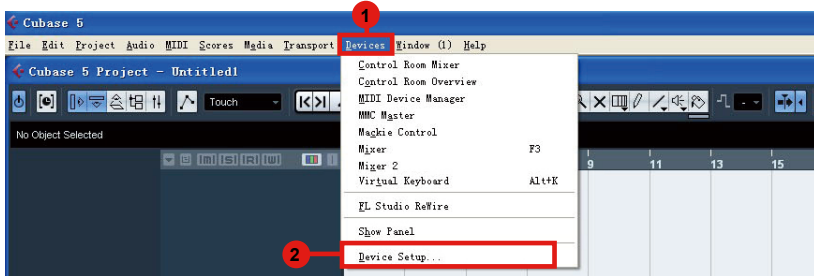





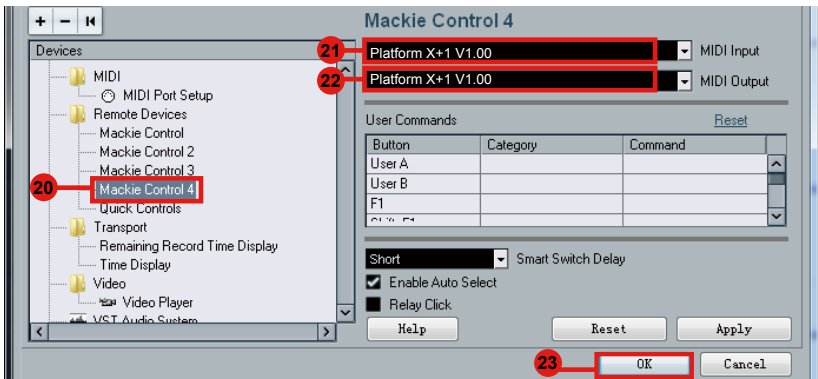
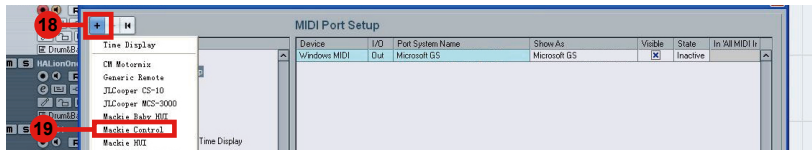
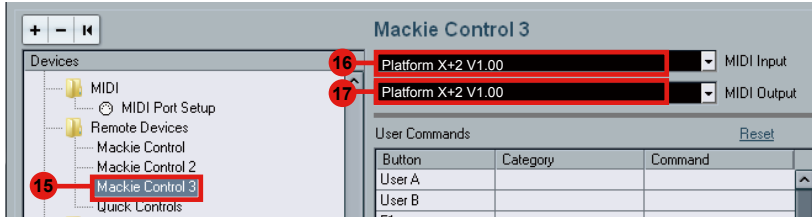


# Pro Tools

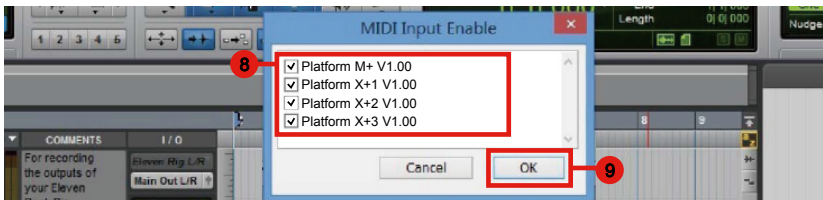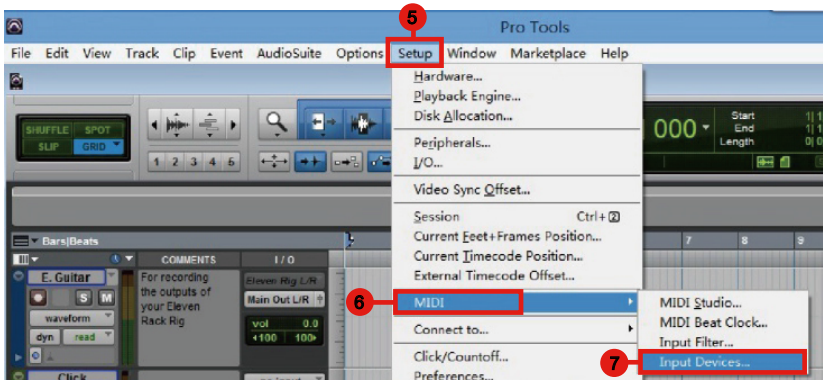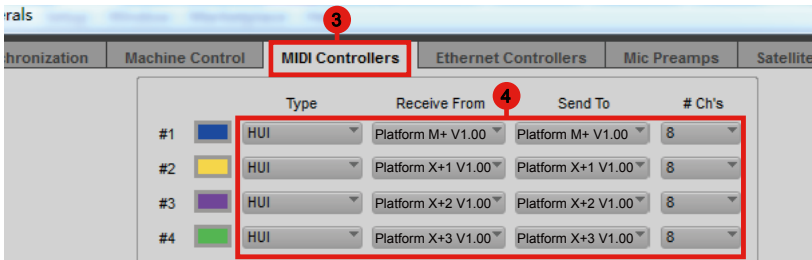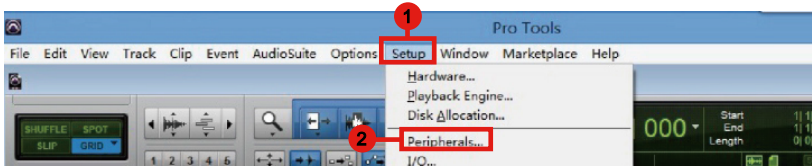



# Logic pro

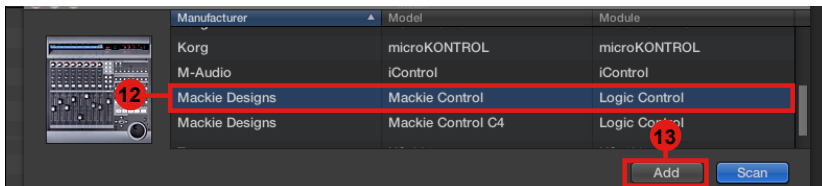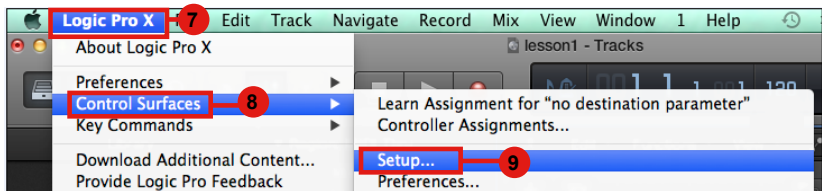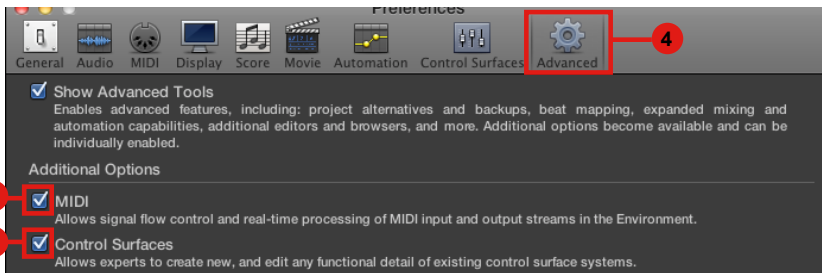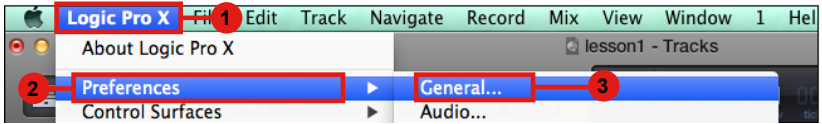

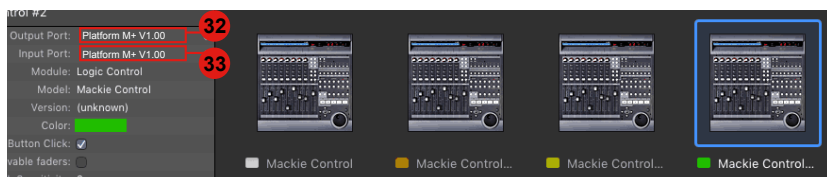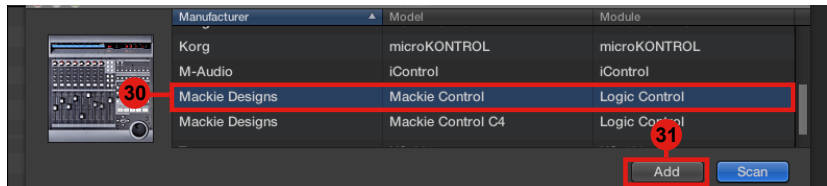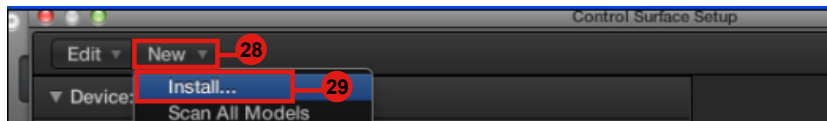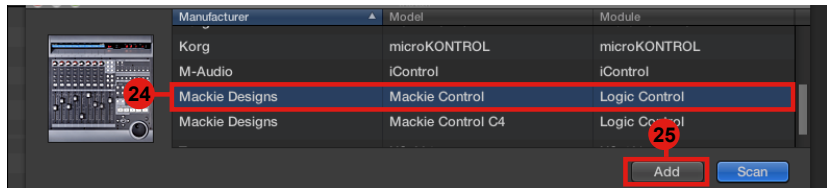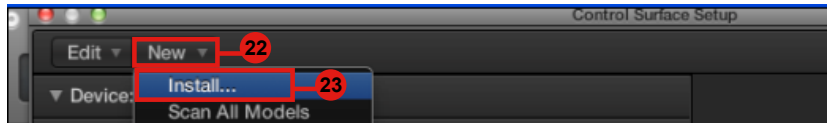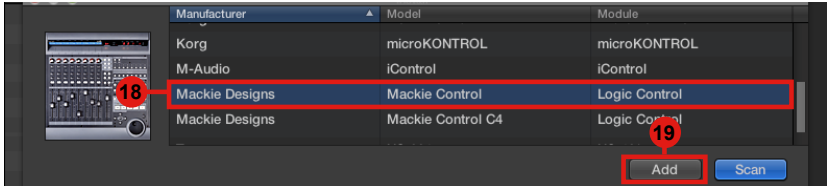




# Ableton Live

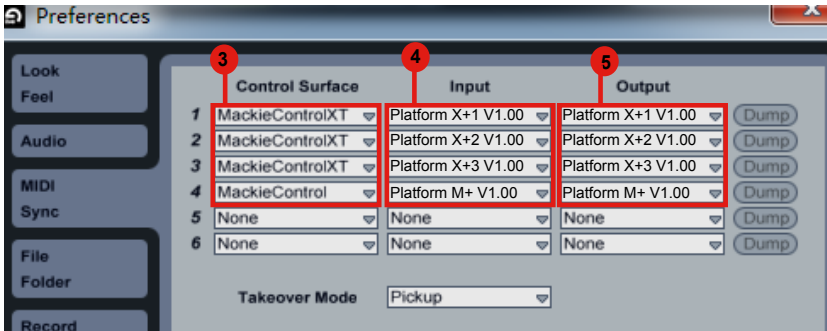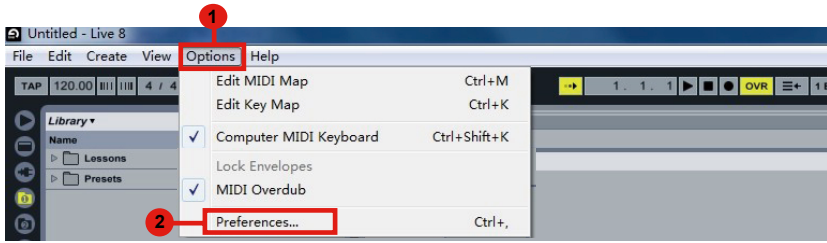


# Operazioni preliminari (Connessione a Platform M+)

## Collegamento del dispositivo di controllo Platform B+

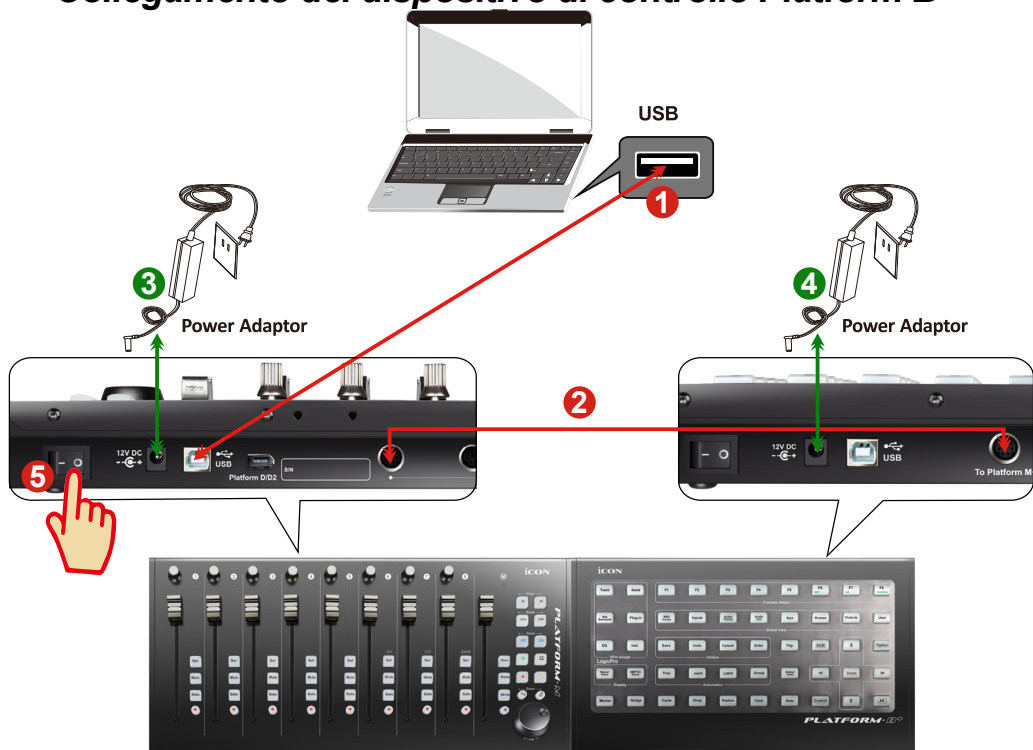

### 6 Platform M+

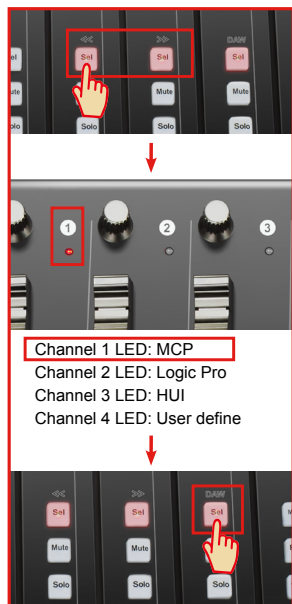

### 7 Platform B+



## 2 Collegare Platform B+ a Platform M+ con il cavo in dotazione.

Utilizzare il cavo fornito per connettere le unità Platform B+ e Platform M+ tramite le porte di espansione.

## 6 Selezione della DAW su Platform M+

Accendere Platform M+ e selezionare la DAW, come descritto nelle istruzioni seguenti.

Press one of the 4 mode button according to your DAW as the below table.

MCP	LogicPro	HUI	UserDefine
1. Nuendo/Cubase	Logic Pro	ProTools	User self mapping with iMap
2. Digital Performer			
3. FL Studio			
4. SamplitudePro			
5. Reaper			
6. Studio One			
7. Bitwig			
8. Reasons			
9. Sonar			
10. Audition			
11. Ableton Live			

*(Suggerimento: Platform M+ memorizzerà l'ultima modalità DAW selezionata e reinserisce la stessa modalità pochi secondi dopo che è stato acceso. (ad es. la selezione della modalità DAW non è necessaria se l'ultima modalità è stata utilizzata.)*

*Poi, accendere Platform B+ che passerà alla stessa modalità DAW di Platform M+.*




## 8. Impostazione DAW

Il Platform M+ e Platform B+ ha un protocollo Mackie Control, LogicPro e HUI integrato, che eviterà notevoli problemi di configurazione del dispositivo al proprio DAW. Basta aggiungere il dispositivo "Mackie Control" o "HUI" sotto "MIDI Controller" sul proprio software. Dopo che il dispositivo Mackie Control o HUI è stato aggiunto, selezionare il controller Platform B+ come proprio dispositivo di ingresso e di uscita MIDI in DAW.




*(Nota: Solo Platform M+ sarà visibile nell'elenco hardware, in quanto Platform B+ sarà riconosciuto come parte di Platform M+.)*

*(Suggerimento: È possibile anche fare riferimento al sito web [www.iconproaudio.com](http://www.iconproaudio.com), dove è possibile trovare illustrazioni di configurazione per i diversi DAW nella sezione "Demo Configurazione" di della pagina prodotto di ogni controller (Platform B+).*





*Per DAW non indicati nella lista demo configurazione, fare riferimento la manuale utente del proprio software per la configurazione dell'hardware.)*

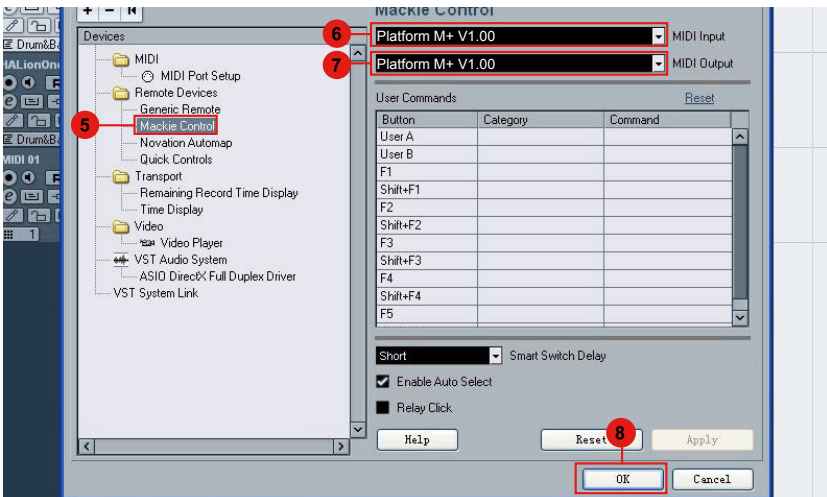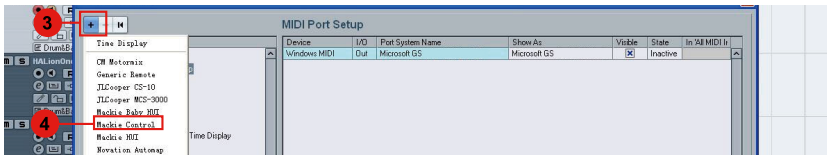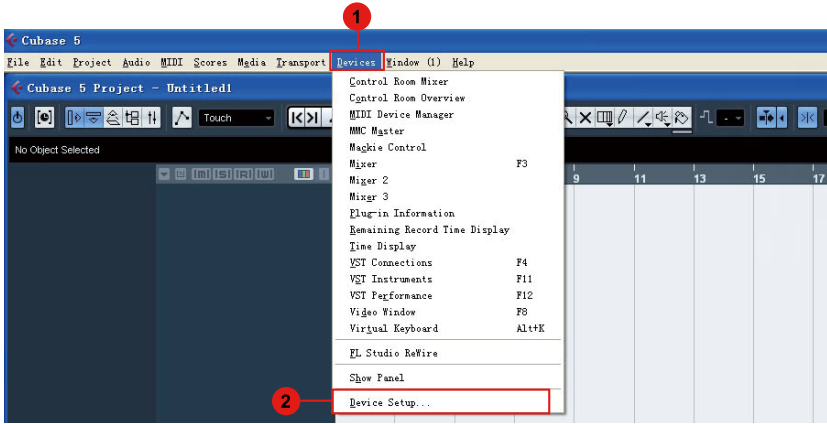


# Nuendo

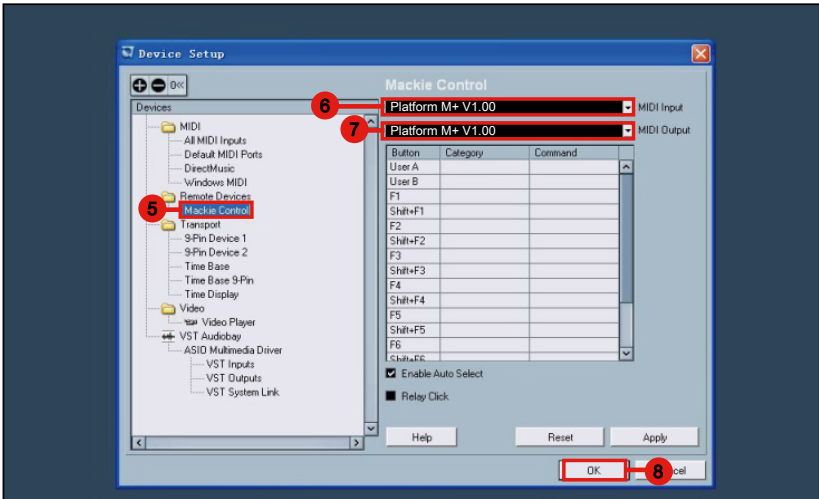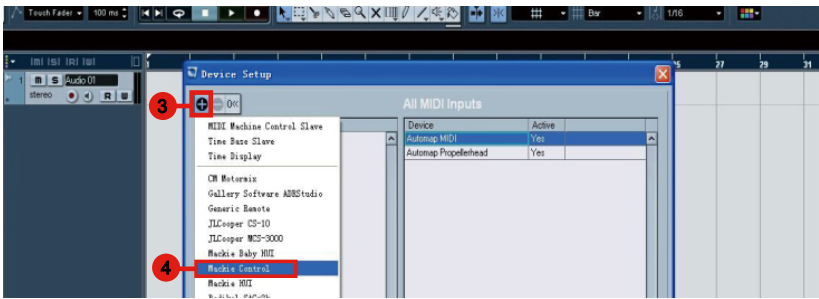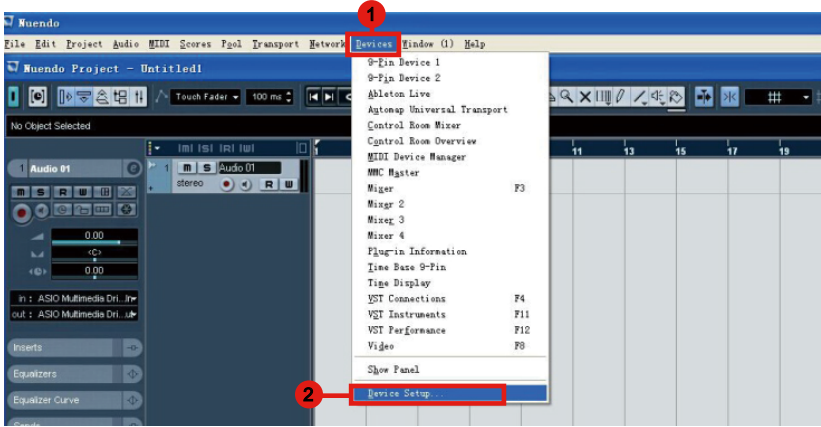





# Logic Pro

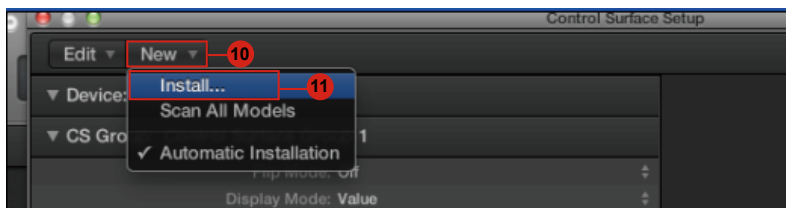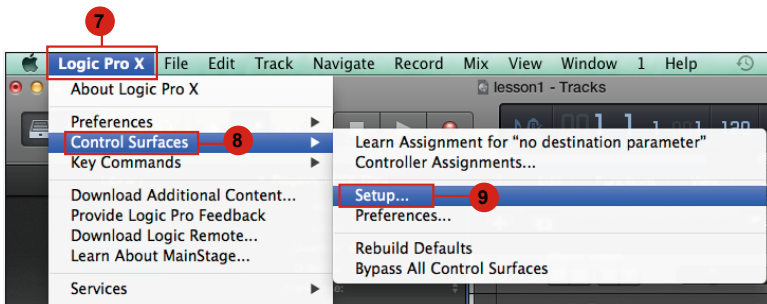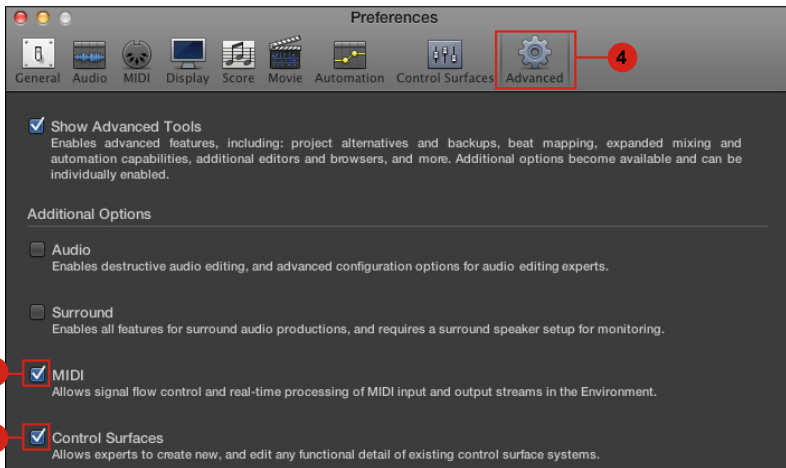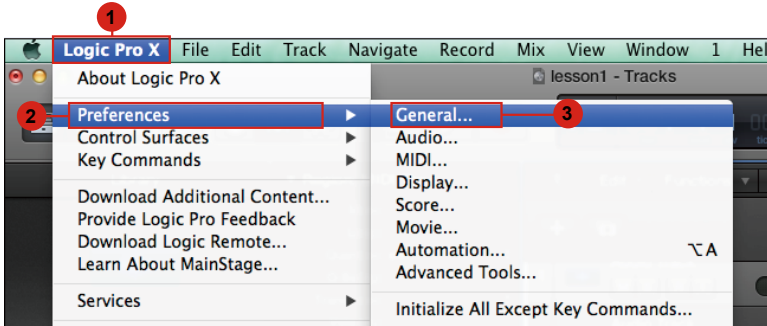



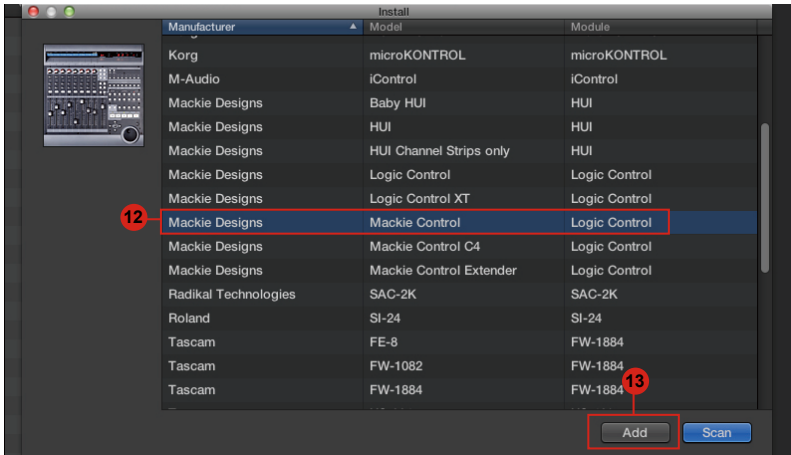


## Samplitude




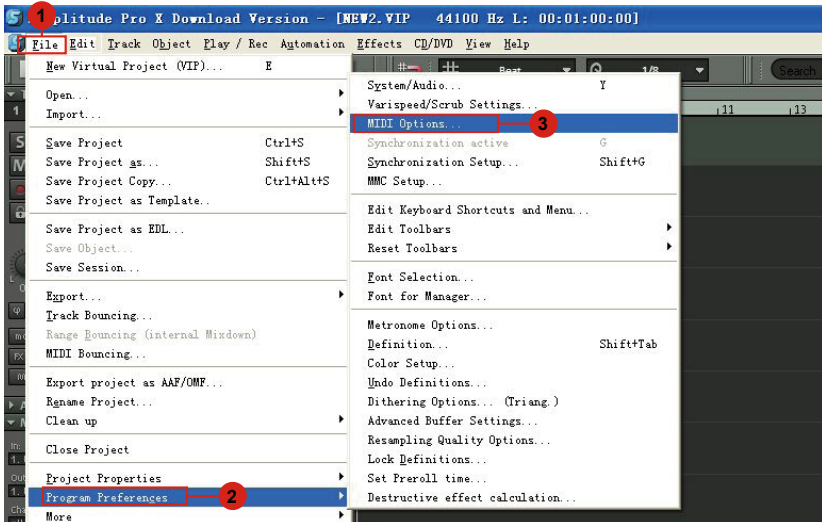


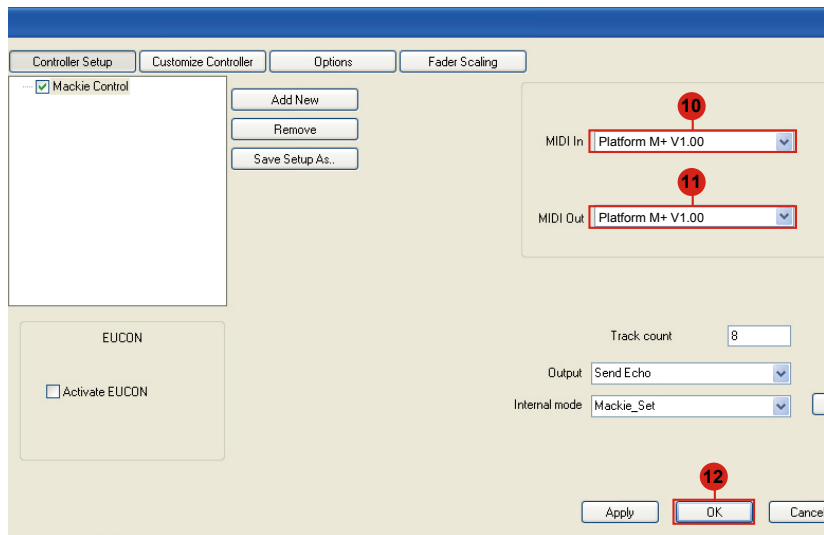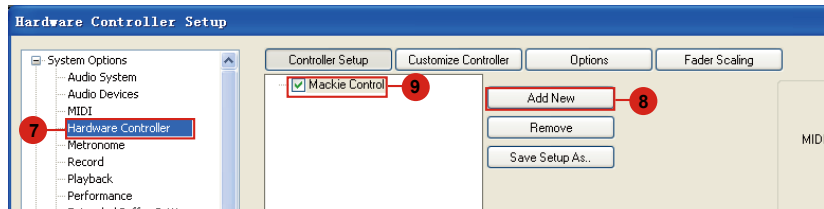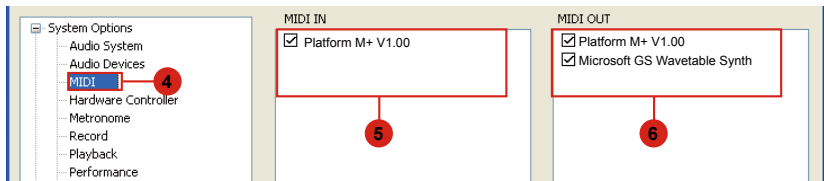






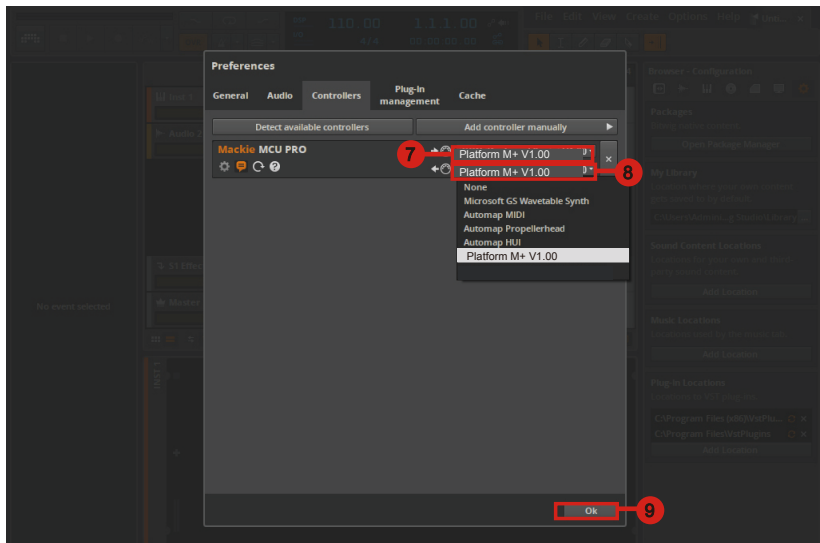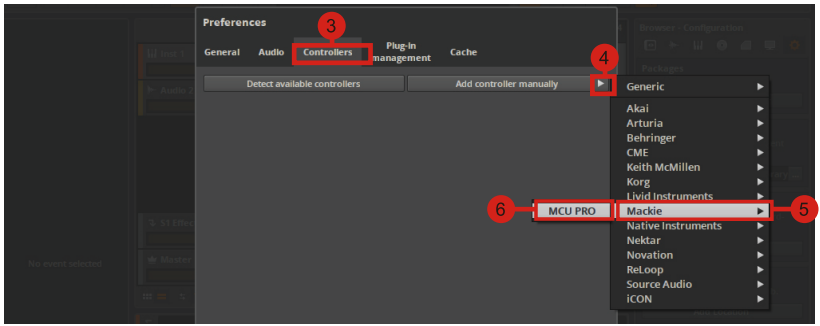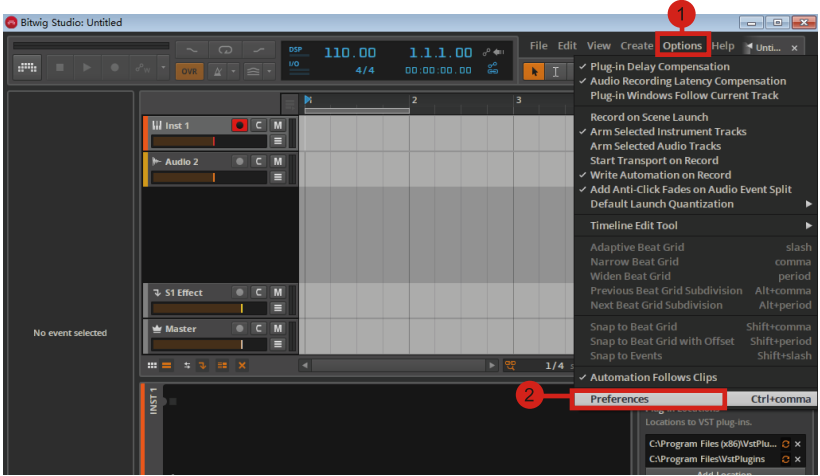




# Reason

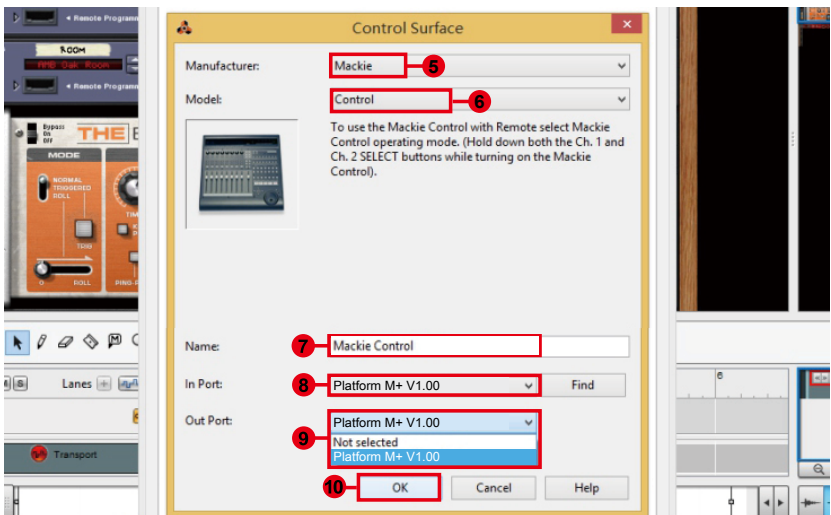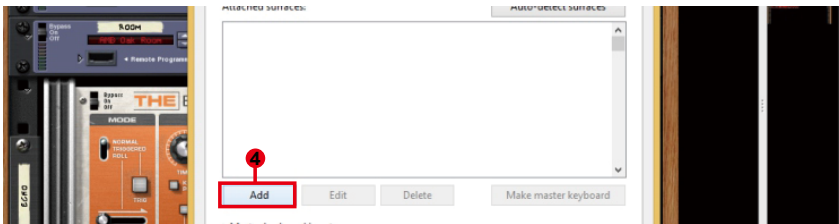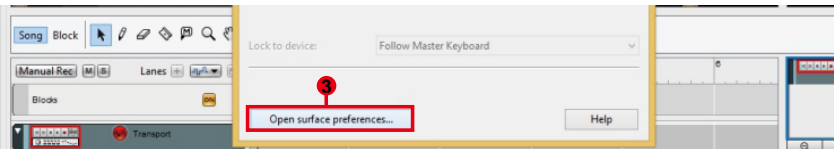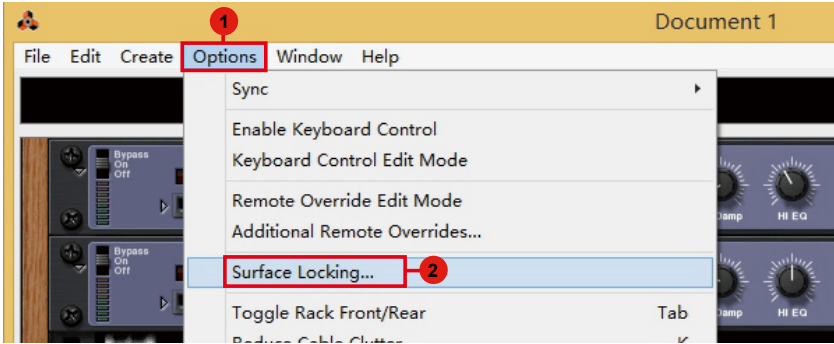



# Reaper

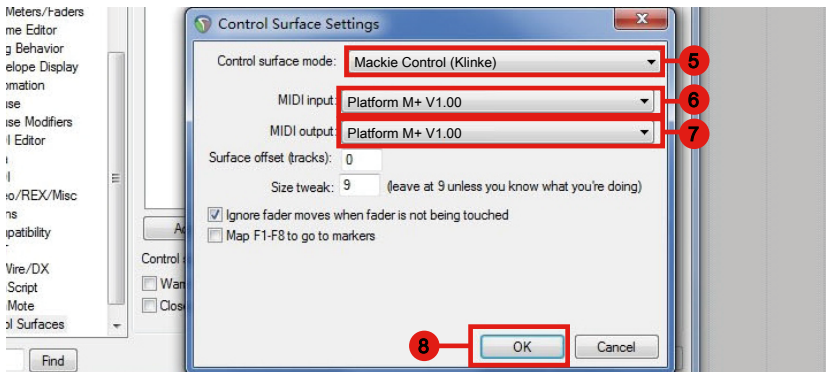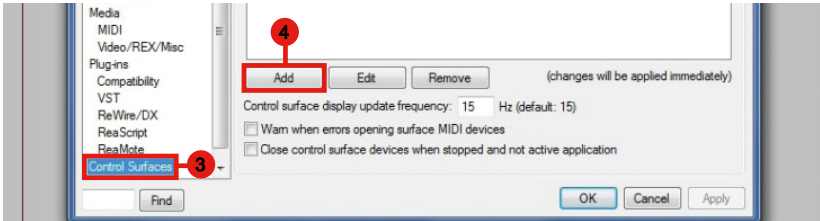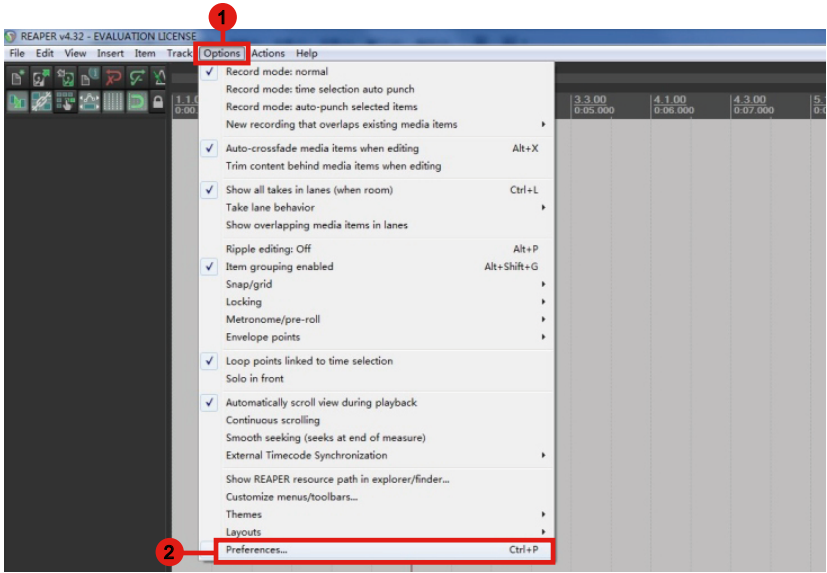






# Studio One

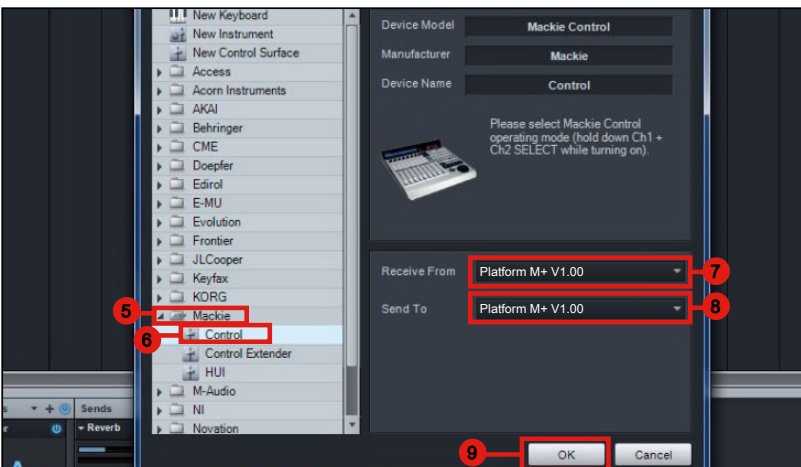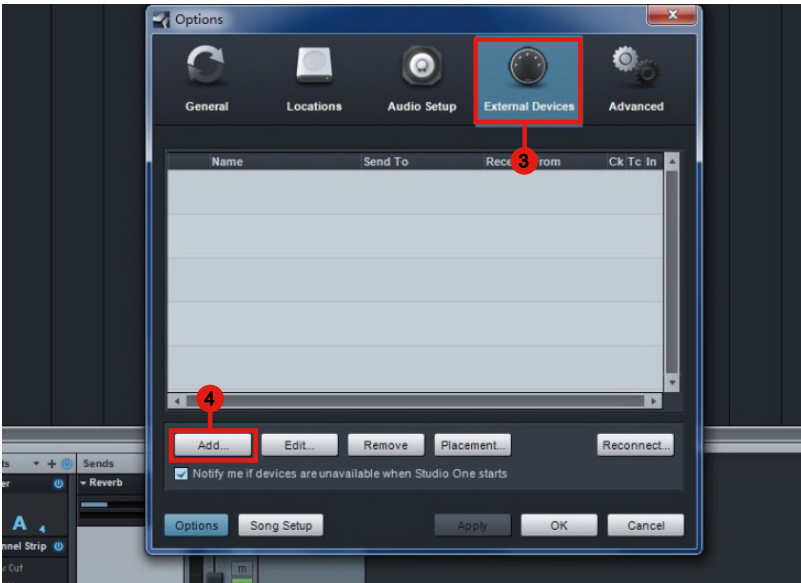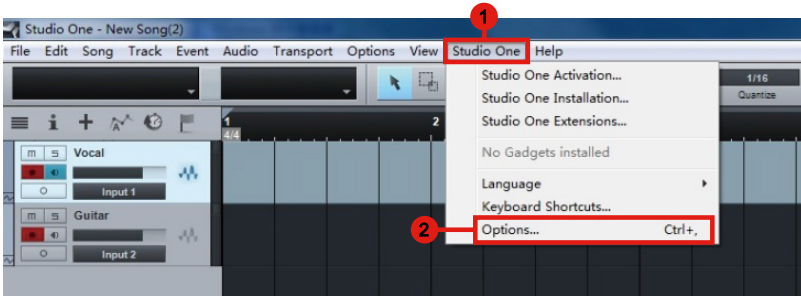


# Ableton Live

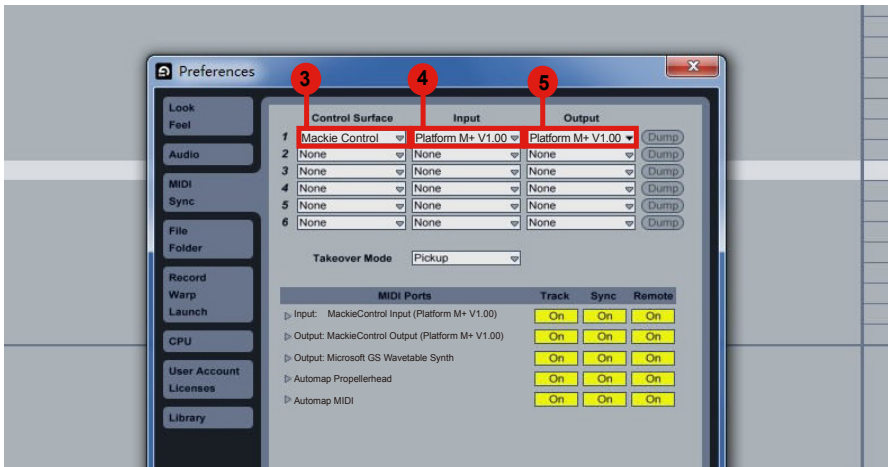
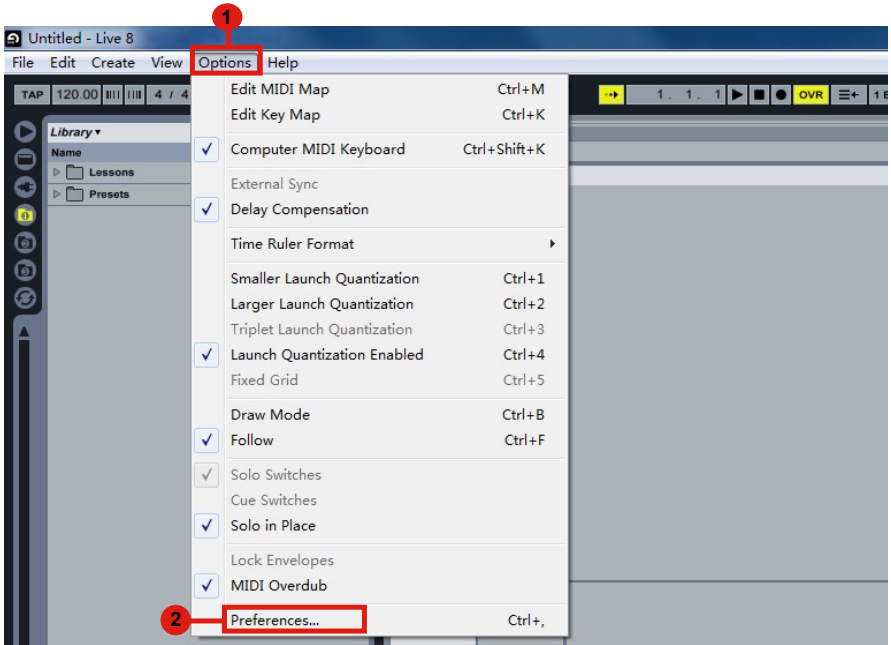


# Pro Tools

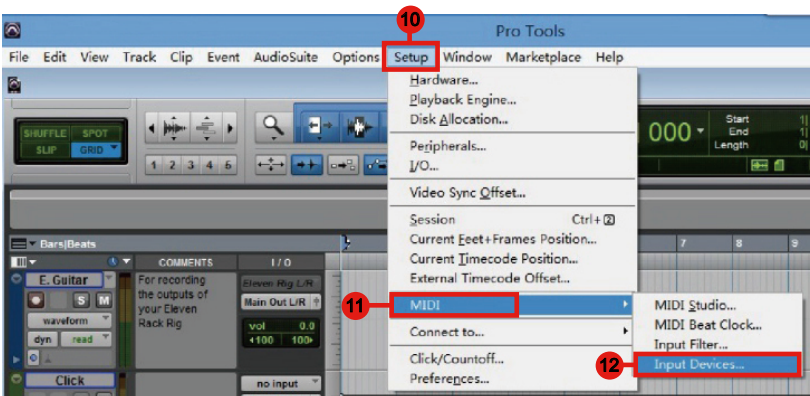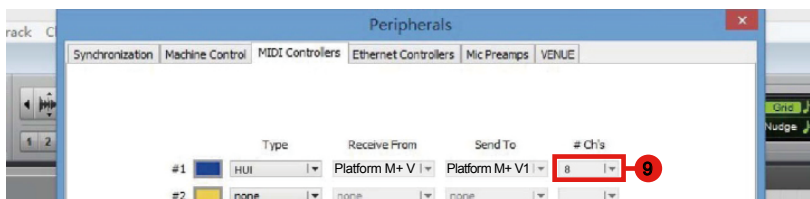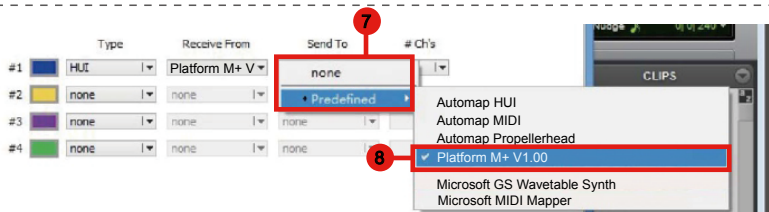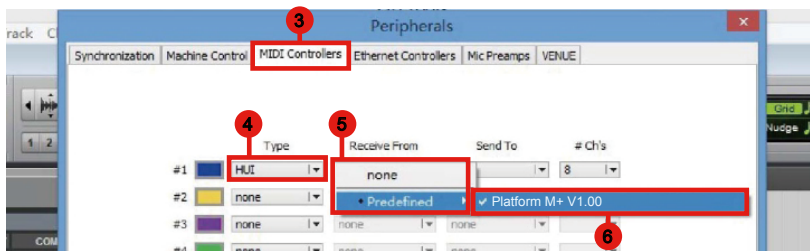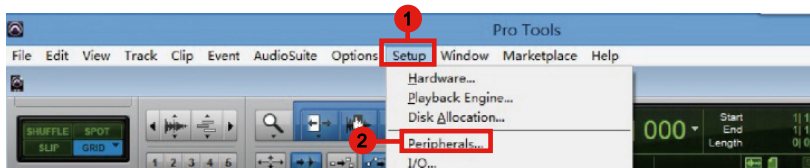



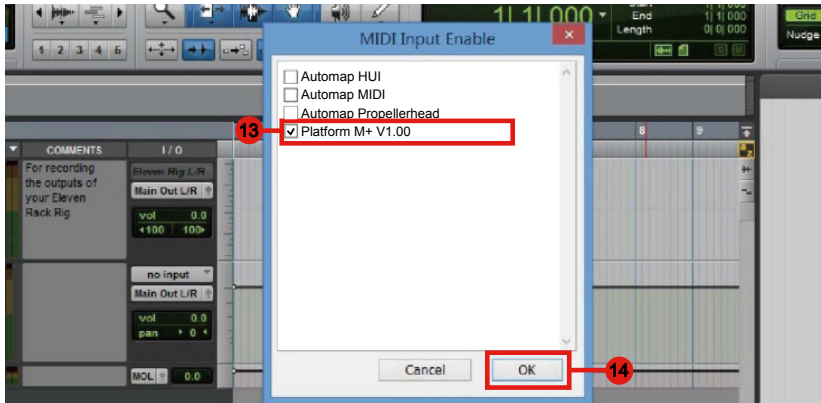


## Audition

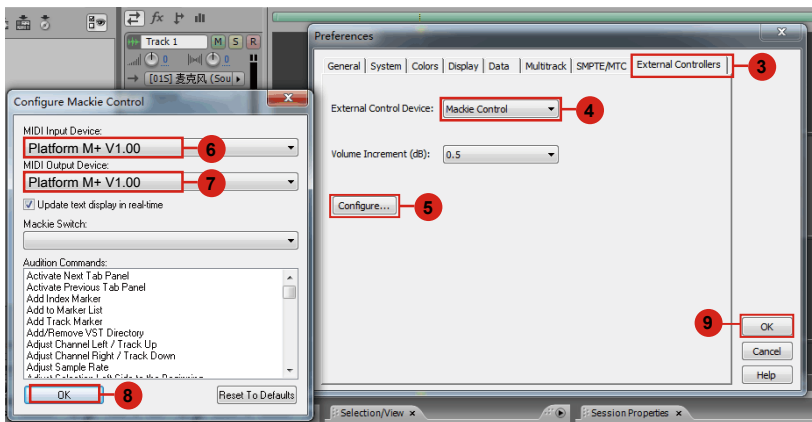
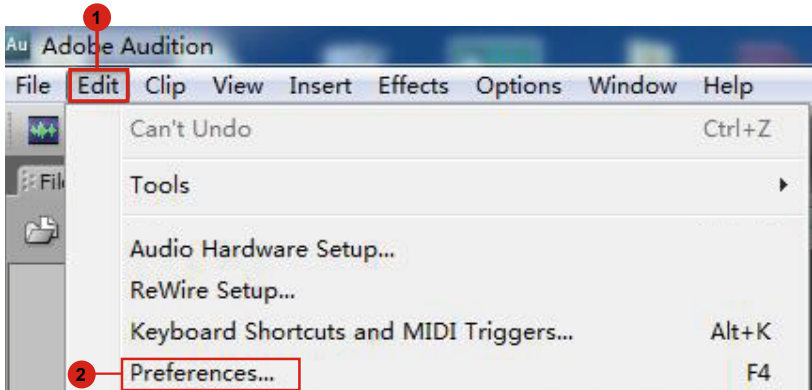




## Sonar

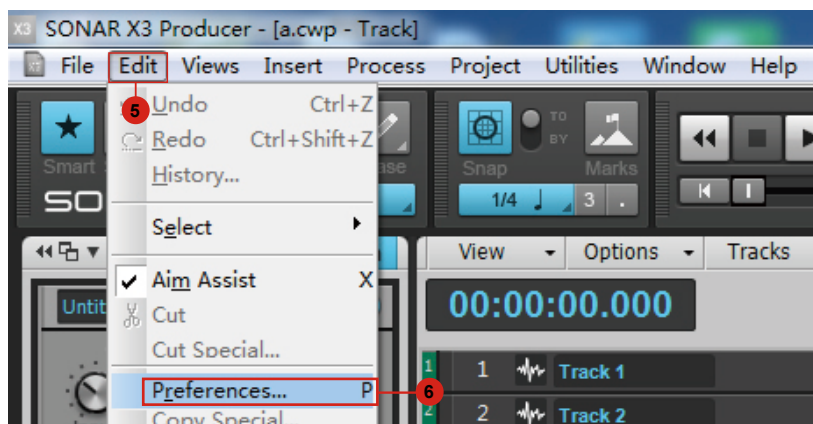
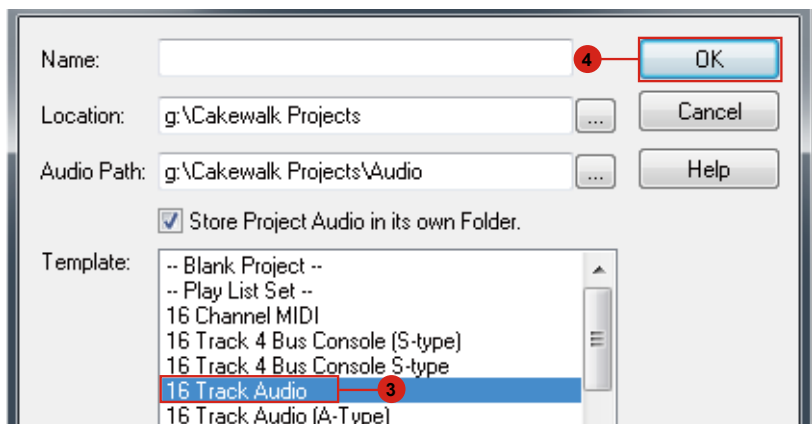
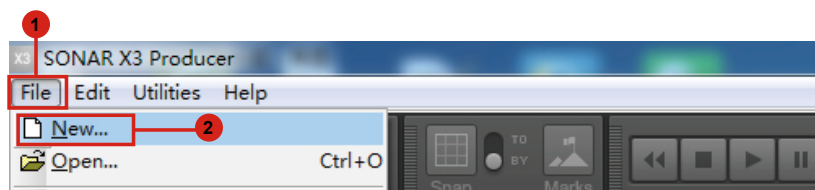




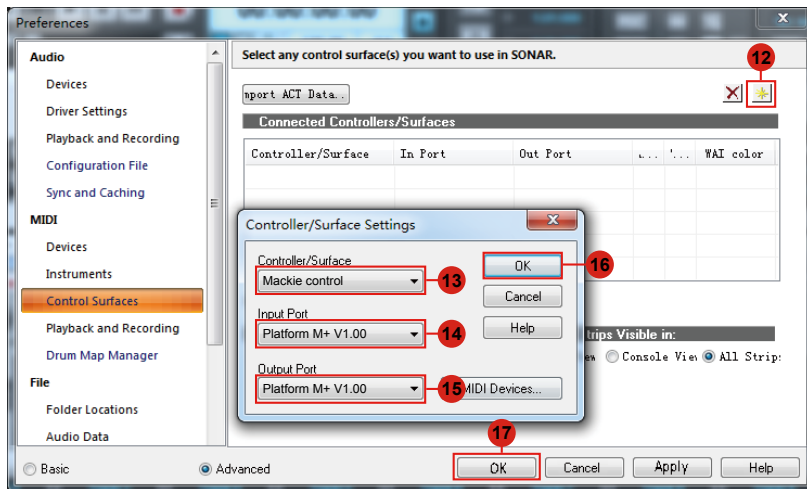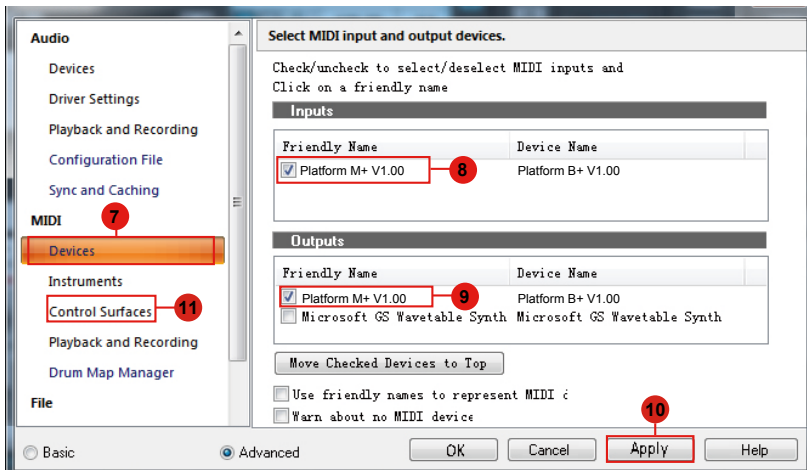

# Operazioni preliminari (Autonomo)

## Collegamento del dispositivo di controllo Platform B+

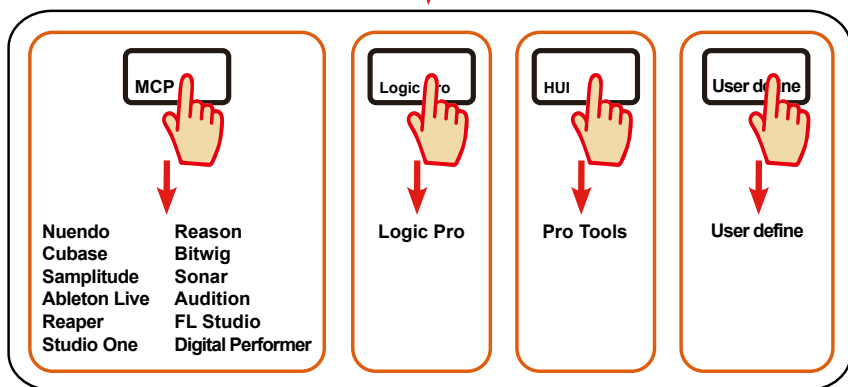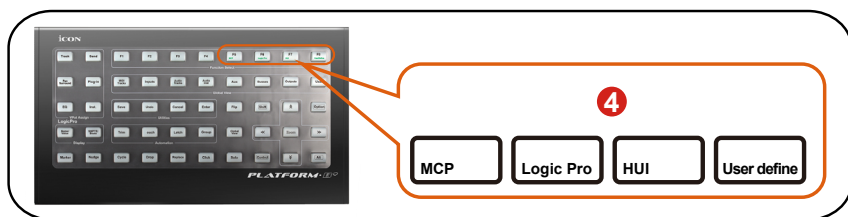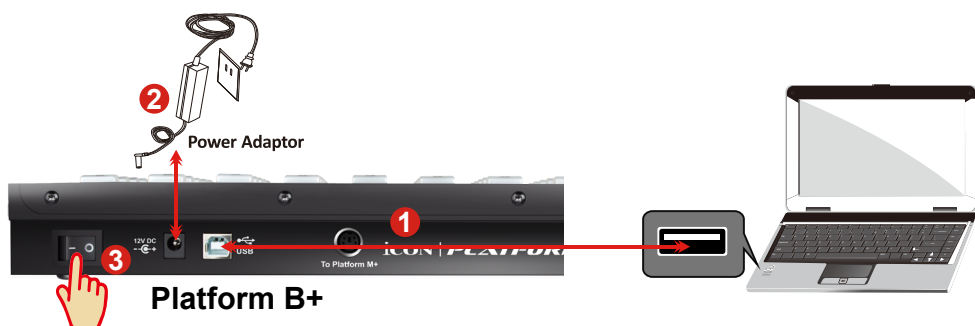

### 1 Collegare Platform B+ al Mac/PC mediante la porta USB.

Selezionare una porta USB sul Mac/PC e inserire l'estremità ampia (aperta) del cavo USB. Collegare l'altra estremità del cavo a Platform B+. Il Mac/PC dovrebbe rilevare automaticamente il nuovo hardware e comunicare che è pronto per l'utilizzo.

## 4 Selezionare il DAW per Platform B+

Premere il pulsante DAW in base alla DAW in uso, per selezionare la modalità DAW.

Premere uno dei 4 pulsanti modalità in base alla DAW come nella tabella sottostante.

MCP	LogicPro	HUI	UserDefine
1. Nuendo/Cubase	Logic Pro	ProTools	User self mapping with iMap
2. Digital Performer			
3. FL Studio			
4. SamplitudePro			
5. Reaper			
6. Studio One			
7. Bitwig			
8. Reasons			
9. Sonar			
10. Audition			
11. Ableton Live			




*(Suggerimento: Platform M+ memorizzerà l'ultima modalità DAW selezionata e reinserisce la stessa modalità pochi secondi dopo che è stato acceso. (ad es. la selezione della modalità DAW non è necessaria se l'ultima modalità è stata utilizzata.)*

## 5. Impostazione DAW




Il Platform B+ ha un protocollo Mackie Control, LogicPro e HUI integrato, che eviterà notevoli problemi di configurazione del dispositivo al proprio DAW. Basta aggiungere il dispositivo "Mackie Control" o "HUI" sotto "MIDI Controller" sul proprio software. Dopo che il dispositivo Mackie Control o HUI è stato aggiunto, selezionare il controller Platform B+ come proprio dispositivo di ingresso e di uscita MIDI in DAW.

*(Suggerimento: È possibile anche fare riferimento al sito web [www.iconproaudio.com](http://www.iconproaudio.com), dove è possibile trovare illustrazioni di configurazione per i diversi DAW nella sezione "Demo Configurazione" di della pagina prodotto di ogni controller (Platform B+).*





*Per DAW non indicati nella lista demo configurazione, fare riferimento la manuale utente del proprio software per la configurazione dell'hardware.)*

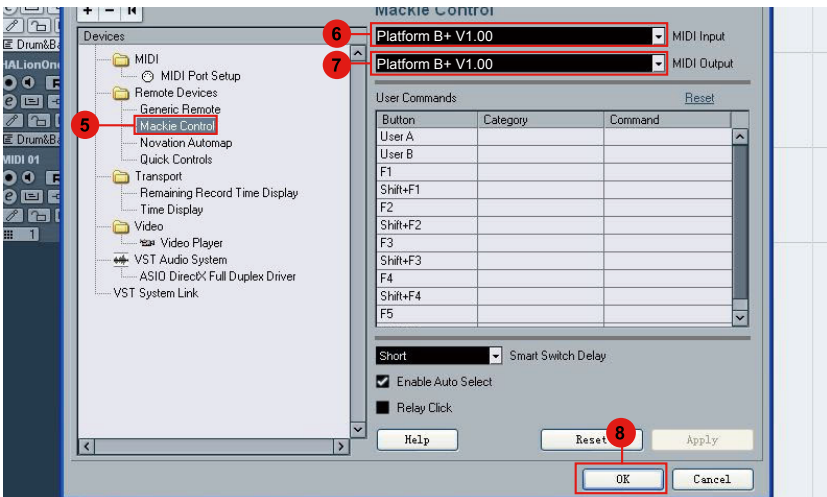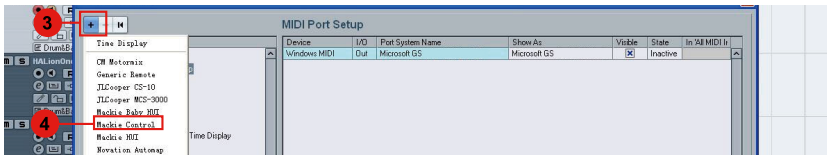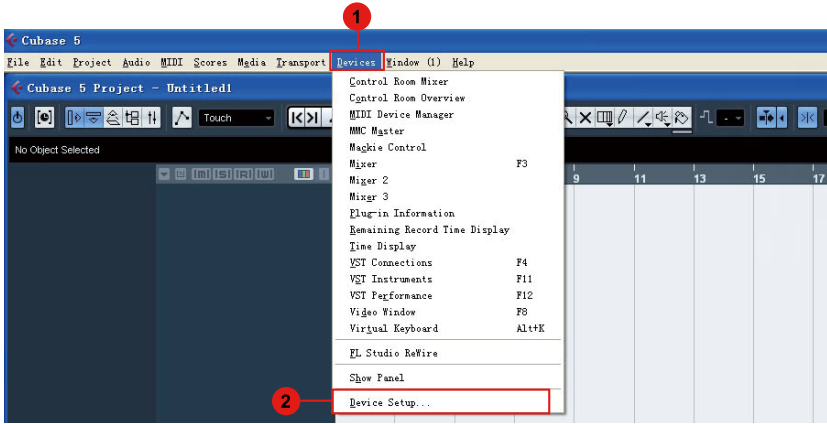


# Nuendo

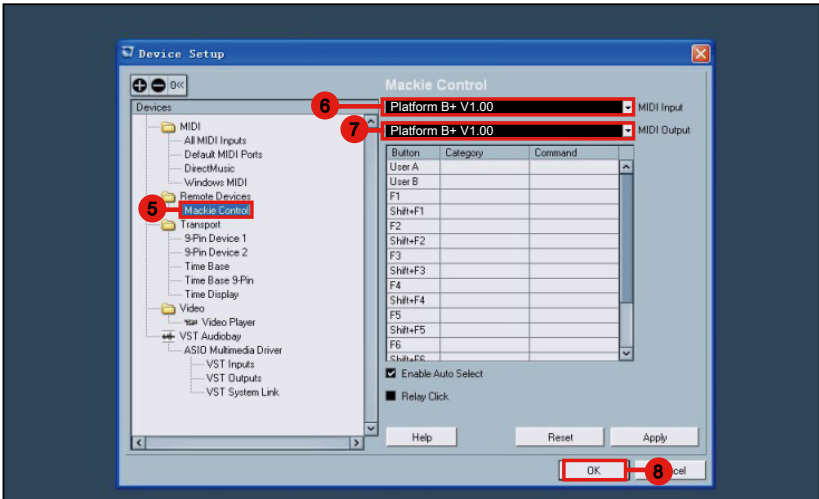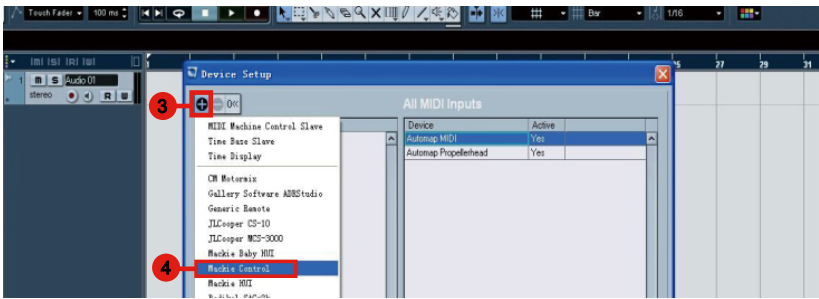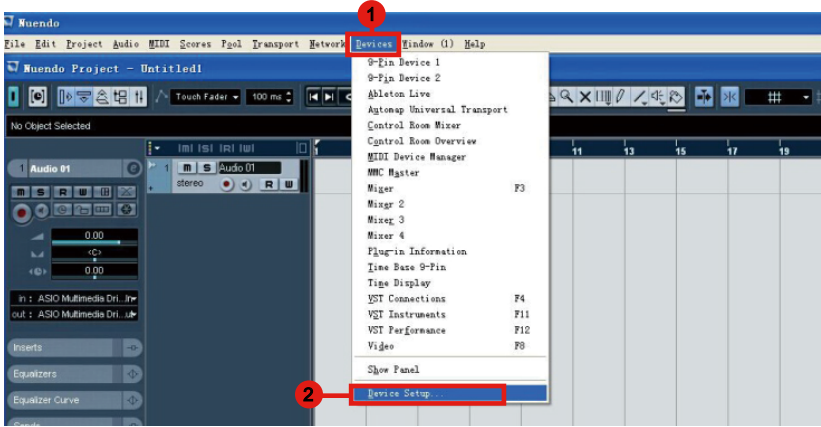





# Logic Pro

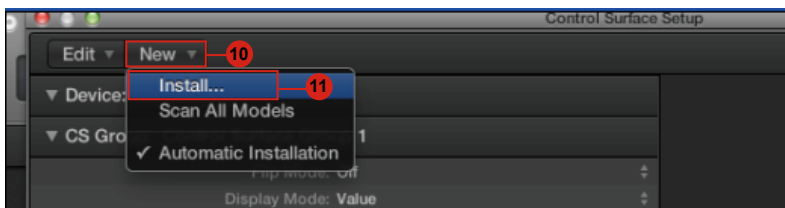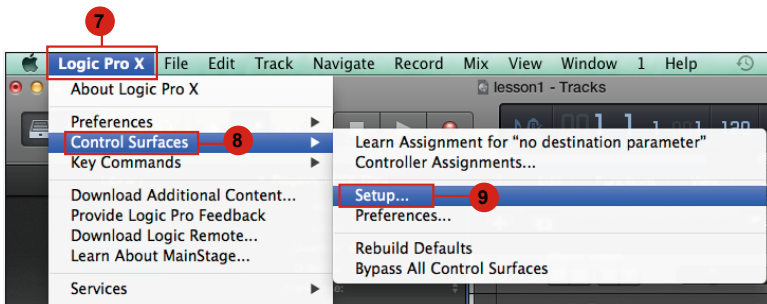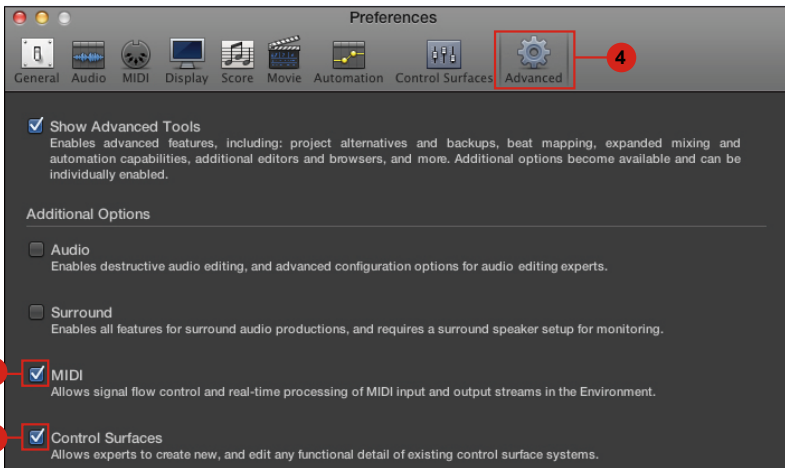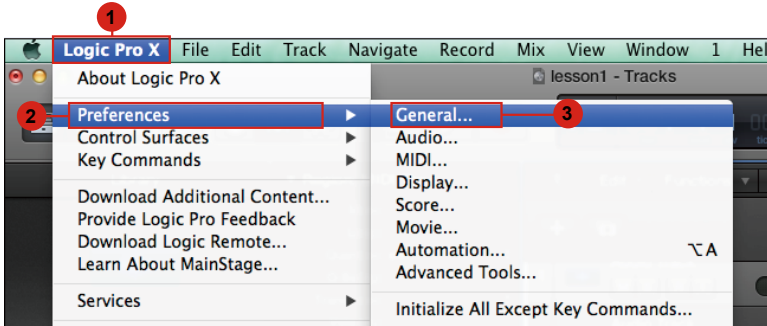



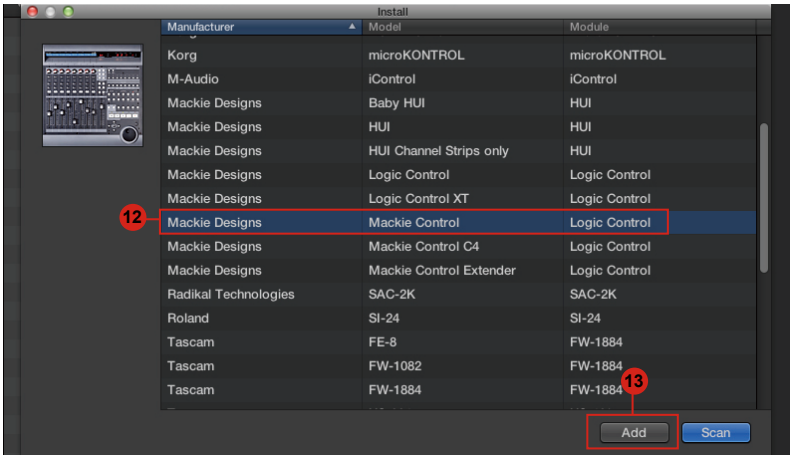


## Samplitude



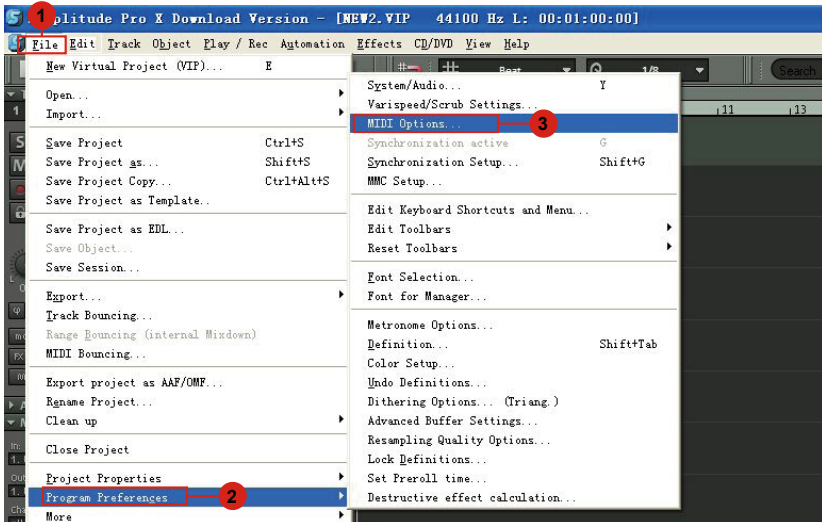


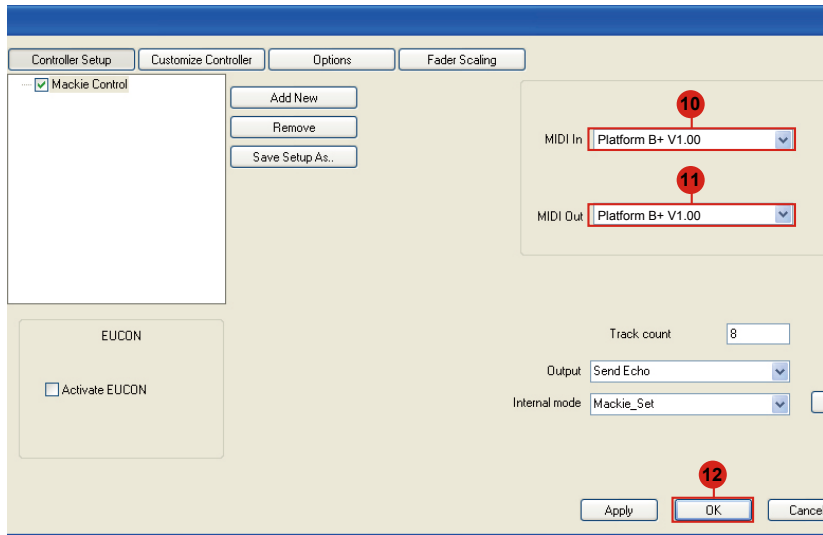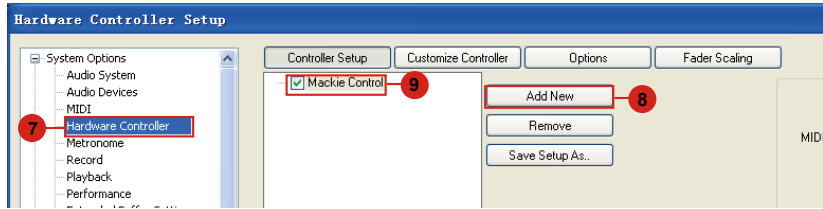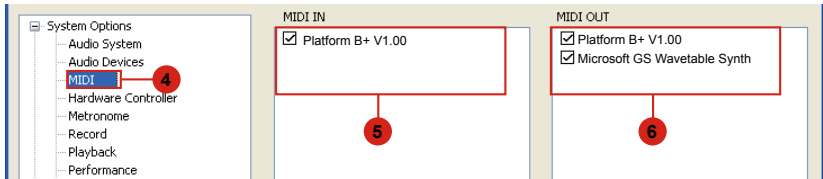






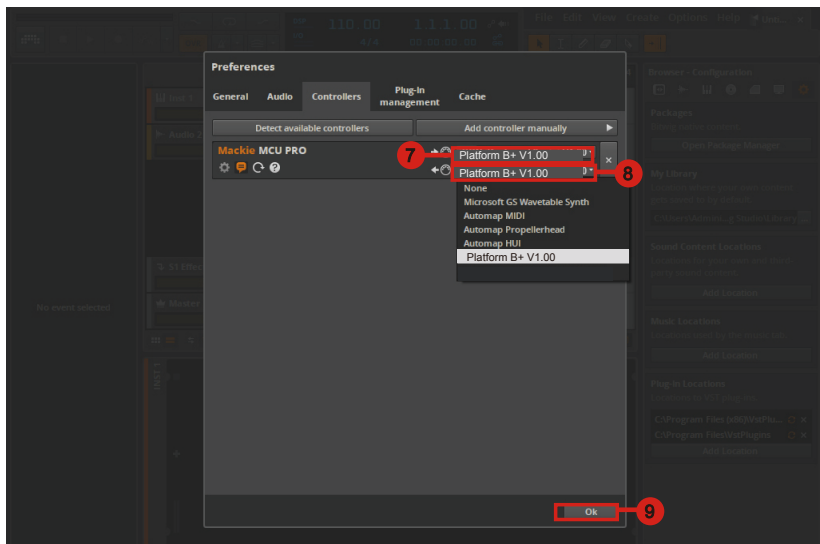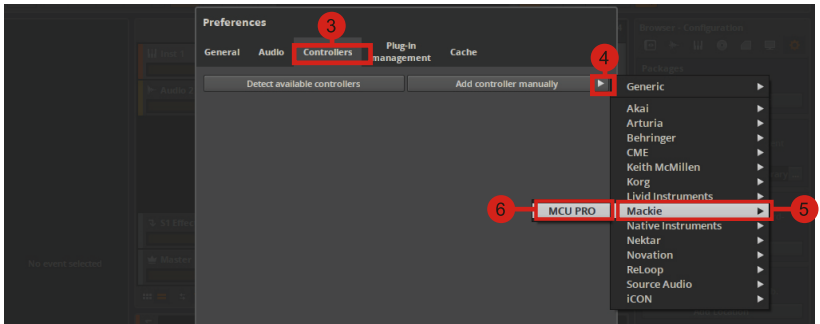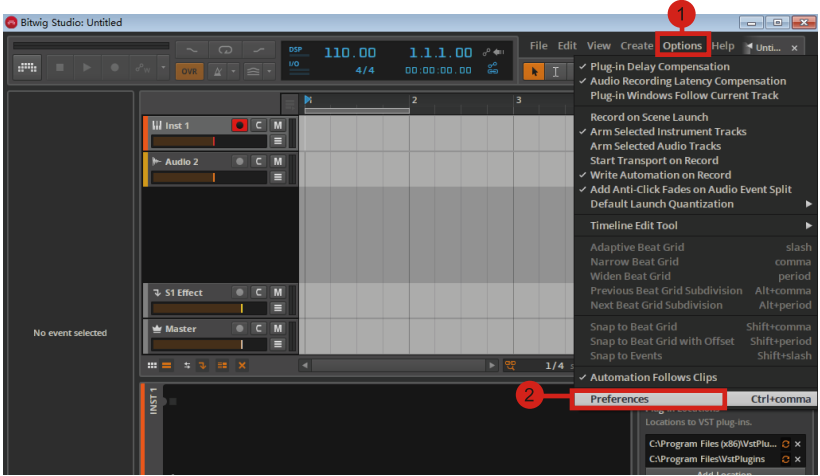




# Reason

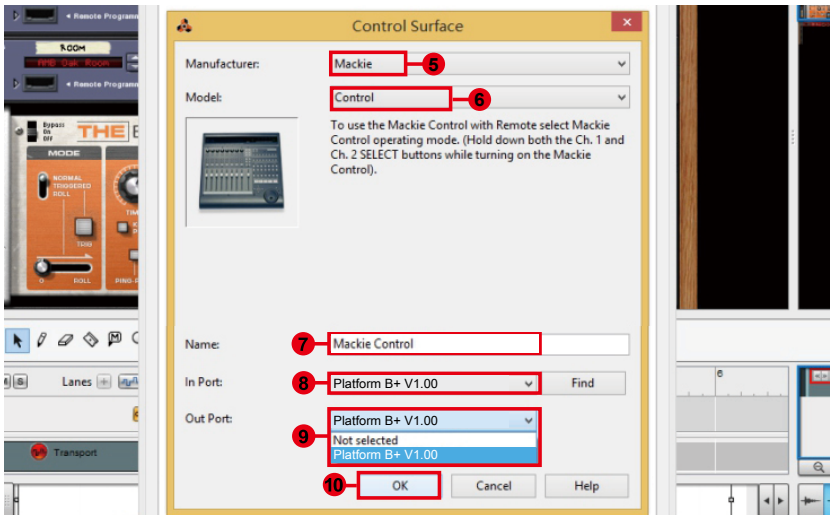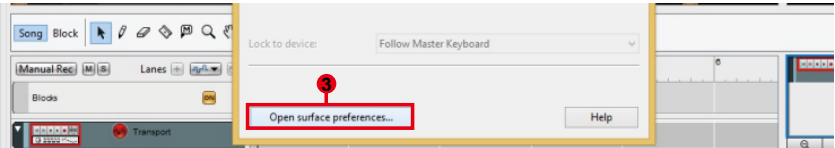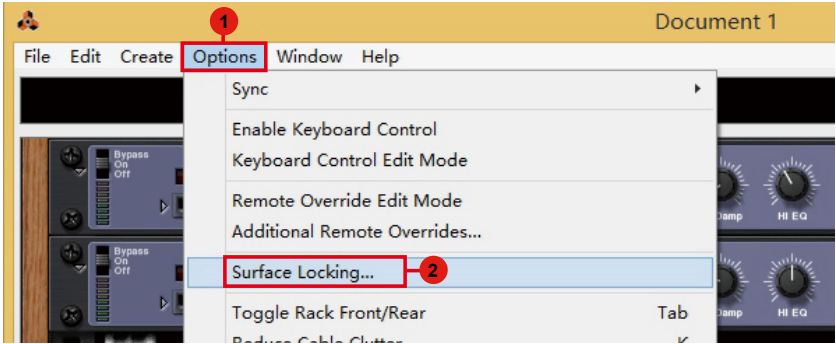



# Reaper

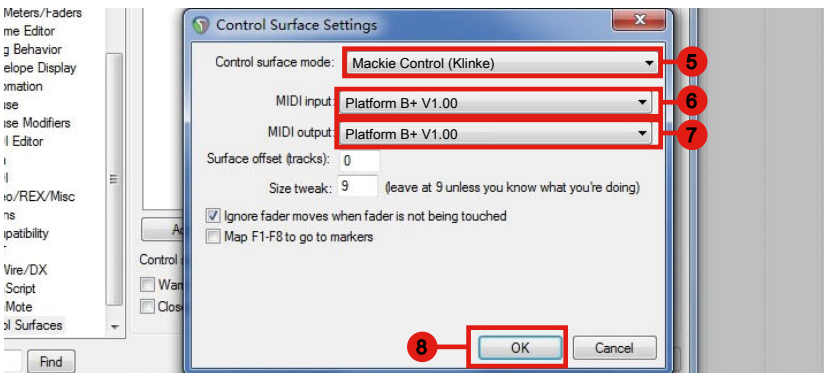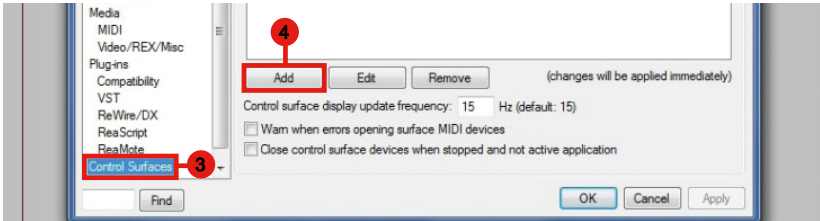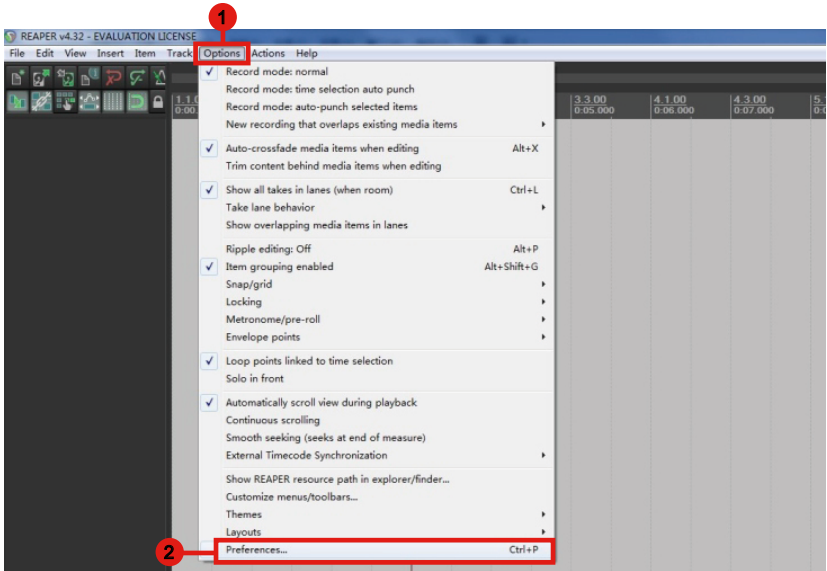






# Studio One

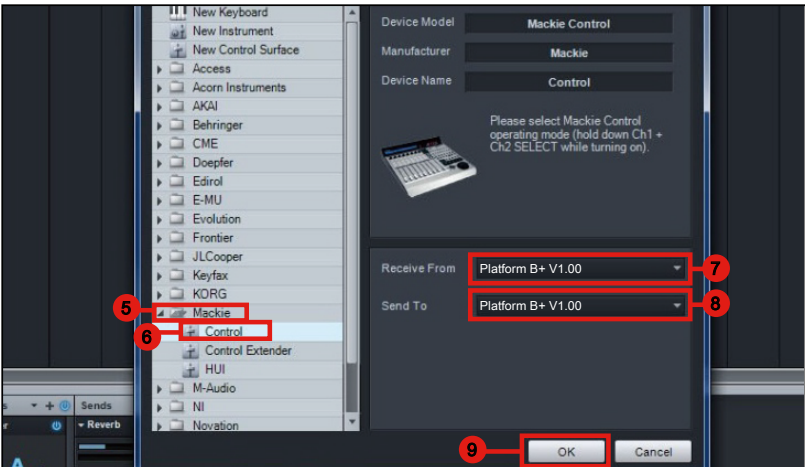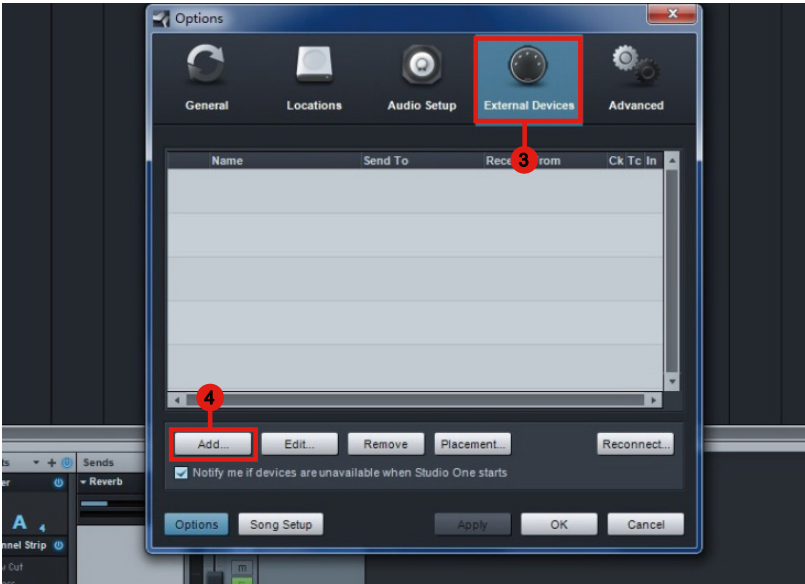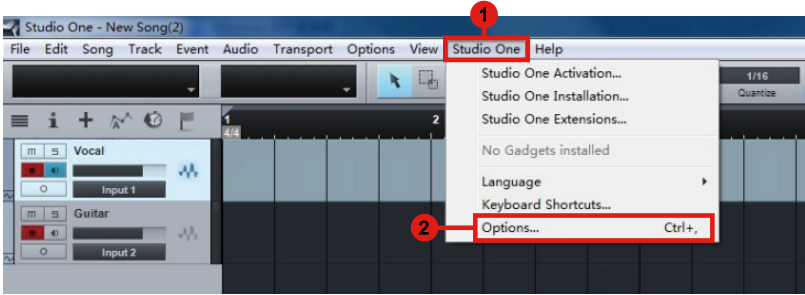


# Ableton Live

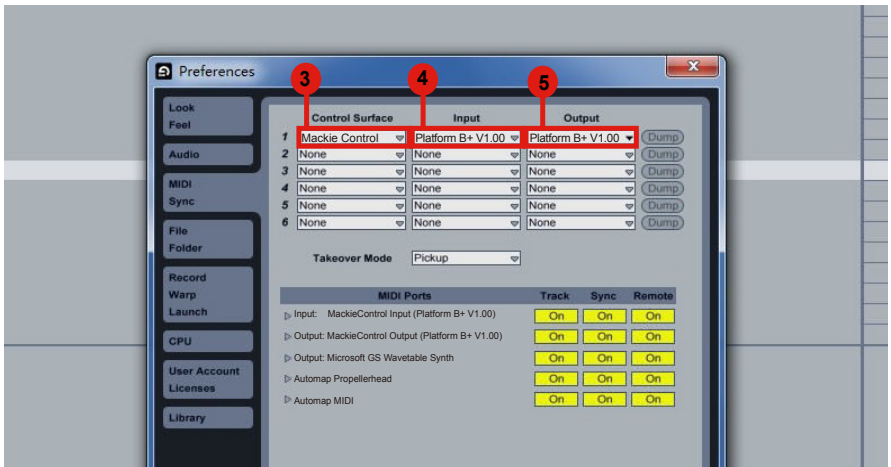
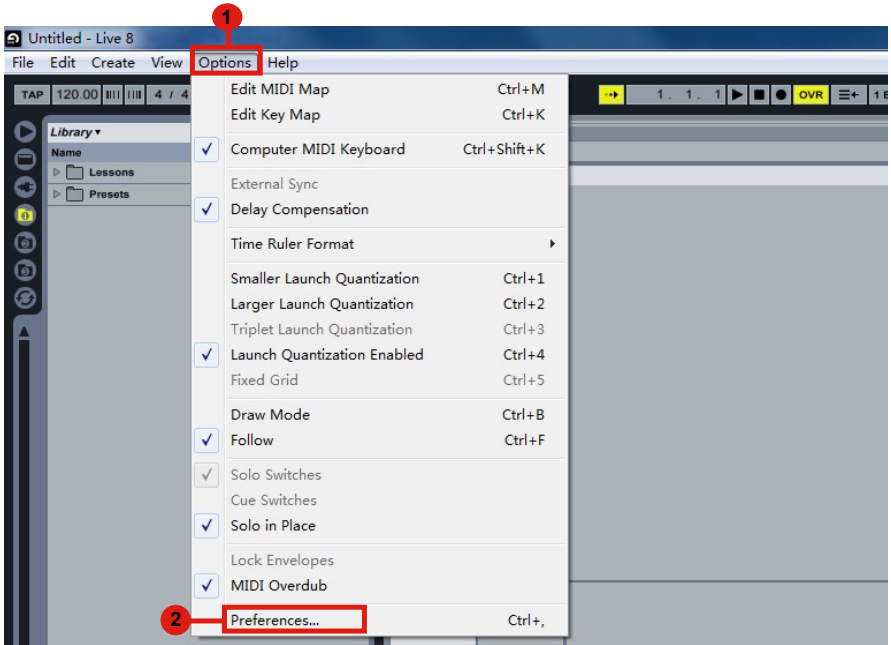


# Pro Tools

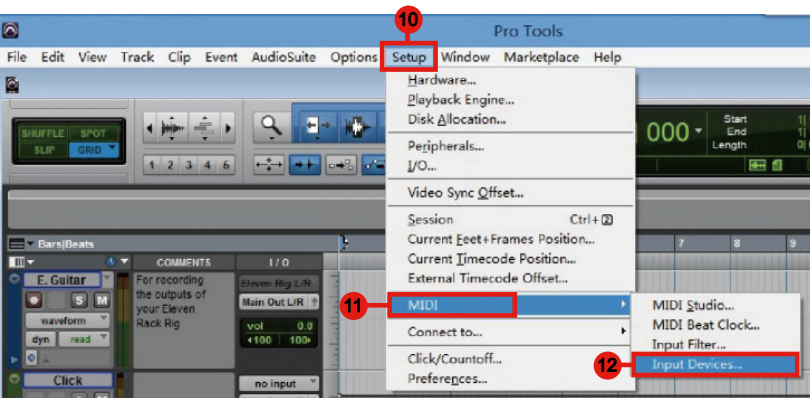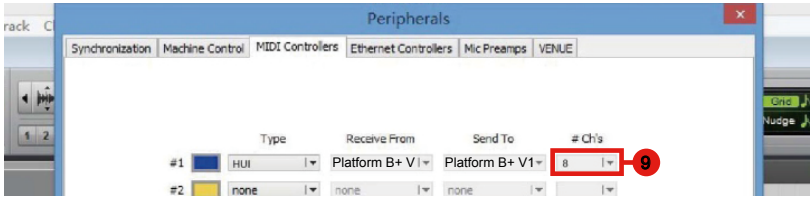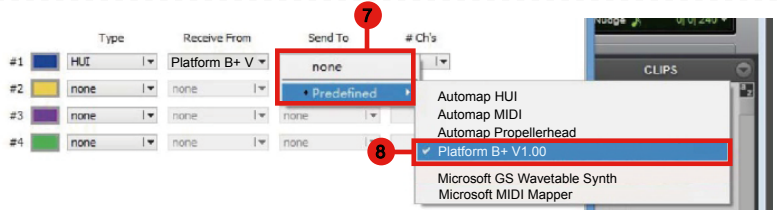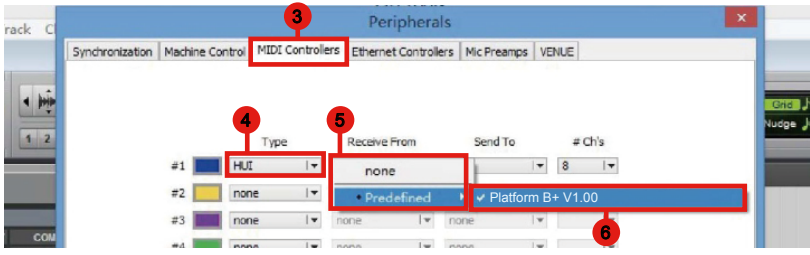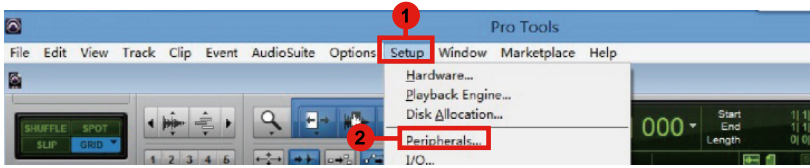



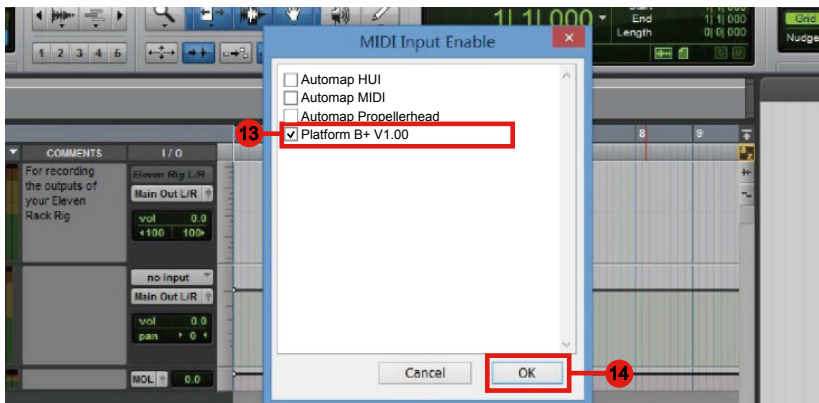


## Audition

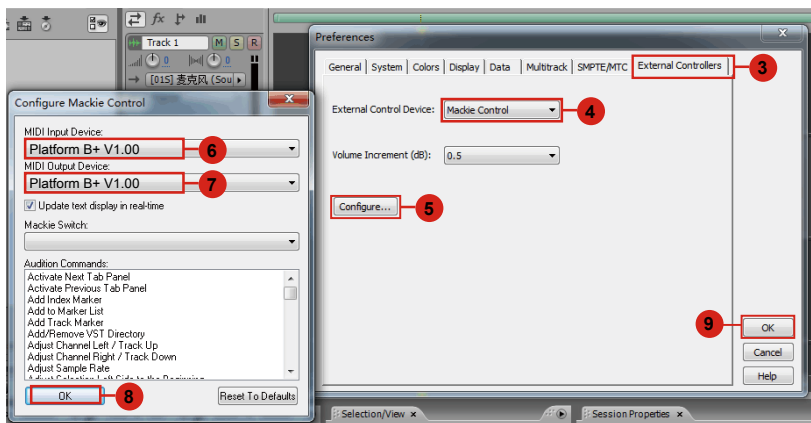
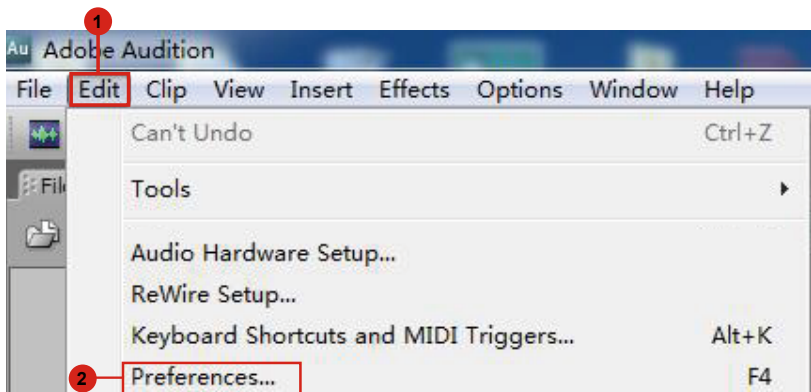




## Sonar

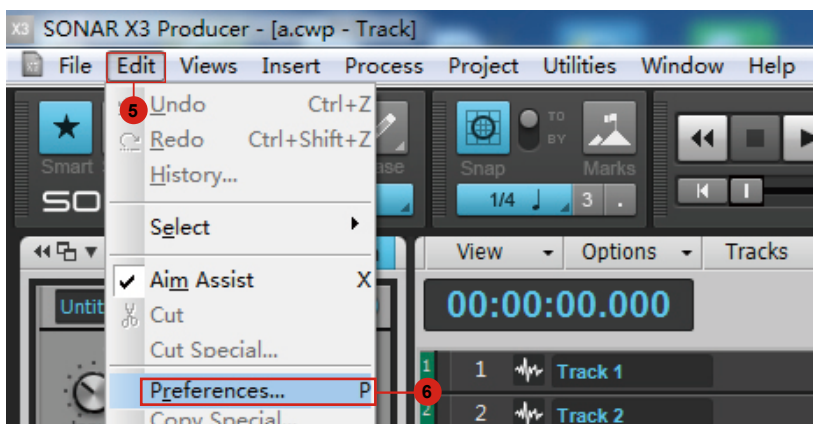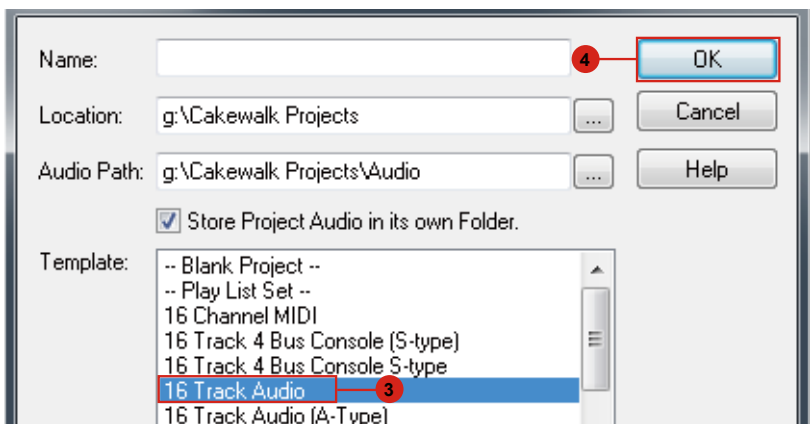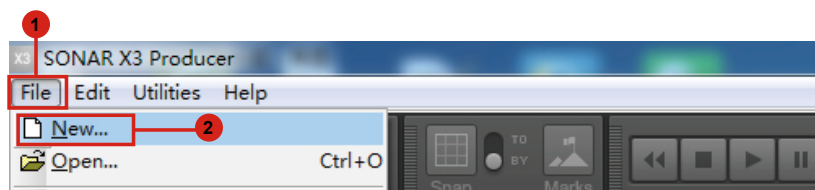



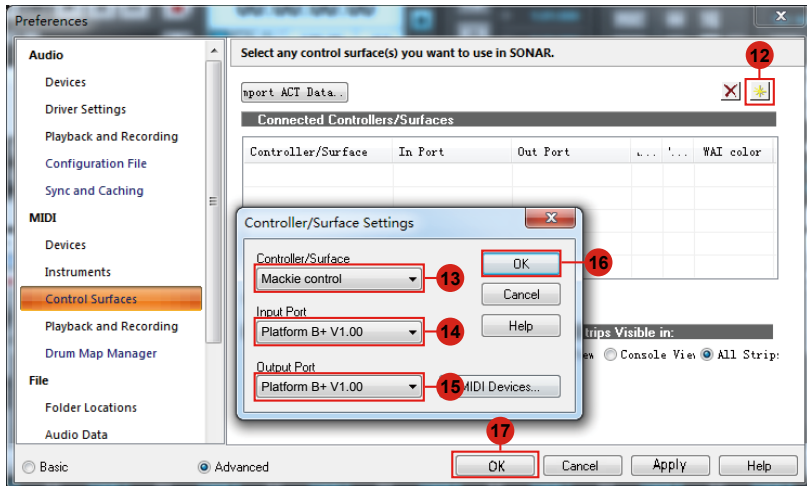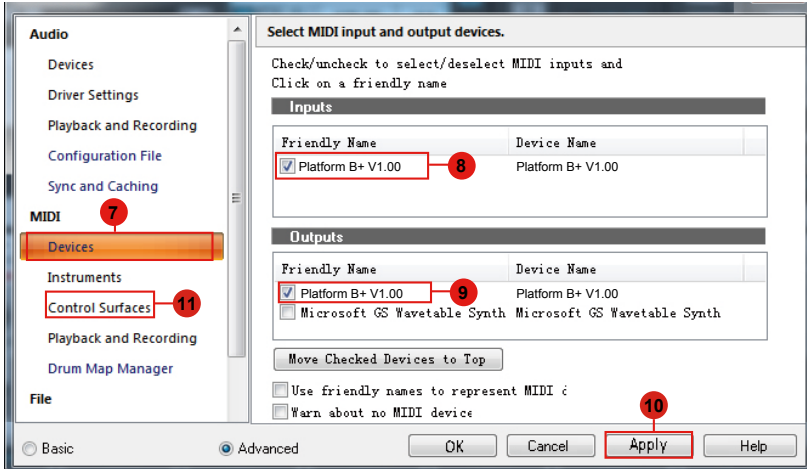

# ***I Scaricare i driver per Windows dalla pagina personale utente del sito [www.iconproaudio.com](http://www.iconproaudio.com)***

Dopo aver scaricato il driver, fare clic sul relativo file per avviare il processo di installazione.



Figura 1

## **1. Installare Software iMap™ per Mac OS X.**

Si prega di seguire le procedure indicate qui di seguito passo dopo passo per l'installazione del software iMap nel Mac OS X

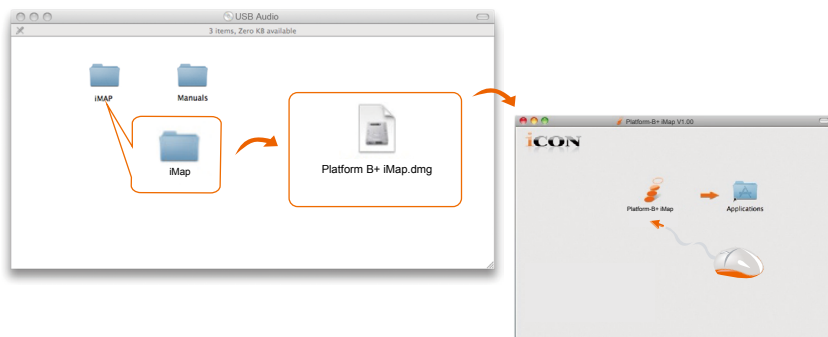


Figura 2

**Suggerimento:** Trascinando l'icona "Platform B+" nella cartella "Applications" e rilasciandola, è possibile creare una scorciatoia per "iMap" sul desktop del proprio Mac.

# Istallazione di software iMap™ per Windows

Si prega seguire le procedure indicate qui di seguito passo dopo passo per l'installazione del software iMap™.

## 1. Accendere il PC.

## 2. I Scaricare i driver per Windows dalla pagina personale utente del sito [www.iconproaudio.com](http://www.iconproaudio.com)

Dopo aver scaricato il driver, fare clic sul relativo file per avviare il processo di installazione.

## 3. Selezionare Install Location (Posizione di installazione)

Selezionare la destinazione dove installare il software iMap™ o utilizzare la posizione di default, poi cliccare su “Next”.

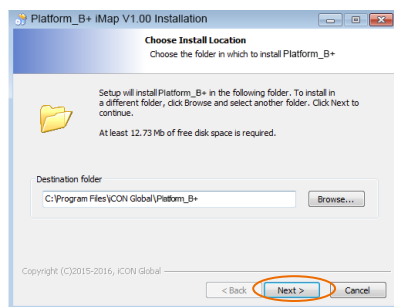


Figura 3

## 4. Selezionare scelta rapida (Shortcuts)

Selezionare il file start menu in cui si desidera creare la scorciatoia iMap™. Cliccare su “Next”.

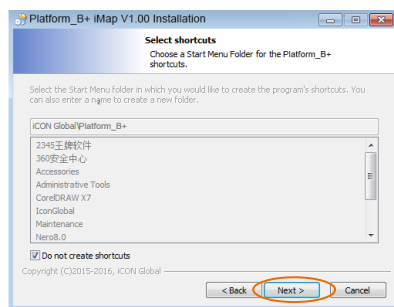


Figura 4

## 5. Creare la scorciatoia sul desktop

Controllare che la casella non sia spuntata se non si desidera creare un collegamento rapido sul desktop per iMap™, altrimenti cliccare su “Next”.

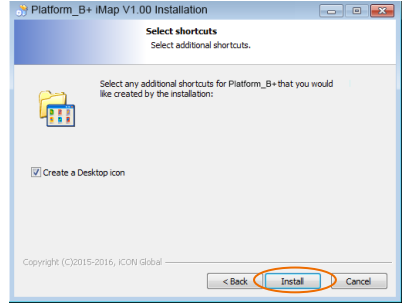


Figura 5

## 6. Installazione iMap™ Iniziata

L'installazione iMap™ è ora iniziata, attendere che finisca, poi cliccare su “Finish” (Fine).

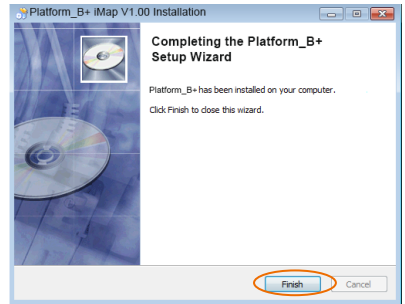


Figura 6

7. Click the iMap logo on your desktop to launch the iMap software.

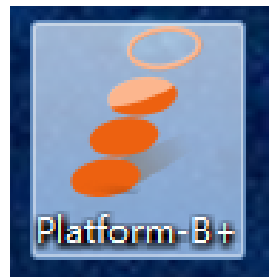


Figura 7

# **Assegnazione modalità DAW (Controllo Mackie/HUI) o definizione funzioni MIDI con iMap™**

Ci sono due diversi metodi per configurare il proprio Platform B+. In generale, è più semplice e veloce configurare il dispositivo ai modelli DAW pre-mappati con protocollo Mackie Control/LogicPro/HUI, a seconda di quale DAW si utilizza. Il dispositivo ha i seguenti protocolli DAW Mackie/LogicPro/HUI integrati:


Fare riferimento alla tabella seguente per la selezione della modalità DAW diversa.

<b>MCP</b>	<b>LogicPro</b>	<b>HUI</b>	<b>UserDefine</b>
1. Nuendo/Cubase	Logic Pro	ProTools	User self mapping with iMap
2. Digital Performer			
3. FL Studio			
4. SamplitudePro			
5. Reaper			
6. Studio One			
7. Bitwig			
8. Reasons			
9. Sonar			
10. Audition			
11. Ableton Live			

## **Seleziona Definisci utente**

O è possibile definire ogni elemento di controllo sul proprio Platform B+ con i propri messaggi MIDI forniti nel menu a discesa della funzione iMap. Tuttavia, a meno che non si comprende totalmente la struttura MIDI del proprio DAW, ciò potrebbe essere molto complicato da configurare. Raccomandiamo fortemente di usare le modalità DAW pre-mappate, in quanto sono programmate secondo le preferenze utente più popolari, e soddisfano quasi tutte le propri esigenze.

# Assegnazione modalità DAW (controllo Mackie/LogicPro/HUI) usando iMap™

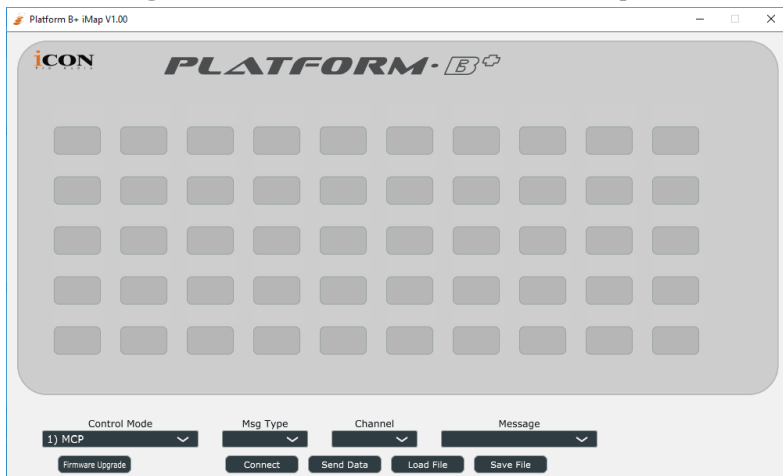

## Panello software iMap™ Platform B+

Per iniziare la configurazione della modalità DAW, collegare il proprio Platform B+ con iMap. Seguire i passi seguenti:

1. Collegare Platform B+ al proprio Mac/PC.
2. Lanciare iMap e fare clic su “Connect Device”.

**Nota:** Nel caso in cui il Suo Platform B+ non sia collegato al Mac/PC, apparirà il messaggio “There are no MIDI input devices” (non sono presenti dispositivi input MIDI). Collegare il Platform B+ al Mac/PC con il cavo USB fornito.


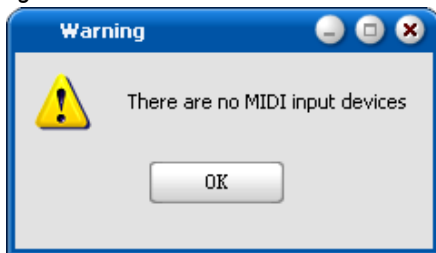



Figura 8

3. Selezionare “Platform B+” dal menu a discesa come proprio dispositivo di uscita MIDI.

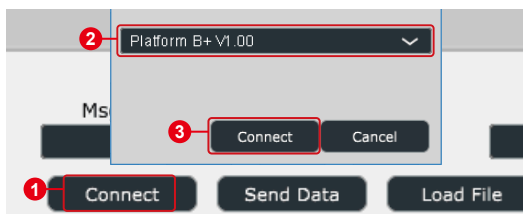

4. Secondo il proprio DAW, selezionare la modalità protocollo DAW Mackie/HUI dal menu a discesa “Modalità”. Diversi modelli DAW sono riportati di seguito:

1. MCP
2. LogicPro
3. HUI

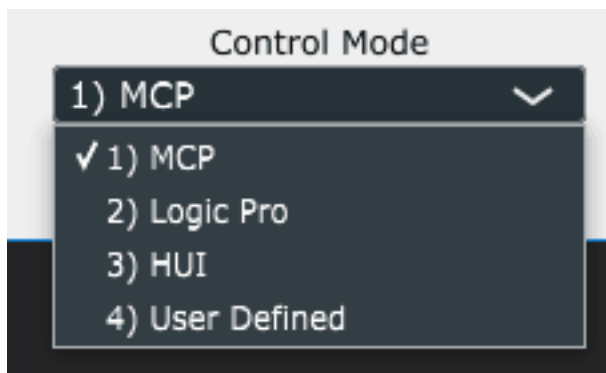


**Suggerimento:** È anche possibile utilizzare l'hardware per selezionare la modalità DAW invece di attraverso iMap. Fare riferimento a pag. 37 per istruzioni.

5. Dopo aver terminato la creazione di tutte le impostazioni, fare clic su “Send Data”.

6. Chiudere iMap.

**(Nota:** Dopo l'installazione, accertarsi di aver terminato la connessione USB, se si sta utilizzando Platform B+ in combinazione con Platform M+.)

# Assegnazione messaggi MIDI in modalità Definito dall'utente usando iMap™

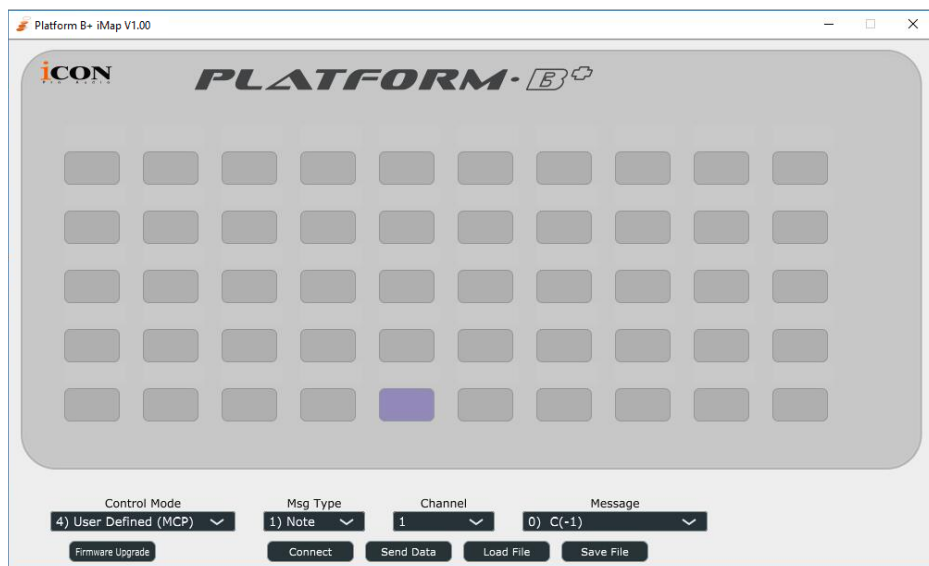

## Pannello software iMap™ Platform B+

Per iniziare la configurazione della modalità “User-Defined Mode”, collegare il proprio Platform B+ con iMap. Seguire i passi seguenti:

1. Collegare Platform B+ al proprio Mac/PC.
2. Lanciare iMap e fare clic su “Connect Device”.

**Nota:** Nel caso in cui il Suo Platform B+ non sia collegato al Mac/PC, apparirà il messaggio “There are no MIDI input devices” (non sono presenti dispositivi input MIDI). Collegare l' Platform B+ al Mac/PC con il cavo USB fornito.


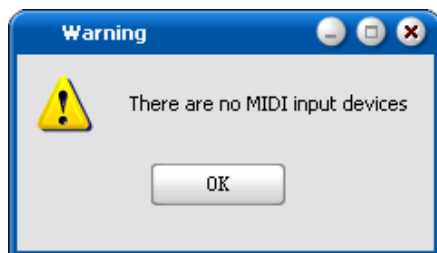





Figura 9



3. Selezionare “Platform B+” dal menu a discesa come proprio dispositivo di uscita MIDI.

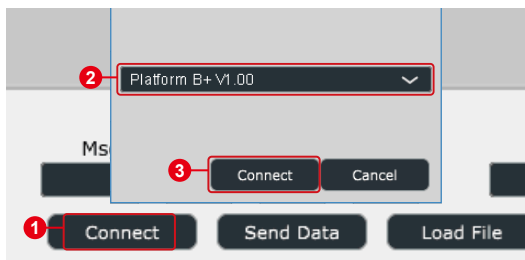


4. ① Selezionare la modalità "Definisci utente". ② Quindi selezionare gli elementi di controllo (i pulsanti) a cui si desidera assegnare una nuova funzione midi. ③ Dopo la selezione dell'elemento di controllo, seleziona il valore di mappatura che desideri, dal menu a discesa "Tipo di messaggio", "Canale" e "Messaggio". Si veda di seguito per l'impostazione di ogni elemento di controllo in modalità Definito dall'utente.

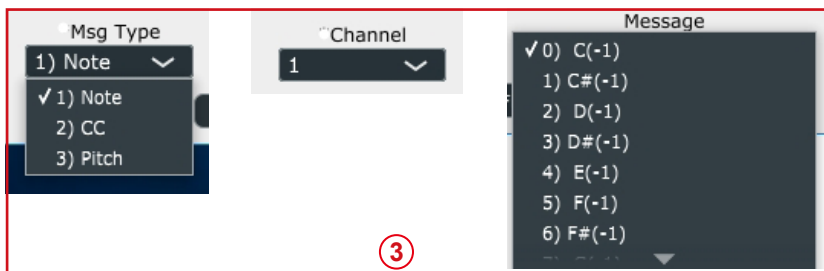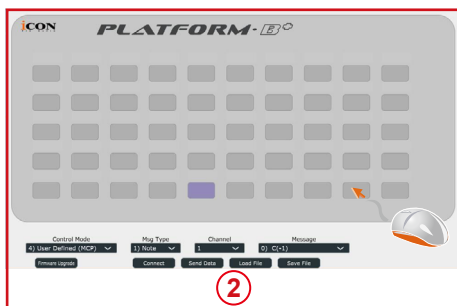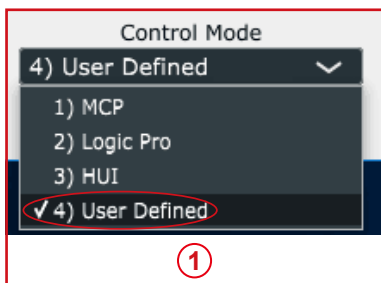

5. Dopo aver terminato la creazione di tutte le impostazioni, fare clic su “Send Data”.
6. Chiudere iMap.

# Configurazione elementi di controllo in modalità Definito dall'utente

## Platform B+ Pannello software iMap™

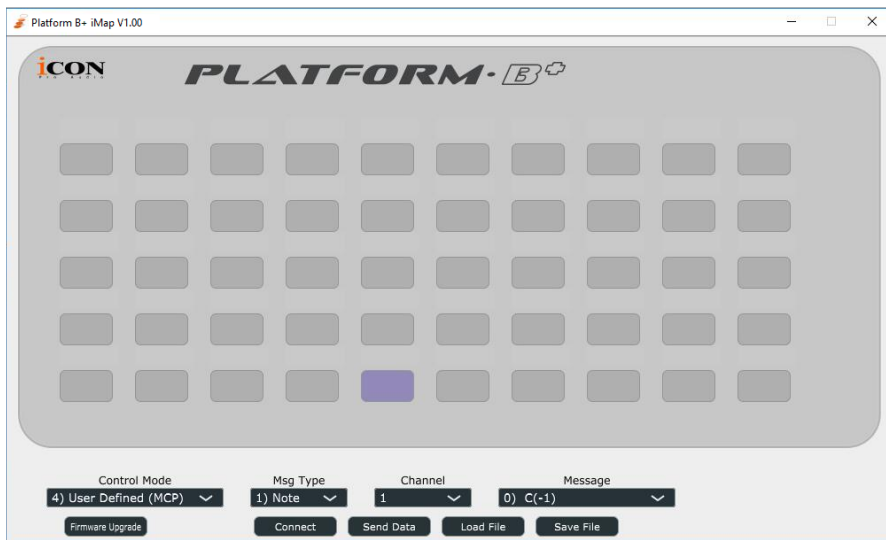


*È possibile riassegnare funzioni diverse a ogni pulsante tramite iMap. Seguire la procedura descritta qui sotto per effettuare l'assegnazione.*

1. Collegare Platform B direttamente al proprio PC/Mac tramite la connessione USB.
2. Avviare il programma iMap.
3. Fare clic sul pulsante "Connetti" e selezionare "Platform B+ V1.00", poi fare clic su "OK".
4. Fare clic su un pulsante per effettuare un'assegnazione; il pulsante diventerà blu.
5. Selezionare una "Modalità di controllo" in base alla DAW in uso.
6. Selezionare una funzione dal menu a discesa "Funzione".
7. Ripetere i passaggi 4 e 6 per assegnare funzioni agli altri pulsanti.
8. Dopo aver completato l'assegnazione, fare clic sul pulsante "Invia dati".

*Fare riferimento all'appendice per l'elenco delle funzioni con diverse modalità di controllo.*

## Altre funzioni in iMap™

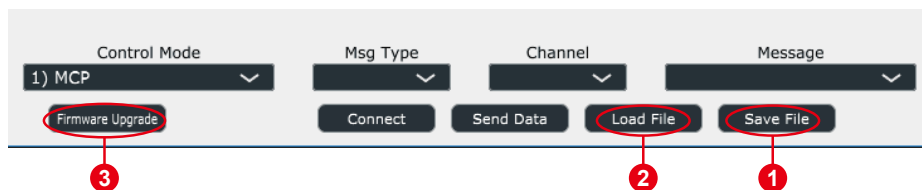

### 1. Tasto “Save file” (Salva file)

Cliccare su questo tasto per salvare le disposizioni attuali dell' Platform B+. Il file è un file “.Platform B+”.

### 2. Tasto “Load file” (Carica file)




Cliccare su questo tasto per caricare un file di impostazione “.Platform B+” precedentemente salvato per l' Platform B+.



### 3. “Firmware Upgrade” button




Fare clic su questo pulsante per accedere la finestra di aggiornamento del firmware di Platform B+. Si prega di consultare pagina 63 per dettagli sulla procedura di aggiornamento del firmware.

# Aggiornamento del firmware

Hochladevorgang der funktionalen Firmware für Platform B+

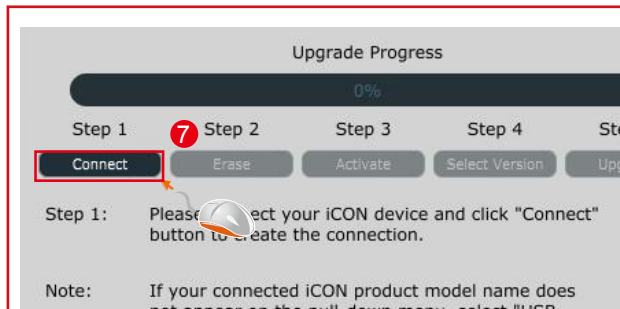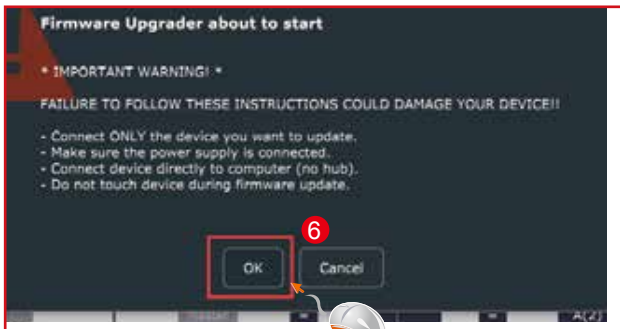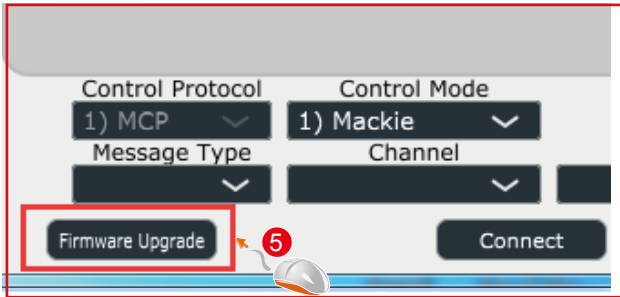

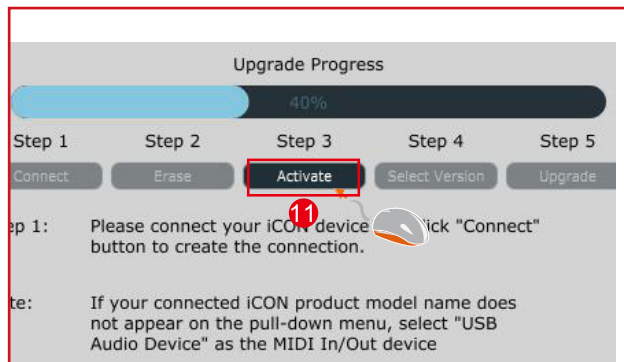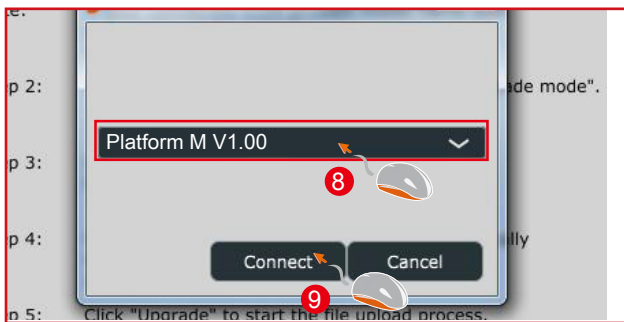

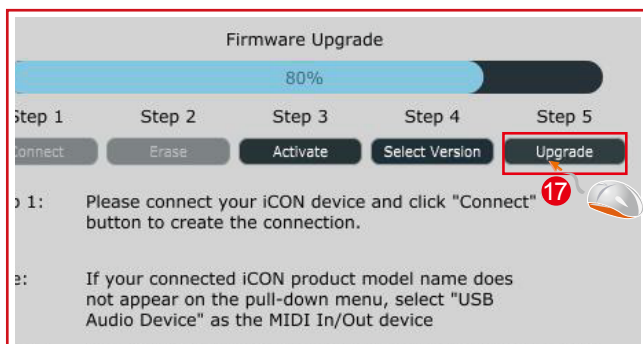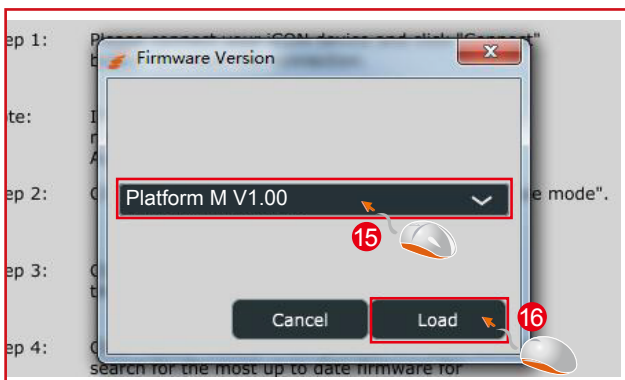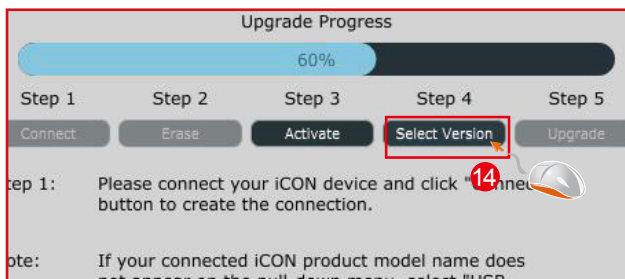

## **Ripristino delle impostazioni predefinite di fabbrica**

*Per ripristinare le impostazioni Platform X+ alle predefinite di fabbrica, basta lanciare iMap e importare le impostazioni originali (ad es. senza effettuare alcuna modifica) sul dispositivo attraverso i seguenti passaggi.*

1. Collegare Platform X+ con il cavo USB fornito e lanciare il software iMap.
2. Fare clic sul pulsante “MIDI Device” e selezionare “Platform X+” come dispositivo di ingresso e uscita MIDI.  
**Nota:** *Se Platform X+ non appare nel menu a discesa, selezionare audio USB come dispositivo I/O MIDI.*
3. Fare clic su “Send Data” per caricare le impostazioni sul proprio Platform B+.
4. Chiudere iMap, e quindi accendere e spegnere Platform B+.

# ***Dati tecnici***

Connettore:	Al computer	USB connector
	All'estensione	USB connector (B-Type)
Alimentazione:		12V/0.35A DC
Consumo corrente:		2.0A or less
Peso:		1.46kg (3.22lb)
Dimensioni:		335(L) x 196(W) x 41(H)mm
		13.2"(L) x 7.7"(W) x 1.6"(H)



# Revisione

Se il Suo "Platform B+ " necessita di revisione, seguire le seguenti istruzioni.

Controllare il nostro centro assistenza online a <http://support.iconproaudio.com/hc/en-us>, per informazioni, formazione e download come

1. FAQ
2. Download
3. Maggiori informazioni
4. Forum

Molto spesso si troveranno soluzioni su queste pagine. Se non si trova una soluzione, creare un ticket di assistenza nel nostro ACS (Assistenza Clienti Automatica) online al link seguente, e il nostro team di assistenza tecnica presterà assistenza appena possibile.

Navigare a <http://support.iconproaudio.com/hc/en-us> e quindi inviare un ticket o fare clic su "Submit a ticket" senza la necessità di registrarsi.

Non appena hai inviato una richiesta di ticket, il nostro team di assistenza ti assisterà nella risoluzione del problema con il proprio dispositivo ICON ProAudio quanto prima

Inviare i prodotti difettosi per assistenza:

1. Assicurarsi che il problema non sia dovuto ad errori da parte dell'operatore o dispositivi di sistemi esterni.
2. Tenere con sé questo Manuale del Proprietario. Non è necessario che accompagni il dispositivo per la riparazione.
3. Imballare il dispositivo nell'imballaggio originale, compresi il cartone terminale e la scatola. Questo è molto importante. Se ha perso l'imballaggio assicurarsi che il dispositivo sia imballato in modo idoneo. ICON non è responsabile per danni che si possono verificare con l'uso di imballaggi non di fabbrica.
4. Spedire al centro servizio tecnico di ICON o centro servizi locale autorizzato. È possibile trovare i nostri centri assistenza e i punti di assistenza del distributore al link seguente:

Se ci si trova a Hong Kong

Inviare il prodotto a:

**UFFICIO ASIA:**

**Unit F, 15/F., Fu Cheung Centre,  
No. 5-7 Wong Chuk Yueng Street, Fotan,  
Sha Tin, N.T., Hong Kong.**

Se ci si trova a North America

Inviare il prodotto a:

**North America**

**Mixware, LLC – U.S. Distributor  
11070 Fleetwood Street – Unit F.  
Sun Valley, CA 91352; USA  
Tel.: (818) 578 4030**

**Contact: [www.mixware.net/help](http://www.mixware.net/help)**

Se ci si trova a Europa

Inviare il prodotto a:

**ISound Service**

**GmbHEuropean**

**HeadquarterMoriz-Seeler-Straße**

**3D-12489 Berlin**

**Telephone: +49 (0)30 707 130-0**

**Fax: +49 (0)30 707 130-189**

**E-Mail: [info@sound-service.eu](mailto:info@sound-service.eu)**

5. For additional update information please visit our website at:  
[www.iconproaudio.com](http://www.iconproaudio.com)

# Appendix A

## Control Surface Functionality Manual

### Cubase

*QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano*

Revision v0.71

*This is a master manual. Specific device manuals can be built from this material*

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Cubase.

You can extensively control Cubase with an Icon QCon series control surface or Icon Platform modular control system using standard Mackie Control protocol. Expansion bank units can be added for more hands-on controls: QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary to access all functions in this manual with Platform M+, and the D2 display highly recommended. Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. The terms , Cubase, and all Cubase-specific terminology belong to Steinberg and has no affiliation with Icon Pro Audio.

### <<<< Table of Contents >>>>

Setup	.....	-
Getting Started	.....	-
Mix and Transport	.....	-
View	.....	-
Automation	.....	-
Encoder Knob Assignment	.....	-
Utilities	.....	-
Advanced Configuration	.....	-
Troubleshooting	.....	-

Firmware Update	.....	-
Fader Calibration	.....	-
MCP MIDI Implementation Table	.....	-
Renamed Buttons	.....	-

**<<<<<Color Reference Key>>>>>**

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B


**<<<<<<<<< Setup>>>>>>>>>**

Before you can use your control surface, you will first need to configure it in Cubase. Once the setup is successful, by default Cubase will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the **DAW Mode**, then start your DAW software.

When your control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no action is taken after startup, the control surface will select the last used mode after a few seconds.

To configure your Icon control surface in Cubase, go to Devices ->Device Setup. Delete previous Mackie Control configurations, then go to “+”and select Mackie Control. Finally choose your device name for both the Output Port and Input Port, displayed on the right under“Mackie Control”.

Repeat this process for any expansion modules. The configuration of each device needs to happen corresponding to the physical position of the control surfaces from left to right. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview ofthe fundamental elements for controlling Cubase.

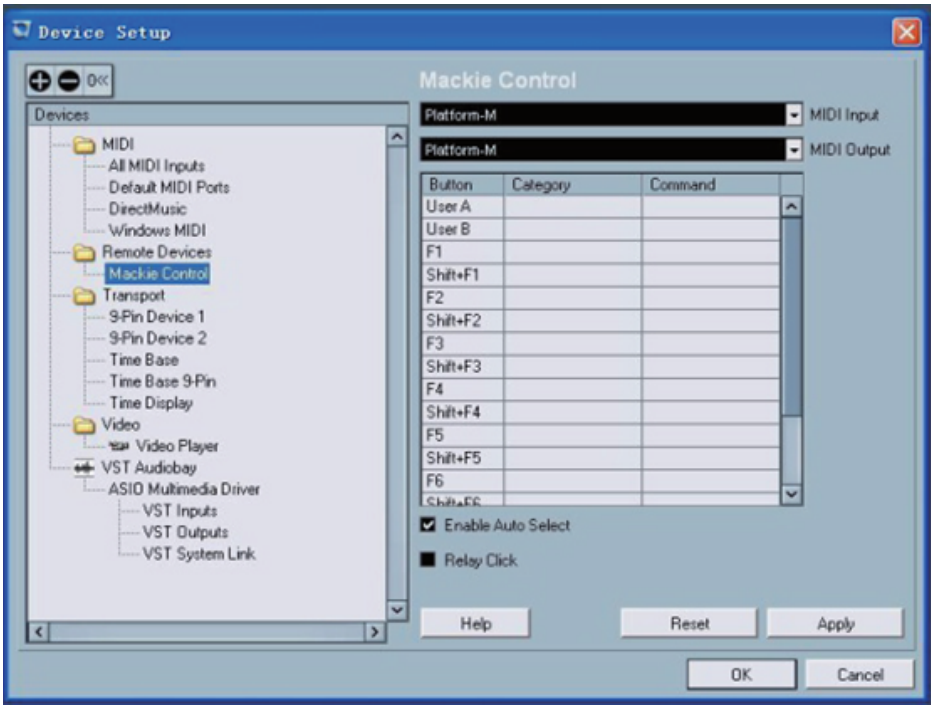

## <<<<<<<< Getting Started >>>>>>>>

When first opening a blank project in Cubase, we are looking at the [Project Window](#). Add channels to your project here, and you will see the motor faders jump into position. Each icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one channel in your DAW. The channel name appears on the display above each channel. Touch a fader and adjust the channel's volume. Change a channel's volume in Cubase and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the [Bank up / down](#) buttons to scroll through further channels in the project in fixed blocks of 8. The [Channel up / down](#) buttons step the currently selected channel one channel at a time.

The 9th fader on your control surface is the [Master Fader](#) and always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.

The **Encoder Knobs** edit parameters according to the current **Assignment Mode**. Turn them to edit a parameter or change a selection. Each knob affects the channel on that channel strip, or in advanced encoder modes, all knobs affect the currently selected channel. Press the knob to reset to the default value, or confirm a selection depending on the **Assignment Mode**.



## <<<<<<<<<<<<<Mix and Transport>>>>>>>>>>>>>>

### **Jog Wheel:**

Turn the **Jog Wheel** to quickly adjust the project cursor position on the grid, visible in the **Project Window** in Cubase. Press **Scrub** to scrub audio with the **Jog Wheel**. (On Platform M+, scrub is activated by pressing down the jog wheel.)

### **Transport:**

The **Transport** section is used to operate playback.

**Play** = Begin playback

**Stop** = Stop playback

**Rec** (transport) = Begin recording Audio and MIDI input

**FastForward** = Shuttle the project cursor forwards

**Rewind** = Shuttle the project cursor backwards

**Stop - Stop** = Project cursor jumps to previous play position

**Shift + FastForward**= Project cursor jumps to end of project

**Shift + Rewind** = Project cursor jumps to start of project

**Left** = Project cursor jumps to left locator

**Right** = Project cursor jumps to right locator

**Cycle** = Toggle playback loop (set between the left and right locators)

**Shift + Left** = Set left locator to project cursor

**Shift + Right** = Set right locator to project cursor

## **Channel Strip Buttons:**

**Rec** (channel) = Arms the channel strip for recording

**Solo** = Engage **Solo** for one or multiple channels

**Mute** = Engage **Mute** for one or multiple channels

**Select** = Focuses and selects the channel, displays the fullchannel name on the LCD display

**Solo Defeat** = De-solo all channels (*default QCon Pro X and B+ only*)

**Shift + Solo Defeat**= Un-mute all channels (*default QCon Pro X and B+ only*)

**Shift + ChannelUp/Down**= Bank by 1 channel instead of 8

**Shift + BankUp/Down**= Toggle switch Band/Channel

## **Monitoring:**

In **Pan Assignment**, press the Encoder Knobs to toggle channel **monitoring**. This activates input monitoring mixed with audio playback output from Cubase.

## **Fader Lock:**

Press **Lock Mix** to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Press **Motorsto** disable all motor fader movement. This is useful to silence the control surface. When motors are disabled, the faders are still touch-responsive and can edit the mix.

## **Listen Mode:**

**Shift + Project** = activate **Listen Mode**:

**Solo** = Engage **Listen** for one or multiple channels

**Shift + Project** = deactivate **Listen**for all channels

There are settings in Cubase for **Listen** in the **Control Room**, which is found under**Outputs** in the **Connections Window**.



## <<<<<<<<< Encoder Knob Assignment >>>>>>>>

Press one of the **Assignment** buttons to select the category of parameters currently assigned to the **Encoder Knobs**. Assignment modes apply controls to the currently selected channel – with a few exceptions. Use **Channel** up/down to browse pages of options and parameters. Rotate the **Encoder Knobs** to adjust parameters or make a selection from a list.

### Assignment Modes:

**Pan** = Activates **Pan Assignment**. Edit standard pan or front/rear panning.

**Inserts** = Activates **Insert Assignment**. Open plug-ins and access plug-in parameters.

**EQ** = Activates **EQ Assignment**. Opens and edits **Cubase EQ** on selected channel.

**FX Aux** = Activates **FX Aux Assignment**. Open and edit the **Channel Strip Rack**.

**Instrument** = Activates **Instrument Assignment**. Open and edit plug-in instruments.

**Send Page Down** = Activates **FX Send Assignment**. Setup and edit FX sends.

**Master FX** = Activates **Master FX Assignment**. Setup and edit FX sends.

**Page Up, Routing** = Activates **Routing Assignment**. Setup and edit FX sends.

### Fader Flip:

Press **Flip** to access the current **Encoder Knob** parameters on the touch sensitive motor faders. This is great for precise adjustments of multiple channels/parameters and managing automation.

## <<<<< Pan >>>>>

### Pan Assignment: (Pan)

Press **Pan** to adjust stereo panning with the **Encoder Knobs** on their respective channels. Press **Page** Up/Down to choose between Left/Right or Front/Rear panning.

### Surround Assignment: (Shift+Pan)

Edit multiple surround parameters for the selected channel. **Each Encoder Knob** is set to a different function depending on the current channel Panner set in Cubase: Stereo Dual Panner, Stereo Combined Panner, Stereo Balanced Panner, or others.

Parameters:

L-R Standard, L-R Panner, Mode

## <<<<< Inserts >>>>>

### Insert Assignment Mode: (Plug-In)

Press **Insert** to open and edit plug-ins on the selected channel. Assign plug-ins on Page 01, and edit on Page 02. Press **Channel** up/down to browse pages. Plug-In parameters appear on the LCD display and are assigned across the **Encoder Knobs**.

To quickly insert and edit a plug-in, press **Insert**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.



Insert parameters appear automatically assigned across the Encoder Knobs

<<<<< **EQ** >>>>>

**EQ Assignment Mode: (EQ)**

Press **EQ** to open (or add) the **Cubase EQ**. **EQ Assignment Mode** can only edit a standard **Cubase EQ**. Press **Flip** to control EQ with the faders, and **Channel** up/down to browse parameters. Edit multiple EQ bands at once for the selected channel. Press a **Freq** knob to change to adjusting Q and press a **Gain** knob to toggle bypass.

- Band 1 Frequency
- Band 1 Gain
- Band 3 Frequency
- Band 3 Gain

- Band 2 Frequency
- Band 2 Gain
- Band 4 Frequency
- Band 4 Gain

**Advanced EQ Assignment Mode: (Shift + EQ)**

- Band 1 Gain
- Band 1 Frequency
- Band 3 Gain
- Band 3 Frequency

- Band 2 Gain
- Band 2 Frequency
- Band 4 Gain
- Band 4 Frequency

- Band 1 Q-Factor
- Band 1 Bypass
- Band 3 Q-Factor
- Band 3 Bypass

- Band 2 Q-Factor
- Band 2 Bypass
- Band 4 Q-Factor
- Band 4 Bypass

<<<<< **FX Aux** >>>>>

**FX Aux Assignment Mode:**

In **FX Aux Assignment Mode**, edit settings for **Channel Strip Rack** modules. Browse parameters with **Channel** up/down.

<<<<< **Instrument** >>>>>

**Instrument Assignment Mode:**

Press **Instrument** to open and edit instrument plug-ins on the selected channel. Assign plug-ins on Page 01, and edit on Page 02. Press **Channel** up/down to browse pages. Plug-In parameters appear on the LCD display and are assigned across the **Encoder Knobs**.

To quickly load and edit an instrument, press **Instrument**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Page 01

Instrument Slot#

Instrument Bypass

Select Instrument

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

<<<<< **Send** >>>>>

### **FX Send Assignment Mode:** (Page Up, FX Send)

Use the **FX Send Assignment Mode** to adjust send amount, bypass, toggle pre/post fader, and set FX channel insert effects.

To quickly create and edit an FX Send, press **FX Send**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Page 01

FX Channel #

Send Bypass

Select Plug-In

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

### **Send Focus Mode:** (Select a channel - Send - Page Down)

Edit the send parameters of 8 sends at once for the selected channel. Press **Channel** up/down to browse parameters:

Send Amount

Send Bypass

Send Pre/Post Fader

Send Bus Destination

### **Send Mixer Mode:**(Send - Select a channel - Shift+ Page Down)

Edit advanced parameters with the **Encoder Knobs** on their respective channels. Repeatedly press **Shift+ Page Down** to toggle through **FX Send 1-8**. Each **Encoder Knob** is set to a different function. Browse parameters with **Channel** up/down:

Send Amount

Bypass

Pre/Post Fader

Send Panning

Bus Destination

Bypass All Sends

## Cue Send Mode: (Shift+ Send)

Access settings for Cue sends with the **Encoder Knobs** on their respective channels. Press **Shift+ Send** to toggle through Cue Send 1-8. Browse parameters with **Channel** up/down:

Send Amount  
Bypass  
Pre/Post Fader  
Send Panning  
Bypass All Sends

## Cue Send Mixer Mode: (Shift+ Send - Select a channel - Shift+ Page Down)

Edit advanced parameters for multiple channels. Repeatedly press **Shift+ Page Down** to toggle through **FX Send 1-8**. Each **Encoder Knob** is set to a different function. Browse parameters with **Channel** up/down:

Send Amount  
Bypass  
Pre/Post Fader  
Send Panning  
Bus Destination  
Bypass All Sends

## <<<<<Master FX>>>>>

## Master FX Assignment Mode: (Master FX)

Use the **Master FX Assignment Mode** to edit and adjust effects loaded in the master insert slots. To quickly create and edit an FX Send, press **Send**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Page 01  
Master FX Slot #                      FX Bypass                      Select Plug-In  
Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

## <<<<<Routing>>>>>

## Routing Assignment Mode: (Page Down, Routing)

Edit routing parameters with the **Encoder Knobs** on their respective channels. Browse parameters with **Channel** up/down:

Output Bus  
Monitor

Input Bus  
Input Gain  
Input Phase

## Direct Routing Assignment Mode: (Shift+ Page Up) *(Nuendo only, not Cubase)*

Edit routing parameters with the **Encoder Knobs** on their respective channels. **Channel** up/down to select direct routing slots 1 to 8. Activate a direct routing slot by turning the corresponding **Encoder Knob**. Enable **Summing Mode** on parameter page 09/09 (reached with the Channel down button)

## <<<<<Utilities>>>>>

### Project Utilities:

**Left**= XYZXYZXYZ  
**Right**= XYZXYZXYZ  
**Shift+ Left**= XYZXYZXYZ  
**Shift+ Right**= XYZXYZXYZ

**Undo** = Cubase **Undo** function  
**Redo**= Cubase **Redo** function  
**Shift+ Undo** = Open Undo History

**Save** = Save Cubase project  
**Shift+ Save** = Save As: Save project with a new name  
**Revert**= ?????

### Marker:

XYZXYZXYZ

**Add** = XYZXYZXYZ  
**Prev**= XYZXYZXYZ  
**Next** = XYZXYZXYZ  
**Shift + Add** = XYZXYZXYZ  
**Shift + Prev** = XYZXYZXYZ  
**Shift + Next** = XYZXYZXYZ

### Punch:

Punch is recording which overwrites existing audio or MIDI within a set punch area. **Tap Punch to XYZXYZXYZXYZXYZXYZ**. This is a key workflow tool because of the time saved by combining channeling and major edits. Without punch, subsequent takes must be individually edited into the final channels. Using **Punch** keeps a production moving forward, which boosts creativity and productivity.

### Function Buttons:

The Function buttons, labeled **F1** through **F8**, are to be assigned custom user commands in Cubase -> Device Setup.

Recommended custom user commands:

F1 = Click On/Off  
F2 = MagicA  
F3 = MagicA  
F4 = MagicA  
F5 = MagicA  
F6 = MagicA  
F7 = MagicA  
F8 = MagicA

Shift + F1 = MagicA  
Shift + F2 = MagicA  
Shift + F3 = MagicA  
Shift + F4 = MagicA  
Shift + F5 = MagicA  
Shift + F6 = MagicA  
Shift + F7 = MagicA  
Shift + F8 = MagicA

### **Channel Visibility Modes:** *(default Platform B+ only)*

Shift + Visibility Modes 1 to 8 view fixed preset channel types. Buttons 1 to 8 alone recall custom channel visibility configurations previously setup in the [MixConsole](#).

#### Visibility Modes:

Shift + 1 = All Channels  
Shift + 2 = Audio Channels  
Shift + 3 = Groups  
Shift + 4 = FX Channels  
Shift + 5 = Instrument Channels  
Shift + 6 = MIDI Channels  
Shift + 7 = I/O Busses  
Shift + 8 = All Channels

#### Example user visibility modes:

1 = Project channels 1-8  
2 = Project channels 9-16  
3 = Project channels 17-24  
4 = Project channels 25-32  
5 = Project channels 33-40  
6 = Project channels 41-48  
7 = Project channels 49-56  
8 = Project channels 57-64

### **External Controls:**

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A = Toggle Play/Stop

## <<<<<<<<< Troubleshooting >>>>>>>>

### **Strange behavior in the DAW, unexpected functions, device not recognized, or freezes:**

Disconnect all MIDI-USB devices. In Cubase, delete all control surface configurations (including other MIDI devices) in Controller Assignments and Control Surface Setup and then close Cubase. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Cubase mode.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows – Open the Device Manager in Windows, select the Icon Control Surface, and delete the device. Now restart the control surface to automatically reconfigure. If there remain issues related to the USB connection, a Windows update can repair some issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily. Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Cubase and configure the control surface in Devices -> Device Setup. Press “+” and select Mackie Control. Select your device for both Output and Input Port, displayed under “Device: Mackie Control”

### **Faders are not motorized:**

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

### **Faders make noise or move improperly:**

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

### **I want to control and automate certain parameters:**

Access parameters via the [Assignment Modes](#) and use [Automation Modes](#) to begin creating live automation. Press [Flip](#) to control these parameters with the faders. Use [MIDI Learn](#) to additionally assign parameters or key commands to controls.

### **I want to change the behavior of a function:**

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

### **I want to see custom values on the display:**

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Cubase updates.

### **I want to add a custom function:**

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In Cubase, it is possible to assign **Key Commands** (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

### **I want to rescale the faders:**

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

### **I want to change the Jog Wheel resolution:**

The behavior of the **Jog Wheel** is preset in the DAW implementation of MCP. There is variance between different DAWs. **There may be some adjustment for this, at least by changing grid settings.** Pressing **Scrub** enables fine movement with the **Jog Wheel**.

## **<<<<<<<< Firmware Update >>>>>>>>**

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

### **Caution:**

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If the device startup proceeds normally, external power appears to be ok.

### **To Update:**

OSX – Install and open the device-specific iMap, use “Connect” to select your device, click Update and follow the directions on screen. (For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use “MIDI Devices” to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

**!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.**

**!Never attempt to “downgrade” firmware of an Icon control surface.**

**! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.**

**! Never unpack a .bin firmware file**





You can extensively control Logic Pro X with an Icon QCon series control surface or Icon Platform modular control system using standard Mackie Control protocol. Expansion bank units can be added for more hands-on controls: QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary to access all functions in this manual with Platform M+, and the D2 display highly recommended. Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. Logic and its terminology belongs to Apple and has no affiliation with Icon Pro Audio

**<<<< Table of Contents >>>>**

- Setup ..... -
- Getting Started ..... -
- Mix and Transport ..... -
- Group ..... -
- View ..... -
- Encoder Knob Assignment ..... -
- Automation ..... -
- Advanced Encoder Assignment Modes ..... -
- User Assignments ..... -
- Advanced Utilities ..... -
- Advanced Configuration ..... -
- Masterclass ..... -
- Troubleshooting ..... -
- Firmware Update ..... -
- Fader Calibration ..... -
- MCP MIDI Implementation Table ..... -
- Device Diagnostic ..... -

## <<<<<<Color Reference Key>>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

## <<<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Logic Pro X. Once setup, Logic Pro X will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the **DAW Mode**, then start your DAW software.

When the control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General    **2: Logic Pro**    3: Pro Tools HUI    4: User Defined

In Logic Pro X, advanced configuration needs to be enabled. Open Logic Pro X -> Preferences -> General -> Advanced, select Show Advanced Tools, and verify that all additional options are checked. (Audio, Surround, MIDI, Score, Control Surface, Advanced Edit)

To configure your Icon control surface, go to Logic Pro X -> Control Surfaces -> Setup. Delete previous Mackie Control configurations, then go to New -> Install, select Mackie Control, and click Add. Finally choose your device name for both the Output Port and Input Port, displayed under "Device: Mackie Control".

Repeat this process for any expansion modules, then click and drag the console graphics left/right to match the physical configuration of your control surface fader banks. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Logic Pro X.



## <<<<<<<<<< Getting Started >>>>>>>>>>

When first opening a blank project in Logic Pro X, we are looking at the [Arrange Window](#). Add tracks to your project here, and you will see the motor faders jump into position. Each Icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel. Touch a fader and adjust the track's volume. Change a channel's volume in Logic Pro X and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the [Bank up / down](#) buttons to scroll through further channels in the project in fixed blocks of 8. The [Channel up / down](#) buttons step the focus of the current bank one channel at a time.

The 9th fader on your control surface is the [Master Fader](#) and always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.

The [Encoder Knobs](#) edit parameters according to the current [Assignment Mode](#). Turn them to edit a parameter or change a selection. Each knob affects the track on that channel strip, or in advanced encoder modes, all knobs affect the currently selected track. Press the knob to reset to the default value, or confirm a selection depending on the [Assignment Mode](#).



## <<<<<<<<<<<<Mix and Transport>>>>>>>>>>>>

### **Jog Wheel:**

Turn the **Jog Wheel** to quickly adjust the playhead position on the grid, visible in the Arrange Window in Logic Pro X.

**Scrub** = Toggle **Scrub**: appliesto the **Jog Wheel**

**Shift + Scrub** = Toggle **Shuttle**: turn the **Jog Wheel** to adjust playback speed

**Play - Scrub** = Pause playback

There are options in Logic Pro X for scrubbing:

Preferences -> Audio -> Editing

To enable audio scrub in Logic Pro X, select “Scrubbing with audio...”

*(On Platform M+, scrub is activated by pressing down the jog wheel.)*

### **Transport:**

The **Transport**section is used to operate playback.

**Play** = Begin playback

**Stop** = Stop playback

**Rec** (transport) = Begin recording Audio and MIDI input

**FastForward**= Shuttle forward. Press again to increase forward speed

**Rewind** =Shuttle reverse. Press again to increase backward speed

**Stop - Stop** = Playhead jumps to beat 1 bar 1 or active cycle position

**Play - Play** = Playhead jumps back to the nearest bar or active cycle position

**Shift +Play** = Pause playback

### **Channel Strip Buttons:**

**Rec**(channel) = Arms the channel strip for recording

**Solo** = Engage **Solo** for one or multiple tracks

**Mute** = Engage **Mute** for one or multiple tracks

**Select** = Focuses and selects the track, displays the full track name on the LCD display

**Shift + Select** = Set the channel volume fader to 0 dB

**Option + Select** =Add **Slave Track**: Extra track with shared channel strip – for tracking/editing

**Shift + Option + Select** = Create new track (Uses track type of selected track)

**Option + Rec** (channel strip) = Arm/disarm all channel strips

**Option + Solo** (channel strip) =Toggle **Solo Scene** for all channel strips:

(Press once to disable Solo, press again to restore all previously soloed tracks)

**Option + Mute** = Disable **Mute** for all channel strips

### **Cycle:**

The **Cycle** button toggles the playback loop cycle on/off. Hold **Cycle** and turn the **Jog Wheel** to quickly define the cycle area. Hold **Cycle** and turn the **Jog Wheel** backwards to define a skip area.0

**Cycle+ Rewind** = Set cycle start to the playhead position

**Cycle+ FastForward**= Set cycle end to the playhead position

Press **Shift+Cycle** to display the cycle edit menu. The **Encoder Knobs** adjust the cycle area:

Press Encoder Knob 2 = Set cycle area to selected regions in **Arrange Window**

Turn Encoder Knob 3 = Move the cycle area by bar

Press Encoder Knob 5 = Set cycle start to the playhead position

Turn Encoder Knob 5 = Move cycle start in bars

Turn Encoder Knob 6 = Move cycle start in beats

Press Encoder Knob 7 = Set cycle end to the playhead position

Turn Encoder Knob 7 = Move cycle end in bars

Turn Encoder Knob 8 = Move cycle end in beats

### **Fader Lock:**

Press **Lock Mix** to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Press **Control + Flip** to set all faders to zero and disable all motor fader movement. This is useful to silence the control surface. (*Platform B+ only*)

## <<<<<<<<< Group >>>>>>>>>

Press **Group** to manage group membership. Press the channel **Select** buttons to add tracks to the selected group. Illuminated **Select** buttons indicate group membership for the selected group. The up/down **Cursor Arrows** change the currently selected group.

The left/right **Cursor Arrows** browse the group parameters assigned to the **Encoder Knobs**. Toggle whether these parameters are linked to the group using the knobs:

Group Active, Editing (Selection), Automation, Volume, Pan, Mute, Solo, Input, Record Arm, Send 1-8, Color, Track Zoom, Hide, Phase-Locked Audio (Quantization), Track Alternatives

Hold **Control** to make mix changes bypassing group settings. *(default Platform B+ only)*

## <<<<<<<<< View >>>>>>>>>

### **Displays:**

The LCD display shows track names and parameters, plus navigation for **Assignment Modes** and settings. Press the **Name/Value** button to toggle parameter titles on the LCD display.

The digital time display shows the current playhead position, either in bars and beats or in SMPTE time code format. Press **SMPTE/Beats** to toggle readout formats on the time display.

### **Function Buttons:**

The **Function** buttons, labeled **F1** through **F8**, recall user defined **Screensets** 1 through 8. To setup a useful example, press **F1** and then open the **Arrange Window** in Logic Pro X. Now press **F2** and open the **Mixer Window**. Now you can switch between these views with **F1** and **F2**. Window configurations plus the view options for each **Screenset** are saved with the Logic Pro X project. It is advisable to save useful **Screensets** into your template projects.

Recommended Screensets for a studio with two display monitors:

**F1** = Primary display: **Arrange Window**, Secondary display: **Mixer Window**

**F2** = Primary display: **Mixer Window**, Secondary display: **Arrange Window**

**F3** = Primary display: **Audio Editor Window**, Secondary display: **Arrange Window**

**F4** = Primary display: **Score Editor**, Secondary display: **Arrange Window**

**F5** = Primary display: **Piano Roll**, Secondary display: **Arrange Window**

**F6** = Primary display: **Arrange Window**, Secondary display: **Piano Roll**

**F7** = Primary display: **Arrange Window** (alternate settings), Secondary display: **Mixer Window**

**F8** = Primary display: **Arrange Window**, Secondary display: **Tempo List Editor**

### **Open Windows:**

**Shift + F1** = Open **Arrange Window**

**Shift + F2** = Open **Mixer Window**

**Shift + F3** = Open **Event Editor**

**Shift + F4** = Open **Score Editor**

**Shift + F5** = Open **Step Editor**

**Shift + F6** = Open **Piano Roll**

Shift + F7 = Open **Transport Window**

Shift + F8 = Open **List Editors**

**Zoom & Cursor Arrows:**

The **Cursor Arrows** (left, right, up, down) change selections or modify zoom in the **Arrange Window**. In **Assignment Modes** they change the **Encoder Knob** parameter selection and scroll through pages of parameters when editing plug-ins.

Press **Zoom** to activate zoom controls using the **Cursor Arrows**. Zoom controls only work in the **Arrange Window**. When the Zoom button is illuminated, press **Option + Cursor Arrows** to adjust individual track zoom.

In the **Arrange Window**, the up/down **Cursor Arrows** select the previous/next channel.  
In the **Mixer Window**, the left/right **Cursor Arrows** select the previous/next channel.  
(On Platform M+, Zoom is managed by toggling the **Zoom** buttons and turning the jog wheel.)

**Channel Bank Options:**

- Bank** up/down = Scroll through tracks in the project in fixed blocks of 8
- Channel** up/down = Step the current bank by onetrack
- Option +Bank** up/down = Scroll bank to first or last track
- Option +Channel** up/down = Scrollbank to first or last track

If expansion units are connected, bank left/right scroll by the total number of fader banks.

**Global View:**

While in the **Mixer Window**, press **Global View**. Now use the **Function** buttons to display channel strips in the project by category. Hold multiple **Function** buttons to display multiple types of channel strips. Press **Global View** to restore normal view. This is useful for mixing or editing large sessions, for example projects with complex signal routing or advanced MIDI setups.

- F1 = Midi Tracks
- F2 = Inputs
- F3 = Audio Tracks
- F4 = Instrument Plug-ins
- F5 = Aux
- F6 = Bus
- F7 = Outputs

<<<<<<<<< **Encoder Knob Assignment** >>>>>>>>

Press one of the **Assignment** buttons to select the category of parameters currently assigned to the **Encoder Knobs**. Use the **Cursor Arrows** left/right to select a parameter and up/down to navigate the channel strip position. When the **Encoder Knobs** make a selection from a list, such as plug-in or send destination, press the encoder to confirm the selection.

**Assignment Modes:**

**Track** = Activates **Track Assignment**, view and edit one selected parameter:  
Volume, Pan, Format, Input, Output, Automation, Group, Custom (Automation Parameter)

**Pan** = Activates **Pan Assignment**, edit stereo pan, or surround panning parameters  
Surround Channels: Angle, Diversity, LFE Level, Spread

**EQ** = Activates **EQ Assignment**, opens and edits **Logic Channel EQ** on selected channel  
Parameters: Frequency, Gain, Q-Factor, Band Bypass  
**Cursor Arrows** up/down select EQ Band

**Send** = Activates **Send Assignment**, adjust bus send levels and routing parameters:  
Send Destination, Send Level, Pre/Post, Bypass

**Plug-in** = Activates **Plug-in Assignment**, open plug-ins and access plug-in parameters

**Instrument** = Activates **Instrument Assignment**, open and control instrument plug-ins

### **Fader Flip:**

Press **Flip** to access the current **Encoder Knob** parameters on the touch sensitive motor faders. This is great for precise adjustments of multiple channels/parameters and managing automation. Press **Shift+ Flip** to swap encoder assignments with the fader assignments.

**Cmd**+ turn **Encoder Knob**=Fine parameter adjustment (*only high resolution parameters*)

**Option** + turn **Encoder Knob**= Toggle min, max, default value

**Cmd**+ **Cursor Arrows** left/right = Browse pages by single parameters

**Option** + **Cursor Arrows** = Skip to first/last selection

## **<<<<<<<<<<Automation>>>>>>>>>>**

Ease creating and managing automation is a highlight of using a control surface with motor faders. Press the **Automation** buttons to change the automation behavior of the selected channel. Press **Play** and begin to mix on the knobs and faders in real time with automation. Begin adopting automation into your workflow starting with **Touch** automation.

**Option** + **Read Write**, **Touch**, or **Latch** =Apply automation mode to all tracks

### **Main Automation Modes:**

**Read** = Toggle between **Read** and **Off**:

Set to **Read**, the channel will respond to existing automation in real time. Any parameters with automation will jump to existing automated values during playback.

Set to **Off**, the channel will ignore all automation.

**Write** = All channel parameters record automation during playback. This overrides and replaces all automation. This is for tracking an unassisted mixdown performance.

**Touch** = The channel reads existing automation, plus writes automation for specific parameters adjusted during playback. This only creates automation while parameters are being edited.

**Latch** = Reads existing automation, plus writes automation for specific parameters adjusted during playback. This continues to write automation for any parameters which have been changed during



playback.

### Trim Automation:

**Trim** = Toggle **Trim** behavior on a channel armed with **Touch** or **Latch** automation. When active, **Trim** allows automation to be modified instead of overwritten. Adjusting knobs and faders during playback will make a change relative to existing automation.

**Touch** + **Trim** = **T-Touch**: Adjust automation momentarily while parameters are being edited

**Latch** + **Trim** = **T-Latch**: Adjust automation continuously by changing a parameter

## <<<<<<<<<< **Advanced Encoder Assignment Modes** >>>>>>>>>>

Every Assignment Mode has multiple modes of control. These are specialized control modes advantageous for specific tasks and project styles.

## <<<<<<<<<< **Track** >>>>>>>>>>

### Track Assignment Shortcuts:

Hold **Track** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **Track Assignment Mode**.

Encoder Knob 1 or **F1** = Volume

Encoder Knob 2 or **F2** = Pan

Encoder Knob 3 or **F3** = Input format (Mono, Stereo, L/R, Surround)

Encoder Knob 4 or **F4** = Input assignment

Encoder Knob 5 or **F5** = Output assignment

Encoder Knob 6 or **F6** = Automation mode

Encoder Knob 7 or **F7** = Custom (Select a channel automation parameter in Logic Pro X)

Encoder Knob 8 or **F8** = Activates **Setup Focus Mode**

**Track** + **Group** = Group Assignment

### Track Focus Mode: (**Track** - **Track**)

Press **Track** twice. This allows you to edit multiple channel strip parameters for the selected channel. Parameters appear across the LCD display and each **Encoder Knob** is set to a different function. Press a channel **Select** button to choose that track to edit.

Encoder Knob 1 = Volume

Encoder Knob 2 = Pan

Encoder Knob 3 = Software Instrument

Encoder Knob 4 = Edit Plug-In on slot 1. Press **Shift** + Mute 4 to toggle bypass.

Encoder Knob 5 = Edit Plug-In on slot 2. Press **Shift** + Mute 5 to toggle bypass.

Encoder Knob 6 = Level of Send 1. Press **Shift** + Mute 6 to toggle bypass.

Encoder Knob 7 = Level of Send 2. Press **Shift** + Mute 7 to toggle bypass.

Encoder Knob 8 = Level of Send 1. Press **Shift** + Mute 8 to toggle bypass.

## Setup Focus Mode:(Track+F8)

Encoder Knob 1 = Channel strip format (Mono, Stereo, L/R, Surround)

Encoder Knob 2 = Spread parameter (Surround channels only)

Encoder Knob 3 = Channel strip input assignment

Encoder Knob 4 = Channel strip output assignment

Encoder Knob 5 = Automation mode

Encoder Knob 6 = Quick-edit group membership. ChooseGroup1 to 32 or Off

## <<<<<<<<<< Pan >>>>>>>>>>

### Pan Assignment Shortcuts:

Hold **Pan** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **Pan Assignment Mode**.

Encoder Knob 1 or **F1** = Angle

Encoder Knob 2 or **F2** = Diversity

Encoder Knob 3 or **F3** = LFE Level

Encoder Knob 4 or **F4** = Spread

Encoder Knob 5 or **F5** = -

Encoder Knob 6 or **F6** = Activates **Surround Focus Mode**

Encoder Knob 7 or **F7** = Activates **Angle/Diversity Mixer Mode**

Encoder Knob 8 or **F8** = Activates **X/Y Mixer Mode**

### Surround Focus Mode: (Pan - Pan)

Press **Pan** twice to enter **Surround Focus Mode**, and edit multiple surround parameters for the selected channel. Each **Encoder Knob** is set to a different function. Stereo channels are always assigned the parameter **Pan**.

Encoder Knob 1 = Angle

Encoder Knob 2 = Diversity

Encoder Knob 3 = LFE Level

Encoder Knob 4 = Spread

Encoder Knob 5 = Surround X

Encoder Knob 6 = Surround Y

### Angle/Diversity Mixer Mode:(Pan + F7)

Create dramatic polar-style surround panning for many tracks at once. This style of surround control is best for creating deep immersive surround and automating smooth circular movements. Turning an **Encoder Knob** changes the surround angle, and the **Faders** edit surround diversity.

Angle and Diversity work together to set the virtual position of a sound. Angle is the position of the sound source relative to the listener in 360 degrees. Diversity is like the distance of the source from the listener, where lower values are farther away.

### X/Y Mixer Mode:(Pan + F8)

Create dramatic grid-style surround for many tracks at once. This style of surround control is best for placing sounds on a virtual stage, or for automating sound objects that will move on mostly linear paths relative to the listener. Turning an **Encoder Knob** changes the surround X value, and the **Faders** edit surround Y.

The X/Y parameters are like the coordinates of a sound source relative to the listener, where 0, 0 is centered and coordinates can be set between +/-1000 on the grid.

<<<<<<EQ>>>>>>

## EQ Assignment Mode:(EQ)

Press **EQ** to open (or add) the **Logic Channel EQ**. **EQ Assignment Mode** can only edit a standard **Logic Channel EQ** or **Logic Linear Phase EQ**. Press **Shift+Mute** to toggle EQ band bypass. Press **F1p** to control EQ with the faders and toggle band bypass with **Mute**.

## EQ Assignment Shortcuts:

Hold **EQ** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **EQ Assignment Mode**.

Encoder Knob 1 or **F1** = Frequency

Encoder Knob 2 or **F2** = Gain

Encoder Knob 3 or **F3** = Q-Factor

Encoder Knob 4 or **F4** = Band Bypass

Encoder Knob 5 or **F5** = --

Encoder Knob 6 or **F6** = Activates **EQ Focus Mode**

Encoder Knob 7 or **F7** = Activates **Freq/Gain Mixer Mode**

Encoder Knob 8 or **F8** = Activates **Freq/Gain Channel Mode**

## EQ Focus Mode:(EQ- EQ)

Press **EQ** a second time to open the **Logic Channel EQ** and edit multiple EQ parameters for the selected channel. The left/right **Cursor Arrows** browse pages of EQ bands.

Encoder Knob 1 = Band 1 Frequency

Encoder Knob 2 = Band 1 Gain

Encoder Knob 3 = Band 1 Q-Factor

Encoder Knob 4 = Band 1 Bypass

Encoder Knob 5 = Band 2 Frequency

Encoder Knob 6 = Band 2 Gain

Encoder Knob 7 = Band 2 Q-Factor

Encoder Knob 8 = Band 2 Bypass

## Freq/Gain Mixer Mode:(EQ+ F7)

This is the place to efficiently manage frequency separation between instruments for a mixdown. After the rough mix, use this mode to quickly assign tracks appropriate real estate on the sonic stage. The LCD display shows channel strip names and frequency of the selected EQ band. The **Encoder Knobs** change the EQ frequency, and the faders adjust EQ Gain. **Mute** toggles bypass of the selected EQ band. **Cursor Arrows** up/down select the EQ band.

## Freq/Gain Focus Mode:(EQ+ F8)

Edit frequency and gain for all 8 EQ bands on the selected channel strip. This offers very quick access to powerfully adjust the frequency content of a track, optimal for rough mix. Turning an **Encoder Knob** changes the EQ frequency, and the faders adjust EQ Gain. Each channel **Mute** toggles bypass of its EQ band. Press channel **Select** to edit the EQ on that track.

<<<<<<Send>>>>>>

### Send Assignment Mode:(Send)

Use the **Send Assignment Mode** to set send destinations and adjust send amounts for the selected channel. **Cursor Arrows** up/down change the selected send slot number. **Cursor Arrows** left/right select a parameter. Press **Shift+Mute** to toggle send bypass. Press **Flip** to control the selected parameters on the faders, and while Flip is engaged, press **Mute** to toggle send bypass. Press **Solo** (channel) to toggle send Pre/Post.

### Send Focus Mode:(Send- Send)

Press **Send** twice to enter **Send Focus Mode**, and edit multiple parameters for the selected channel. Each **Encoder Knob** is set to a different function. The left/right **Cursor Arrows** browse pages of send slots. The first page displays send slot 1 & 2, page 2 displays send slot 3 & 4, and so on.

Send 1:

Encoder Knob 1 = Select send destination  
Encoder Knob 2 = Adjust send amount  
Encoder Knob 3 = Set send pre/post fader  
Encoder Knob 4 = Toggle send bypass

Send 2:

Encoder Knob 5 = Select send destination  
Encoder Knob 6 = Adjust send amount  
Encoder Knob 7 = Set send pre/post fader  
Encoder Knob 8 = Toggle send bypass

### Send Assignment Shortcuts:

Hold **Send** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **Send Assignment Mode**.

Encoder Knob 1 or **F1** = Send destination  
Encoder Knob 2 or **F2** = Send amount  
Encoder Knob 3 or **F3** = Send pre/post fader  
Encoder Knob 4 or **F4** = Toggle sendbypass  
Encoder Knob 5 or **F5** = Activates **Send Focus Mode**  
Encoder Knob 6 or **F6** = Activates **Multiple SendFocus Mode**  
Encoder Knob 7 or **F7** = Activates **Destination/Level Mixer Mode**  
Encoder Knob 8 or **F8** = Activates **Destination/Level Focus Mode**

### Multiple Send Focus Mode:(Send+ F6)

This mode is for integrating complex bus routing during the rough mix or production, adjusting both volume balance and complex sends at once.

**Encoder Knobs** 1 to 8 edit the selected send parameter for sends 1 to 8 on the selected track. The left/right **Cursor Arrows** change the selected parameter:

Send Destination, Send Level, Pre/Post, Bypass

In an analog/digital hybrid setup making use of I/O Utility on busses, manage signals to outboard gear without touching manual routing. Once prepared, turn a knob on the control surface to send a track through your outboard gear. The template tracks using hardware would be set to no output, only reaching output through bus sends. This requires rendering the final mix through the hardware: Logic Pro X -> Bounce -> Mode:select"Realtime"

Example: Tracks have no output and have sends ready with Bus 10 – 12 assigned.

Bus 10 = Dry output to digital sum

Bus 11 = I/O plugin (with latency offset) to hardware 1, DAW output 1-2

Bus 12 = I/O plugin (with latency offset) to hardware 2, DAW output 1-2

### **Destination/Level Mixer Mode:(Send+ F7)**

Use this mode to mix send amount and select busses for multiple tracks. With prepared effect busses, this is the place to create an entire effects mix for mixdown.

The **Encoder Knobs** select a send destination, and the faders adjust the send amount. **Mute** toggles send bypass, and **Solo** toggles pre/post. **Cursor Arrows** up/down select the send slot.

### **Destination/Level Focus Mode:(Send+ F8)**

Use this mode to mix the bus effects balance for single complex tracks. This is the optimal tool for making a deep effects mix on prominent tracks such as main vocals and lead sounds. With this mode plus automation, you can use the faders to paint with an artistic pallet of 8 effects to create color, size, dynamics, and complexity. Edit send destination and send level for 8 send slots on the selected channel strip. The **Encoder Knobs** select a send destination, and the faders adjust the send amount. Each channel **Mute** toggles send bypass. Press channel **Solo** to toggle pre/post.

## **<<<<Plug-In>>>>**

### **Plug-In Assignment Mode:(Plug-In)**

Press **Plug-In** to open and edit plug-ins on any track. To quickly edit an existing plug-in, press the **Encoder Knob** to the corresponding plug-in name visible on the LCD display. Plug-In parameters appear on the LCD display and are assigned across the **Encoder Knobs**. Press **Cursor Arrows** left/right to view and edit further pages of parameters. Press **Plug-In** to exit. Press **Shift + Mute** to bypass the plug-in. Turn an **Encoder Knob** to select a plug-in and press to confirm and edit. The up/down **Cursor Arrows** change the selected slot number.

### **Plug-In Focus Mode: (Plug-In -Plug-In)**

Press **Plug-In** again to view and edit plug-ins in the first 8 slots of the selected track. Press **Shift + Mute** to bypass a plug-in. Turn and press an **Encoder Knob** to select a plug-in for the corresponding slot number. Adjust parameters with the knobs and use the left/right **Cursor Arrows** to view and edit further pages of parameters.

## <<<<Instrument>>>>

### Instrument Assignment Mode:

Press **Instrument** to open and edit instrument plug-ins on MIDI software instrument tracks. Turn and press an **Encoder Knob** to select an instrument. Parameters appear across the LCD display and can be edited with the **Encoder Knobs**. Use the left/right **Cursor Arrows** to view and edit further pages of parameters. Press **Plug-In** to exit. Press **Shift + Mute** to bypass the plug-in.

## <<<<User Assignments>>>>

**MIDI Learn** is to be used on the **Encoder Knobs** while **User Assignments** are activated. After parameter assignment, press **Flip** to adjust and automate with the motor faders. Any automatable parameter can be mapped to the control surface using **MIDI Learn** in Logic Pro X. Five individual **User Assignment** setups can be used for unique sets of **MIDI Learn** assignments.

**Shift + Track** = User Assignments 1

**Shift + Pan** = User Assignments 2

**Shift + EQ** = User Assignments 3

**Shift + Send** = User Assignments 4

**Shift + Plug-in** = User Assignments 5

**Shift + Instrument** = **Smart Controls**

To create an assignment in one of the User Modes, use **MIDI Learn** in Logic Pro X to map parameters to the Encoder Knobs:

1. Enter a **User Assignment** mode –the LCD display is blank
2. Move the parameter you want to assign with the mouse in Logic Pro X
3. Press the keyboard shortcut “Command + L”, the **Controller Assignments Window** appears.
4. Turn the **Encoder Knob** to assign.
5. Move the next parameter with the mouse in Logic Pro X.
6. Turn the next **Encoder Knob** to assign.
7. Click the Learn button in the **Controller Assignments Window** to finish. Now the **User Assignment** can be used and recalled later.

Parameter names and values set with **MIDI Learn** in **User Assignments** appear on the LCD display. Press **Flip** to access these custom parameters on the faders. This way the motor faders will also follow automation.

## <<<<Advanced Utilities>>>>

The Utilities buttons access additional workflow operations, and many button combinations access extended functionality and options.

## Click:

Click = Activate/deactivate metronome click (separate for playback and record)

Shift + Click = Activate/deactivate external sync and the transmission of MMC

(MMC is for controlling compatible tape machines from the DAW)

The metronome click is a tempo reference for production and recording.

There are options and settings in Logic Pro X for the click:

File ->Project Settings -> Metronome

## Solo:

Solo (transport) = Activate Solo Regions: selected regions in the Arrange Window are solo

Shift + Solo = SetSolo Lock: selected regions solo, regardless of subsequent selections

Solo Regions is a useful evaluation tool for production, plus aids in audio editing. This allows efficient techniques exclusive to a digital setup. Use the Solo (channel) buttons to solo by track in the more traditional method.

## Marker:

UseMarker to manage markers in the Arrange Window. Press Marker +Nudge to create a marker at the playhead. Use Rewind or FastForwardto move the playhead and the cycle to the previous/next existing marker.

Press Shift + Marker to displaythe marker menu, or just hold Marker. The Encoder Knobs have the following commands:

Encoder Knob 1 = Jump to marker 1

Encoder Knob 2 = Jump to marker 2

Encoder Knob 3 = Jump to marker 3

Encoder Knob 4 = Jump to marker 4

Encoder Knob 5 = Jump to marker 5

Encoder Knob 6 = Create marker at the playhead

Encoder Knob 7 = Create marker at the nearest bar

Encoder Knob 8 = Deletes marker at the playhead

Markershortcuts:

Marker+ F1 = Jump to marker 1

Marker+ F2 = Jump to marker 2

Marker+ F3 = Jump to marker 3

Marker+ F4 = Jump to marker 4

Marker+ F5 = Jump to marker 5

Marker+ F6= Jump to marker 6

Marker+ F7= Jump to marker 7

Marker+ F8= Jump to marker 8

## Nudge:

Press Nudge to move audio or MIDI regions and events. With nudgeactive, the left/right Cursor Arrowsselect regions. Press Rewind or FastForwardto nudge the selected region. Use nudge to adjust timing, or select multiple regions and organize the arrangement.

Press **Shift +Nudge** to display the nudge menu, or just hold **Nudge**. Each **Encoder Knob** has a different nudge command for the selected region:

Encoder Knob 1 = Set nudge amount for **Rewind** and **FastForward**

Encoder Knob 2 = Move to the playhead

Encoder Knob 3 = Move by bar

Encoder Knob 4 = Move by beat

Encoder Knob 5 = Move by divisions

Encoder Knob 6 = Move by ticks

Encoder Knob 7 = Move by 1 frame

Encoder Knob 8 = Move by ½ frame

Nudge settings for **Rewind** and **FastForward**:

**Nudge + F1** = Ticks

**Nudge + F2** = Divisions

**Nudge + F3** = Beats

**Nudge + F4** = Bars

**Nudge + F5** = Frames

**Nudge + F6** = Half Frames

## **Drop – Autopunch:**

**Drop** toggles **Autopunch**. Autopunch is recording which overwrites existing audio or MIDI within a set punch area. This is a key workflow tool because of the time saved by combining tracking and major edits. Without Autopunch, subsequent takes must be individually edited into the final tracks. Using **Drop** keeps a production moving forward, which boosts creativity and productivity.

Hold **Drop** and turn the **Jog Wheel** to quickly define the punch area.

**Drop + Rewind** = Set punch-in location to the playhead position

**Drop + FastForward** = Set punch-out location to the playhead position

Press **Shift+Drop** to display the punch edit menu. The **Encoder Knobs** adjust the punch area:

Turn Encoder Knob 3 = Move the selected punch area by bar

Press Encoder Knob 5 = Set punch-in locator to the playhead position

Turn Encoder Knob 5 = Move punch-in locator in bars

Turn Encoder Knob 6 = Move punch-in locator in beats

Press Encoder Knob 7 = Set punch-out locator to the playhead position

Turn Encoder Knob 7 = Move punch-out locator in bars

Turn Encoder Knob 8 = Move punch-out locator in beats

## **Replace:**

Press **Replace** to enable overwriting recordings, like recording on tape. **Replace** is not destructive, but it does inspire productivity through simplicity and maintain a clean project **Arrange Window**.

When **Replace** is disabled, recording over existing regions creates a take folder. If enabled, new overlapping audio recordings cut existing regions.



Settings for Replace are in Logic Pro X -> Preferences -> Recording -> Replace:  
Region Erase = Cut MIDI and audio regions when recording  
Region Punch = Cut MIDI and audio regions when recording with input  
Content Erase = Overwrites MIDI and audio inside regions when recording  
Content Punch = Overwrites MIDI and audio inside regions when recording with input

## Region Operations:

Use **Cmd + Function** buttons to manage audio and MIDI regions in the **Arrange Window**.

**Cmd + F1** = Cut

**Cmd + F2** = Copy

**Cmd + F3** = Paste

**Cmd + F4** = Clear

**Cmd + F5** = Select All

**Cmd + F6** = Select All Following

**Cmd + F7** = Select Similar Regions/Events

**Cmd + F8** = Select Inside Locators

## Settings Mode: (Cmd + Name/Value)

Encoder Knob 5 = Toggle track number on the main LCD display = **Option + Name/Value**

Encoder Knob 6 = Engages **Channel Focus Lock**: in **Focus Modes**, the selected track remains on the encoder knobs even after subsequent channel selections.

Encoder Knob 7 = Toggle the main LCD display style = **Name/Value**

Encoder Knob 8 = Toggle the digital time display = **SMPTE/Beats**

## Additional Functions: (default QCon Pro X, Platform B+ only)

**Save** = Save Logic Pro X project

**Option + Save** = Save As: Save project with a new name

**Cancel** = Cancel preselection, Close track folder

**Enter** = Execute, OK, Open selected track folder

**Undo** = Logic Pro X **Undo** function

**Shift + Undo** = Redo

**Option + Undo** = Open Undo History

## External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

**User A** = Toggle Play/Stop

**User B** = Record

## <<<<<<<<< **Advanced Configuration** >>>>>>>>

After successful control surface setup with your Icon control surface and expansion banks, go to Logic Pro X ->Control Surfaces -> Setup for manual configuration.

### **Touch Fader to Select Track:**

Check “activate touch faders activates track” to enable instant track selection when touching a fader. By default this feature is off, and the **Select** buttons are used to select a channel.

### **Fader Touch Sensitivity:**

In the setup window under “Mackie Control” is a setting for fader touch sensitivity. 0 makes the faders slightly less responsive and 5 is the maximum sensitivity.

### **Control Surface Group Parameters:**

These settings impact all fader banks. This is the recommended default setup:

Flip Mode: Off (*“Mute” disables motor faders. Press Flip to restore*)

Display Mode: Value

Clock Display: SMPTE

Channel Strip View Mode: Arrange

Fader Bank for Tracks View: 0

Fader Bank for All View: 0

Channel Strip Parameter: Automation

Surround Parameter: Angle

EQ Band: 3

EQ Parameter: Gain

All EQs Parameter Page: 0

Send Slot: 1

Send Parameter: Destination

All Sends Parameter Page: 0

Split: no. of upper parameters: 0

Instrument Parameter Page: 0

Inst Param Page (Split Lower): 0

Insert Type: Audio (*“MIDI” changes Plug-In Assignment to instead access MIDI FX*)

Insert Slot: 1

Insert Type (Split Lower): Audio

Plug-in Parameter Page: 0

Channel Strip Track: 262145

Channel Strip Track (Split Lower): 262145

Track Lock: (No)

Track Name Format: Name

Parameter Page Shift Mode: By Page (“By Parameter” changes Cursor Arrows menu style)

Relative Change Mode: Coarse (“Full”, “Fine” changes Encoder Knobs edit style)

Mix Group: 1

Group Parameter Page: 0

## <<<<<<<<< Troubleshooting >>>>>>>>

### **Strange behavior in the DAW, unexpected functions, device not recognized, or freezes:**

Disconnect all MIDI-USB devices. In Logic, delete all control surface configurations and zones (including other MIDI devices) in Controller Assignments and Control Surface Setup and then close Logic. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Logic Pro X mode.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and all Icon devices. Restart the Icon control surface to automatically reconfigure.

Finally, start Logic Pro X and configure the control surface in Control Surfaces -> Setup.

Go to New -> Install – select Mackie Control – click Add

Select your device for both Output and Input Port, displayed under “Device: Mackie Control”

### **Faders are not motorized:**

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

### **Faders make noise or move improperly:**

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

### **I want to control and automate certain parameters:**

Use the [User Assignments](#) 1-5 and [MIDI Learn](#) to assign parameters to controls. Press [Shift + Track](#) to activate [User Assignment 1](#), and use [MIDI Learn](#) in Logic Pro X to map parameters to the [Encoder Knobs](#). Now, press [Flip](#) to control these parameters with the faders.

### **Scrub plays no Audio:**

In Logic Pro X, by default scrub does not play audio. To enable audio scrub go to Preferences -> Audio -> Editing, and select “Scrubbing with audio...”

### **I want to change the behavior of a function:**

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

### **I want to see custom values on the display:**

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Logic Pro X updates.

**I want to add a custom function:**

It is possible to use **User Assignment Modes** with **MIDI Learn** to freely assign parameters to the encoder knobs, and press **Flip** to apply these controls to the faders. To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In many DAWs, it is possible to assign Key **Commands** (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

**I want to rescale the faders:**

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

**I want to change the Jog Wheel resolution:**

The behavior of the **Jog Wheel** is preset in the DAW implementation of MCP. In Logic Pro X, its movement resolution is linked to the grid in the **Arrange Window**. There is variance between different DAWs. **There may be some adjustment for this, at least by changing grid settings.** Pressing **Scrub** enables fine movement with the **Jog Wheel**.

**<<<<<<<<<< Firmware Update >>>>>>>>>>>>**

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

**Caution:**

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If the device startup proceeds normally, external power appears to be ok.

**To Update:**

OSX – Install and open the device-specific iMap, use “Connect” to select your device, click Update and follow the directions on screen. (For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use “MIDI Devices” to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

**!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.**

**!Never attempt to “downgrade” firmware of an Icon control surface.**



# Control Surface Functionality Manual

## Pro Tools HUI

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v1.00

This is a master manual. Specific device manuals can be built from this material.

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Pro Tools.

You can extensively control Pro Tools with an Icon QCon series control surface or Icon Platform modular control system using standard MackieControl protocol. Expansion bank units can be added for more hands-on controls: QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary to access all functions in this manual with Platform M+, and the D2 display highly recommended. Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The terms Mackie Control and HUI are used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces. Pro Tools and all DAW-specific terminology belong to their copyright holders and has no affiliation with Icon Pro Audio.

### <<<< Table of Contents >>>>

Setup	.....	-
Getting Started	.....	-
Mix and Transport	.....	-
View	.....	-
Encoder Knob Assignment	.....	-
Utilities	.....	-
User Functions	.....	-
Troubleshooting	.....	-
Firmware Update	.....	-
Fader Calibration	.....	-
MIDI Implementation Table	.....	-
106 Renamed Buttons	.....	-

## <<<<<<Color Reference Key>>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

## <<<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Pro Tools. Once setup, Pro Tools will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the **DAW Mode**, then start your DAW software.

When your control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General    2: Logic Pro    **3: Pro Tools HUI**    4: User Defined

In Pro Tools, go to Setup ->Peripherals ->MIDI Controllers. In row #1, select Type:HUI, and choose your device name for both Receive From and Send To, and select # Ch's: 8.

In addition, go to Setup -> MIDI, Input Devices. Set a check mark next to the Icon control surface and click OK.

## <<<<<<<<< Getting Started >>>>>>>>>

When first opening a blank project in Pro Tools, we are looking at the **Edit Window**. Add Tracks to your project here, and you will see the motor faders jump into position. Each Icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel strip. Touch a fader and adjust the track's volume. Change a track's volume in Pro Tools and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the **Bank up / down** buttons to scroll through further tracks in the project in fixed blocks of 8. The **Channel up / down** buttons step the focus of the current bank one track at a time.

The 9th fader on your control surface is the **Master Fader**. Pro Tools does not support any use of the master fader or master meter with HUI.

The Encoder **Knobs** edit parameters according to the current **Assignment Mode**. Turn them to edit a parameter or change a selection. Each knob affects the track on that channel strip, or in advanced encoder modes, all knobs affect the currently selected Track. Press the knob to reset to the default value, or confirm a selection depending on the **Assignment Mode**.



<<<<<<<<<<**Mix and Transport**>>>>>>>>>

**Transport:**

- Play = Begin playback
- Stop = Stop playback
- Rec (transport) = Arm recording
- FastForward = Shuttle forward in **Edit Window**
- Rewind = Shuttle backwards in **Edit Window**
- Cycle = Toggle the playback loop on/off

**Channel Bank Options:**

- Channel up/down = Step the current bank by one track
- Bank up/down = Scroll through tracks in blocks of 8



## Channel Strip Buttons:

- Rec** (channel) = Arms the track for recording.
- Solo** = Engage **Solo** for one or multiple tracks
- Mute** = Engage **Mute** for one or multiple tracks
- Select** = Focuses and selects the track

## Jog Wheel:

Press **Scrub to** toggle the **Jog Wheel** function between scrub and off. Then turn the **Jog Wheel** to adjust the playhead position, visible in the **Edit Window** in Pro Tools. *(On Platform M+, scrub is accessed by pressing down the jog wheel.)*

## Fader Lock:

Press **Lock Mix** to disable touch sensitive changes to fader position.



## Time Display:

The digital time display shows the current play position in Bars|Beats, Min:Secs, SMPTE Timecode, Feet+Frames, or Samples, depending on the current selection in the Pro Tools transport window.

## Window Shortcuts:

- Edit**= Toggle **Edit Window**
- Mix**= Toggle **Mix View**
- Transport**= Show/hide **Transport Window**
- Mem Lock**= Show/hide **Memory Locations Window**

## Zoom & Cursor Arrows:

The **Cursor Arrows** (left, right, up, down) change selections in both **Mix View** and **Edit Window**, or modify zoom in the **Edit Window**. Press **Zoom** to activate zoom controls using the **Cursor Arrows**. Zoom controls only work in the **Edit Window**.

*(On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)*



Press the **Assignment** buttons to select the category of parameters currently assigned to the **Encoder Knobs**. Press or turn the **Encoder Knobs** to edit parameters.

## Pan Assignment:

**Pan** = Activates **Pan Assignment**, view and edit routing for each track. Press **Pan** again to toggle panning left/right on stereo tracks.

## Routing Assignment: *(QCon Pro X and Platform B+ only)*

**Assign + Input** = Activates **I/O Routing**, edit input routing for each track with the **Encoder Knobs**. Press **Assign** to confirm.

**Assign + Output** = Activates **I/O Routing**, edit output routing for each track with the **Encoder Knobs**. Press **Assign** to confirm.





### **Faders are not motorized:**

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

### **Faders make noise or move improperly:**

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

### **I want to control and automate certain parameters:**

Access parameters via the [Assignment Modes](#) and use [Automation Modes](#) to begin creating live automation. Press [Flip](#) to control these parameters with the faders.

### **I want to change the behavior of a function:**

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

### **I want to see custom values on the display:**

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Pro Tools updates.

### **I want to add a custom function:**

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In some DAWs, it is possible to assign [Key Commands](#) (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

### **I want to rescale the faders:**

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

### **I want to change the Jog Wheel resolution:**

The behavior of the [Jog Wheel](#) is preset in the DAW implementation of MCP. There is variance between different DAWs. [There may be some adjustment for this, at least by changing grid settings](#). Pressing [Scrub](#) enables fine movement with the [Jog Wheel](#).

## <<<<<<<<< Firmware Update >>>>>>>>>

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

### **Caution:**

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If the device startup proceeds normally, external power appears to be ok.

### **To Update:**

OSX – Install and open the device-specific iMap, use “Connect” to select your device, click Update and follow the directions on screen. (For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use “MIDI Devices” to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

**!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.**

**!Never attempt to “downgrade” firmware of an Icon control surface.**

**! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.**

**! Never unpack a .bin firmware file**

## <<<<<<<<< Fader Calibration – QCon Series >>>>>>>>>

We recommend that every QCon owner performs a fader calibration. The best values vary according to the DAW of choice and preference. In the digital domain (in your DAW) values can move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. **Fader Calibration** allows fine adjustment to the properties of how each motor fader responds when commanded to move.

Press and hold the Rec Button on channel two and start the device. Fader Calibration will display. Turn each Encoder Knob to fine tune the value for each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. Each fader can be fine tuned individually. To adjust the master fader, use the channel select buttons 7 and 8. To save the new changes and exit, press Encoder Knob 8.

Start with values set at 185, evaluate, then adjust individually to personal preference.



## <<<<< Table of Contents >>>>>

Setup	.....	-
Getting Started	.....	-
Mix and Transport	.....	-
Group	.....	-
View	.....	-
Encoder Knob Assignment	.....	-
Utilities	.....	-
UserFunctions	.....	-
Troubleshooting	.....	-
Firmware Update	.....	-
Fader Calibration	.....	-
MCP MIDI Implementation Table	.....	-
Renamed Buttons	.....	-

## <<<<<Color Reference Key>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

## <<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Ableton Live. Once setup, Ableton Live will remember your settings for future sessions without

the need to reconfigure. For maximum stability, first boot the control surface and select the DAW Mode, then start your DAW software.

When your control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

- 1: MCP General**                    2: Logic Pro      3: Pro Tools HUI      4: User Defined

In Ableton Live, advanced configuration needs to be enabled. Open Ableton Live -> Preferences -> General -> Advanced, select Show Advanced Tools, and verify that all additional options are checked. (Audio, Surround, MIDI, Score, Control Surface, Advanced Edit)

To configure your Icon control surface, go to Ableton Live -> Control Surfaces -> Setup. Delete previous Mackie Control configurations, then go to New -> Install, select Mackie Control, and click Add. Finally choose your device name for both the Output Port and Input Port, displayed under "Device: Mackie Control".

Repeat this process for any expansion modules but us Mackie Control XT. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Ableton Live.

## <<<<<<<<< **Getting Started** >>>>>>>>>

When first opening a blank project in Ableton Live, we are looking at the **Session View**. Add tracks to your project here, and you will see the motor faders jump into position. Each Icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel. Touch a fader and adjust the track's volume. Change a channel's volume in Ableton Live and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the **Bank** up / down buttons to scroll through further channels in the project in fixed blocks of 8. The **Channel** up / down buttons step the focus of the current bank one channel at a time.

The 9th fader on your control surface is the **Master Fader** and always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.



The **Encoder Knobs** edit parameters according to the current **Assignment Mode**. Turn them to edit a parameter or change a selection. Each knob affects the track on that channel strip, or in advanced encoder modes, all knobs affect the currently selected track. Press the knob to reset to the default value, or confirm a selection depending on the **Assignment Mode**.



## <<<<<<<<< Mix and Transport >>>>>>>>

### Jog Wheel:

Turn the **Jog Wheel** to quickly adjust the play position on the grid, visible in the **Arrangement View** in Ableton Live. **Scrub** toggles the **Jog Wheel** behavior. (On Platform M+, scrub is activated by pressing down the jog wheel.)

!! By default in Ableton Live, scrub is disabled in the arrangement. To enable Scrub in **Arrangement View**, in Ableton Live go to Preferences -> Look/Feel and activate “Permanent Scrub Areas”.

### Transport:

**Play** = Begin playback

**Stop** = Stop playback

**Rec** (transport) = Begin recording Audio and MIDI input

**FastForward**= Shuttle forward in **Arrangement View**

**Rewind** =Shuttle backwards in **Arrangement View**

**Cycle** = Toggle the playback loop cycle on/off

### **Channel Bank Options:**

**Bank** up/down = Scroll through tracks in the project in fixed blocks of 8

**Channel** up/down = Step the current bank by one track

**Shift + Bank** up/down = Scroll bank to first or last track

**Shift + Channel** up/down = Scroll bank to first or last track

### **Channel Strip Buttons:**

**Rec** (channel) = Arms a singletrack for recording.

**!!** To allow multiple track recording, in Ableton Live go to Preferences ->Misc and deactivate "Exclusive Track Arming"

**Solo** = Engage **Solo** for a singletrack

**!!** To allow multiple tracks insolo, in Ableton Live go to Preferences ->Misc and deactivate "Exclusive Track Soloing"

**Mute** = Engage **Mute** for one or multiple tracks

**Select** = Focuses and selects the track

### **Fader Lock:**

Press **Lock Mix** to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.



### **Time Display:**

The digital time display shows the current play position, either in bars and beats or in SMPTE time code format. Press **SMPTE/Beats** to toggle readout formats on the time display.

### **View Shortcuts:**

**Session/Arrange**= Toggle **Arrangement View** and **Session View**

**Track/Clip** = Toggle **Clip View** and **Track View**

**Browser** = Show/hide the **Browser**

**Clip Detail** = Show/hide the **Clip/Track View**

Follow = Activate Follow Mode to auto-scroll during playback in Arrangement View

Zoom & Cursor Arrows:

The **Cursor Arrows** (left, right, up, down) change selections or modify zoom in the **Arrangement View**. In **Assignment Modes** they change the **Encoder Knob** parameter selection and scroll through pages of parameters when editing plug-ins.

Press **Zoom** to activate zoom controls using the **Cursor Arrows**. Zoom controls only work in the **Arrangement View**. When the Zoom button is illuminated, press **Option + Cursor Arrows** to adjust individual track zoom.

*(On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)*

**Show Return Tracks:** (**Returns**)

Activate showing **Return Tracks** to display and control return tracks on the channel strips.

*(On QCon Pro G2: **Shift + F8**)*

## <<<<< <<<< **Encoder Knob Assignment** >>>> >>>>>

Press one of the Assignment buttons to select the category of parameters currently assigned to the Encoder Knobs. Turn the Encoder Knobs to edit parameters, and press to toggle selection from a list. Pressing a knob when editing a parameter restores the default value. Use Previous / Next to browse pages of parameters.

**Assignment Mode s:**

**I/O** = Activates **Routing Assignment**, view and edit routing for each track. Press **I/O** to toggle viewing Input Type, Input Channel, Output Type, Output Channel

**Send** = Activates **Send Assignment**, adjust multiple send levels for the selected track

**Pan** = Activates **Pan Assignment**, edit stereo pan for each track

**Rack** = Activates **Rack Assignment**, create and adjust plug-in effects and instruments: Press **Rack** to display devices for the currently selected track. Use **Page** up/down to browse pages of devices and press an **Encoder Knobs** to select a device. Parameters appear across the LCD display over the **Encoder Knobs** to be edited.

**Fader Flip :**

Press **Flip** to access the current **Encoder Knob** parameters on the touch sensitive motor faders. Channel volume can then be adjusted using the **Encoder Knobs**. This is great for precise parameter adjustments and managing automation.

## <<<<< <<<< **Utilities** >>>> >>>>>

Use **Marker** to create a locator at the play position. Press **Stop**, then **Marker** to delete a currently selected locator. Press **Next / Previous** to jump between set locators.

Press **Draw Mode** to create automation in **Arrangement View**. Use the **Faders** to automate volume and the **Encoder Knobs** to automate the parameters currently assigned to.

**Undo** = Ableton Live **Undo** function

**Redo** = Ableton Live **Redo** function

**Shift + Session/Arrange** = Set focus to **Arrangement View** or **Session View**

**Shift + Track/Clip** = Set focus to **Track View** or **Clip View**

**Shift + Browser** = Set focus to **Browser**

## <<<<<<<<<< **User Functions** >>>>>>>>>>

The eight **Function** buttons, **F1** through **F8**, are to be assigned custom user commands using **MIDI map mode** in Ableton Live. MIDI mappings are saved in projects and your favorite setup should best be saved in your template project.

Recommended custom user commands:

**F1** = Play all clips in Scene 1 (Master, **Session View**)

**F2** = Play all clips in Scene 2

**F3** = Play all clips in Scene 3

**F4** = Play all clips in Scene 4

**F5** = Play all clips in Scene 5

**F6** = Play all clips in Scene 6

**F7** = Play all clips in Scene 7

**F8** = Play all clips in Scene 8

In Ableton Live, assigning MIDI mappings overrides control surface functions. This allows that in addition to the **Function** buttons, other buttons can be assigned useful functions as well. MIDI mappings are saved in projects and your favorite setup should best be saved in your template project.

Additional recommended user commands:

G2 and Pro X

(Name/Value) = Tap Tempo- Press repeatedly to set project BPM  
(DAWmode1) = Punch In- start recording at the loop start position  
(DAWmode2) = Punch Out - stop recording at the loop end position  
(DAWmode3) = Capture- Create a clip from the last given MIDI input  
(2ndBot-Left) = Metronome-(On/Off)

Additional for Pro X

(AssignmentRight) = MIDI Arrangement Overdub- Recording MIDI adds to existing clips  
(MarkerFarRight1) = NEW - Opens new scene for all record armed tracks  
(MarkerFarRight2) = Automation Arm - enables automation recording  
Shift + F1 to F8 = User Functions F9 to F16(Verify in new firmware)

### **External Controls:**

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A and User B = Can be assigned a function with MIDI Mapping

## <<<<<<<<<< Troubleshooting >>>>>>>>>>

### **Strange behavior in the DAW, unexpected functions, device not recognized, or freezes:**

Disconnect all MIDI-USB devices. In Logic, delete all control surface configurations and zones (including other MIDI devices) in Controller Assignments and Control Surface Setup and then close Logic. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Ableton Live mode.

First check that the specified USB cable is in good condition and well connected. For testing, connect directly to the computer without a USB hub or USB extension cable.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows –Open the Device Manager in Windows, select the Icon Control Surface, and delete the device. Now restart the control surface to automatically reconfigure. If there remain issues related to the USB connection, a Windows update can repair some issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily. Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Ableton Live and configure the control surface in Control Surfaces -> Setup.

Go to New -> Install – select Mackie Control – click Add

Select your device for both Output and Input Port, displayed under “Device: Mackie Control”

Repeat the process for extensions, but instead select Mackie Control XT.

### **Faders are not motorized:**

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

## Faders make noise or move improperly:

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

## I want to control and automate certain parameters:

Access parameters via the [Assignment Modes](#) and use [Automation Modes](#) to begin creating live automation. Press Flipto control these parameters with the faders. Additionally, use [MIDI Learn](#) to assign parameters to free user controls.

## I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

## I want to see custom values on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Ableton Live updates.

## I want to add a custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In some DAWs, it is possible to assign [Key Commands](#) (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

## I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

## I want to change the Jog Wheel resolution:

The behavior of the [Jog Wheel](#) is preset in the DAW implementation of MCP. There is variance between different DAWs. **There may be some adjustment for this, at least by changing grid settings.** Pressing [Scrub](#) enables fine movement with the [Jog Wheel](#).

## <<<<<<<<< Firmware Update >>>>>>>>>

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

## Caution:

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software

which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If the device startup proceeds normally, external power appears to be ok.

**To Update:**

OSX – Install and open the device-specific iMap, use “Connect” to select your device, click Update and follow the directions on screen. (For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use “MIDI Devices” to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.

!Never attempt to “downgrade” firmware of an Icon control surface.

! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.

! Never unpack a .bin firmware file

<<<<<<<<<<<< **Fader Calibration – QCon Series** >>>>>>>>>>>>

We recommend that every QCon owner performs a fader calibration. The best values vary according to the DAW of choice and preference. In the digital domain (in your DAW) values can move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. **Fader Calibration** allows fine adjustment to the properties of how each motor fader responds when commanded to move.

Press and hold the Rec Button on channel two and start the device. Fader Calibration will display. Turn each Encoder Knob to fine tune the value for each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. Each fader can be fine tuned individually. To adjust the master fader, use the channel select buttons 7 and 8. To save the new changes and exit, press Encoder Knob 8.

For Live 10, I recommend starting with values set at 185, evaluate, then adjust individually to personal preference.

<<<<<<<<<<<< **Fader Calibration – Platform (v2.00 and up)** >>>>>>>>>>>>

We recommend that every Platform owner performs a fader calibration. The best adjustment varies according to the DAW of choice and preference. In the digital domain (in your DAW) values can move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. **Fader Calibration** allows adjustment to the properties of how the motor faders respond when commanded to move.

Press and hold the Encoder Knob on channel one and start the device. Turn Encoder Knob 8 to adjust the total fader response. It is also possible to adjust a single fader by now holding down Rec on channel three while adjusting the encoder of each channel. A higher value results in

smoother, quieter response. A lower value results in faster movement speed. To save the new changes and exit, press Encoder Knob 8.

I recommend starting with a slower movement, test in your DAW and evaluate, then adjust individually to personal preference.

# Appendix B

## Cubase

### <<<<<<<< MCP MIDI Implementation >>>>>>>>

This is a list of standard MCP functions in Cubase and their MIDI CC control values.

MIDI Ch1	Functionl	nfo	Functionl	nfo
<b>Ch1</b>	<b>Cubase</b>		<b>Ch1</b>	<b>Cubase</b>
C1	Select 1	<i>Channel Select</i>	G#1	Encoder 1 <i>Press Encoder</i>
C#1	Select 2	<i>Channel Select</i>	A1	Encoder 2 <i>Press Encoder</i>
D1	Select 3	<i>Channel Select</i>	A#1	Encoder 3 <i>Press Encoder</i>
D#1	Select 4	<i>Channel Select</i>	B1	Encoder 4 <i>Press Encoder</i>
E1	Select 5	<i>Channel Select</i>	C2	Encoder 5 <i>Press Encoder</i>
F1	Select 6	<i>Channel Select</i>	C#2	Encoder 6 <i>Press Encoder</i>
F#1	Select 7	<i>Channel Select</i>	D2	Encoder 7 <i>Press Encoder</i>
G1	Select 8	<i>Channel Select</i>	D#2	Encoder 8 <i>Press Encoder</i>
C-1	Rec 1	<i>Channel Rec</i>	E2	Page Up
C#-1	Rec 2	<i>Channel Rec</i>	F2	Page Down
D-1	Rec 3	<i>Channel Rec</i>	F#2	Pan <i>Assignment</i>
D#-1	Rec 4	<i>Channel Rec</i>	G2	Plugin <i>Assignment</i>
E-1	Rec 5	<i>Channel Rec</i>	G#2	EQ <i>Assignment</i>
F-1	Rec 6	<i>Channel Rec</i>	A2	FX Send <i>Assignment</i>
F#-1	Rec 7	<i>Channel Rec</i>	A#2	Bank Up <i>Bank 8 Channels</i>
G-1	Rec 8	<i>Channel Rec</i>	B2	Bank Down <i>Bank 8 Channels</i>
G#-1	Solo 1	<i>Channel Solo</i>	C3	Channel Up <i>Bank One Channel</i>
A-1	Solo 2	<i>Channel Solo</i>	C#3	Channel Down <i>Bank One Channel</i>
A#-1	Solo 3	<i>Channel Solo</i>	D3	Flip <i>Fader Flip Mode</i>
B-1	Solo 4	<i>Channel Solo</i>	D#3-	
C0	Solo 5	<i>Channel Solo</i>	A#4	Undo
C#0	Solo 6	<i>Channel Solo</i>	B4	Redo
D0	Solo 7	<i>Channel Solo</i>	C5	Save
D#0	Solo 8	<i>Channel Solo</i>	C#5-	
E0	Mute 1	<i>Channel Mute</i>	C6	Left
F0	Mute 2	<i>Channel Mute</i>	C#6	Right
F#0	Mute 3	<i>Channel Mute</i>	D6	Loop
G0	Mute 4	<i>Channel Mute</i>	D#6-	
G#0	Mute 5	<i>Channel Mute</i>	E6	Previous <i>(Layer 2)</i>
A0	Mute 6	<i>Channel Mute</i>	F6	Add <i>(Layer 2)</i>



MIDI Ch1	Functionl <u>Cubase</u>	nfo	Functionl <u>Cubase</u>	nfo
A#0	Mute 7	<i>Channel Mute</i>	F#6	Next <i>(Layer 2)</i>
B0	Mute 8	<i>Channel Mute</i>	F7	Scrub
A6	Stop		D5	Read <i>Automation</i>
A#6	Play		D#5	Write <i>Automation</i>
B6	Record	<i>Main record</i>	E5	Sends <i>Automation</i>
C7	Cursor Up	^	F5	Project <i>Automation</i>
D7	Cursor Left	<	F#5	Mixer <i>Automation</i>
E7	Zoom		G5	Motors
D#7	Cursor Right	>	E3	Name/Value <i>Display</i>
C#7	Cursor Down	∨	F3	SMPTE/Beats <i>Display</i>
G6	Rewind	<<	F#3	F1 <i>Function</i>
G#6	FastForward	>>	G3	F2 <i>Function</i>
G#5	Instrument		G#3	F3 <i>Function</i>
A5	Master		A3	F4 <i>Function</i>
A#5	Solo Defeat		A#3	F5 <i>Function</i>
B5	Write		B3	F6 <i>Function</i>
			C4	F7 <i>Function</i>
			C#4	F8 <i>Function</i>
D4	Group 1	<i>Layer 2 (Fader Groups)</i>	F#4	Group 5 <i>Layer 2 (Fader Groups)</i>
D#4	Group 2	<i>Layer 2 (Fader Groups)</i>	G4	Group 6 <i>Layer 2 (Fader Groups)</i>
E4	Group 3	<i>Layer 2 (Fader Groups)</i>	G#4	Group 7 <i>Layer 2 (Fader Groups)</i>
F4	Group 4	<i>Layer 2 (Fader Groups)</i>	A4	Group 8 <i>Layer 2 (Fader Groups)</i>

## Logic Pro X

### <<<<<<<<<< MCP MIDI Implementation >>>>>>>>>

This is a list of supported standard MCP functions in Logic Pro X and their MIDI CC control values. Each CC triggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value using iMap software.

MIDI Ch1	Functionl <u>Logic Pro X</u>	nfoM	MIDI Ch1	Functionl <u>Logic Pro X</u>	nfo
C1	Select 1	<i>Channel Select</i>	G#1	Encoder 1	<i>Press Encoder</i>
C#1	Select 2	<i>Channel Select</i>	A1	Encoder 2	<i>Press Encoder</i>
D1	Select 3	<i>Channel Select</i>	A#1	Encoder 3	<i>Press Encoder</i>
D#1	Select 4	<i>Channel Select</i>	B1	Encoder 4	<i>Press Encoder</i>
E1	Select 5	<i>Channel Select</i>	C2	Encoder 5	<i>Press Encoder</i>
F1	Select 6	<i>Channel Select</i>	C#2	Encoder 6	<i>Press Encoder</i>
F#1	Select 7	<i>Channel Select</i>	D2	Encoder 7	<i>Press Encoder</i>
G1	Select 8	<i>Channel Select</i>	D#2	Encoder 8	<i>Press Encoder</i>

<b>MIDI</b>	<b>Functionl</b>	<b>nfoM</b>	<b>MIDI</b>	<b>Functionl</b>	<b>nfo</b>
<b>Ch1</b>	<b>Logic Pro X</b>		<b>Ch1</b>	<b>Logic Pro X</b>	
C-1	Rec 1	<i>Channel Rec</i>	E2	Track	<i>Assignment</i>
C#-1	Rec 2	<i>Channel Rec</i>	F2	Send	<i>Assignment</i>
D-1	Rec 3	<i>Channel Rec</i>	F#2	Pan	<i>Assignment</i>
D#-1	Rec 4	<i>Channel Rec</i>	G2	Plugin	<i>Assignment</i>
E-1	Rec 5	<i>Channel Rec</i>	G#2	EQ	<i>Assignment</i>
F-1	Rec 6	<i>Channel Rec</i>	A2	Instrument	<i>Assignment</i>
F#-1	Rec 7	<i>Channel Rec</i>	A#2	Bank Up	<i>Bank 8 Channels</i>
G-1	Rec 8	<i>Channel Rec</i>	B2	Bank Down	<i>Bank 8 Channels</i>
G#-1	Solo 1	<i>Channel Solo</i>	C3	Channel Up	<i>Bank One Channel</i>
A-1	Solo 2	<i>Channel Solo</i>	C#3	Channel Down	<i>Bank One Channel</i>
A#-1	Solo 3	<i>Channel Solo</i>	D3	Flip	<i>Fader Flip Mode</i>
B-1	Solo 4	<i>Channel Solo</i>	D#3	Global View	
C0	Solo 5	<i>Channel Solo</i>	A#4	Shift	
C#0	Solo 6	<i>Channel Solo</i>	B4	Option	
D0	Solo 7	<i>Channel Solo</i>	C5	Control	<i>B+ Only</i>
D#0	Solo 8	<i>Channel Solo</i>	C#5	Cmd	<i>DAW Mode</i>
E0	Mute 1	<i>Channel Mute</i>	C6	Marker	
F0	Mute 2	<i>Channel Mute</i>	C#6	Nudge	
F#0	Mute 3	<i>Channel Mute</i>	D6	Cycle	
G0	Mute 4	<i>Channel Mute</i>	D#6	Drop	
G#0	Mute 5	<i>Channel Mute</i>	E6	Replace	
A0	Mute 6	<i>Channel Mute</i>	F6	Click	
A#0	Mute 7	<i>Channel Mute</i>	F#6	Solo	<i>Region Solo Mode</i>
B0	Mute 8	<i>Channel Mute</i>	D7	Scrub	
A6	Stop		D5	Read	<i>Automation</i>
A#6	Play		D#5	Write	<i>Automation</i>
B6	Record	<i>Main record</i>	E5	Trim	<i>Automation</i>
C7	Cursor Up	^	F5	Touch	<i>Automation</i>
C#7	Cursor Left	<	F#5	Latch	<i>Automation</i>
D#7	Zoom		G5	Group	
E7	Cursor Right	>	E3	Name/Value	<i>Display</i>
F7	Cursor Down	√	F3	SMPTE/Beats	<i>Display</i>
G6	Rewind	<<	F#3	F1	<i>Function</i>
G#6	Fast Forward	>>	G3	F2	<i>Function</i>
G#5	Save	<i>QCon Pro X, B+ only</i>	G#3	F3	<i>Function</i>
A5	Undo	<i>QCon Pro X, B+ only</i>	A3	F4	<i>Function</i>
A#5	Cancel	<i>QCon Pro X, B+ only</i>	A#3	F5	<i>Function</i>
B5	Enter	<i>QCon Pro X, B+ only</i>	B3	F6	<i>Function</i>
D4	Global Tracks	<i>! Not mapped</i>	C4	F7	<i>Function</i>
D#4	Global Inputs	<i>! Not mapped</i>	C#4	F8	<i>Function</i>
E4	Global Audio	<i>! Not mapped</i>	F#4	Global Aux	<i>! Not mapped</i>
F4	Global Instrument	<i>! Not mapped</i>	G4	Global Bus	<i>! Not mapped</i>
			G#4	Global Output	<i>! Not mapped</i>
			A4	Global User	<i>! Not mapped</i>

# Pro Tools HUI

## <<<<<<<< MCP MIDI Implementation >>>>>>>>

This is a list of supported standard MCP functions in Pro Tools and their MIDI CC control values. Each CC triggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value using iMap software.

<b>MIDI Functionl</b>	<b>nfoM</b>	<b>MIDI Functionl</b>	<b>nfo</b>
<b>Ch1 Pro Tools</b>		<b>Ch1 Pro Tools</b>	
<b>C1</b> Select 1	<i>Channel Select</i>	<b>G#1</b> Encoder 1	<i>Press Encoder</i>
<b>C#1</b> Select 2	<i>Channel Select</i>	<b>A1</b> Encoder 2	<i>Press Encoder</i>
<b>D1</b> Select 3	<i>Channel Select</i>	<b>A#1</b> Encoder 3	<i>Press Encoder</i>
<b>D#1</b> Select 4	<i>Channel Select</i>	<b>B1</b> Encoder 4	<i>Press Encoder</i>
<b>E1</b> Select 5	<i>Channel Select</i>	<b>C2</b> Encoder 5	<i>Press Encoder</i>
<b>F1</b> Select 6	<i>Channel Select</i>	<b>C#2</b> Encoder 6	<i>Press Encoder</i>
<b>F#1</b> Select 7	<i>Channel Select</i>	<b>D2</b> Encoder 7	<i>Press Encoder</i>
<b>G1</b> Select 8	<i>Channel Select</i>	<b>D#2</b> Encoder 8	<i>Press Encoder</i>
<b>C-1</b> Rec 1	<i>Channel Rec</i>	<b>E2</b> Pan	<i>Assignment</i>
<b>C#-1</b> Rec 2	<i>Channel Rec</i>	<b>F2</b> Plugin	<i>Assignment</i>
<b>D-1</b> Rec 3	<i>Channel Rec</i>	<b>F#2</b> Assign	<i>Assignment</i>
<b>D#-1</b> Rec 4	<i>Channel Rec</i>	<b>G2</b> Send	<i>Assignment</i>
<b>E-1</b> Rec 5	<i>Channel Rec</i>	<b>G#2</b> Input	
<b>F-1</b> Rec 6	<i>Channel Rec</i>	<b>A2</b> Output	
<b>F#-1</b> Rec 7	<i>Channel Rec</i>	<b>A#2</b> Bank Up	<i>Bank 8 Channels</i>
<b>G-1</b> Rec 8	<i>Channel Rec</i>	<b>B2</b> Bank Down	<i>Bank 8 Channels</i>
<b>G#-1</b> Solo 1	<i>Channel Solo</i>	<b>C3</b> Channel Up	<i>Bank One Channel</i>
<b>A-1</b> Solo 2	<i>Channel Solo</i>	<b>C#3</b> Channel Down	<i>Bank One Channel</i>
<b>A#-1</b> Solo 3	<i>Channel Solo</i>	<b>D3</b> V-sel	
<b>B-1</b> Solo 4	<i>Channel Solo</i>	<b>D#3</b> Insert	
<b>C0</b> Solo 5	<i>Channel Solo</i>	<b>A#4</b> Shift	<i>Add</i>
<b>C#0</b> Solo 6	<i>Channel Solo</i>	<b>B4</b> Option	<i>All</i>
<b>D0</b> Solo 7	<i>Channel Solo</i>	<b>C5</b> Control	<i>Clutch</i>
<b>D#0</b> Solo 8	<i>Channel Solo</i>	<b>C#5</b> Cmd	<i>Alt</i>
<b>E0</b> Mute 1	<i>Channel Mute</i>	<b>C6</b> In	<i>RTZ</i>
<b>F0</b> Mute 2	<i>Channel Mute</i>	<b>C#6</b> Out	<i>End</i>
<b>F#0</b> Mute 3	<i>Channel Mute</i>	<b>D6</b> Cycle	<i>Pre</i>
<b>G0</b> Mute 4	<i>Channel Mute</i>	<b>D#6</b> Online	<i>Post</i>
<b>G#0</b> Mute 5	<i>Channel Mute</i>	<b>E6</b> QPunch	
<b>A0</b> Mute 6	<i>Channel Mute</i>	<b>F6</b> Cue	<i>Mgr</i>
<b>A#0</b> Mute 7	<i>Channel Mute</i>	<b>F#6</b> Suspend	
<b>B0</b> Mute 8	<i>Channel Mute</i>	<b>D7</b> Scrub	
<b>A6</b> Stop		<b>F#3</b> F1	<i>Function</i>
<b>A#6</b> Play		<b>G3</b> F2	<i>Function</i>
<b>B6</b> Record	<i>Main record</i>	<b>G#3</b> F3	<i>Function</i>
<b>C7</b> Cursor Up	<i>^</i>	<b>A3</b> F4	<i>Function</i>

<b>MIDI Functionl Ch1 Pro Tools</b>	<b>nfoM</b>	<b>MIDI Functionl Ch1 Pro Tools</b>	<b>nfo</b>
<b>D7</b> Cursor Left	<	<b>A#3</b> F5	<i>Function</i>
<b>E7</b> Zoom		<b>B3</b> F6	<i>Function</i>
<b>D#7</b> Cursor Right	>	<b>C4</b> F7	<i>Function</i>
<b>C#7</b> Cursor Down	√	<b>C#4</b> F8	<i>Function</i>
<b>D4</b> Read	<i>Send A</i>	<b>G6</b> Rewind	<<
<b>D#4</b> Write	<i>Send B</i>	<b>G#6</b> FastForward	>>
<b>E4</b> Touch	<i>Send C</i>		
<b>F4</b> Latch	<i>Send D</i>	<b>G#5</b> Save	
<b>F#4</b> Trim	<i>Send E</i>	<b>A5</b> Undo	
<b>G4</b> Off	<i>Shift</i>	<b>A#5</b> Escape	<i>Cancel</i>
<b>E3</b> Name/Value	<i>Display</i>	<b>B5</b> Enter	
<b>F3</b> SMPTE/Beats	<i>Display</i>		
<b>D5</b> Auto Enable	<i>Fader</i>	<b>F#5</b> Auto Enable	<i>Send</i>
<b>D#5</b> Auto Enable	<i>Mute</i>	<b>G5</b> Auto Enable	<i>Send Mute</i>
<b>E5</b> Auto Enable	<i>Plugin</i>	<b>G#4</b> Blank	<i>Mute</i>
<b>F5</b> Auto Enable	<i>Pan</i>	<b>A4</b> Default	<i>Bypass</i>

## Ableton Live 10

### <<<<<<<< MCP MIDI Implementation >>>>>>>>

This is a list of supported standard MCP functions in Ableton Live and their MIDI CC control values. Each CC triggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value using iMap software.

<b>MIDI Ch1</b>	<b>Function <u>Ableton</u></b>	<b>Info</b>	<b>MIDI Ch1</b>	<b>Function <u>Ableton</u></b>	<b>Info</b>
<b>C1</b>	Select 1	<i>Channel Select</i>	<b>G#1</b>	Encoder 1	<i>Press Encoder</i>
<b>C#1</b>	Select 2	<i>Channel Select</i>	<b>A1</b>	Encoder 2	<i>Press Encoder</i>
<b>D1</b>	Select 3	<i>Channel Select</i>	<b>A#1</b>	Encoder 3	<i>Press Encoder</i>
<b>D#1</b>	Select 4	<i>Channel Select</i>	<b>B1</b>	Encoder 4	<i>Press Encoder</i>
<b>E1</b>	Select 5	<i>Channel Select</i>	<b>C2</b>	Encoder 5	<i>Press Encoder</i>
<b>F1</b>	Select 6	<i>Channel Select</i>	<b>C#2</b>	Encoder 6	<i>Press Encoder</i>
<b>F#1</b>	Select 7	<i>Channel Select</i>	<b>D2</b>	Encoder 7	<i>Press Encoder</i>
<b>G1</b>	Select 8	<i>Channel Select</i>	<b>D#2</b>	Encoder 8	<i>Press Encoder</i>
<b>C-1</b>	Rec 1	<i>Channel Rec</i>	<b>E2</b>	I/O	<i>Assignment</i>
<b>C#-1</b>	Rec 2	<i>Channel Rec</i>	<b>F2</b>	Send	<i>Assignment</i>
<b>D-1</b>	Rec 3	<i>Channel Rec</i>	<b>F#2</b>	Pan	<i>Assignment</i>
<b>D#-1</b>	Rec 4	<i>Channel Rec</i>	<b>G2</b>	Plugin	<i>Assignment</i>
<b>E-1</b>	Rec 5	<i>Channel Rec</i>	<b>G#2</b>	Page Up	<i>Assignment</i>
<b>F-1</b>	Rec 6	<i>Channel Rec</i>	<b>A2</b>	Page Down	<i>Assignment</i>
<b>F#-1</b>	Rec 7	<i>Channel Rec</i>	<b>A#2</b>	Bank Up	<i>Bank 8 Channels</i>

<b>MIDI</b>	Function	Info	<b>MIDI</b>	Function	Info
<b>Ch1</b>	<b>Ableton</b>		<b>Ch1</b>	<b>Ableton</b>	
G-1	Rec 8	<i>Channel Rec</i>	B2	Bank Down	<i>Bank 8 Channels</i>
G#-1	Solo 1	<i>Channel Solo</i>	C3	Channel Up	<i>Bank One Channel</i>
A-1	Solo 2	<i>Channel Solo</i>	C#3	Channel Down	<i>Bank One Channel</i>
A#-1	Solo 3	<i>Channel Solo</i>	D3	Flip	<i>Fader Flip Mode</i>
B-1	Solo 4	<i>Channel Solo</i>	D#3	Returns	
C0	Solo 5	<i>Channel Solo</i>	A#4	Shift	
C#0	Solo 6	<i>Channel Solo</i>	B4	-	<i>Option</i>
D0	Solo 7	<i>Channel Solo</i>	C5	-	<i>Control</i>
D#0	Solo 8	<i>Channel Solo</i>	C#5	-	<i>Alt</i>
E0	Mute 1	<i>Channel Mute</i>	C6	Previous	<i>Marker</i>
F0	Mute 2	<i>Channel Mute</i>	C#6	Next	<i>Marker</i>
F#0	Mute 3	<i>Channel Mute</i>	D6	Cycle	
G0	Mute 4	<i>Channel Mute</i>	D#6	Punch In	
G#0	Mute 5	<i>Channel Mute</i>	E6	Punch Out	
A0	Mute 6	<i>Channel Mute</i>	F6	Start	
A#0	Mute 7	<i>Channel Mute</i>	F#6	End	
B0	Mute 8	<i>Channel Mute</i>	F7	Scrub	
A6	Stop		F#3	F1	<i>User Function</i>
A#6	Play		G3	F2	<i>User Function</i>
B6	Record	<i>Main record</i>	G#3	F3	<i>User Function</i>
C7	Cursor Up	^	A3	F4	<i>User Function</i>
D7	Cursor Left	<	A#3	F5	<i>User Function</i>
E7	Zoom		B3	F6	<i>User Function</i>
D#7	Cursor Right	>	C4	F7	<i>User Function</i>
C#7	Cursor Down	v	C#4	F8	<i>User Function</i>
D5	Session/Arrange	<i>Automation</i>	G6	Rewind	<<
D#5	Track/Clip	<i>Automation</i>	G#6	FastForward	>>
E5	Undo	<i>Automation</i>	G#5	Back To Arrange	<i>Automation</i>
F5	Browser	<i>Automation</i>	A5	Draw	<i>Automation</i>
F#5	Clip Detail	<i>Automation</i>	A#5	Marker	
G5	Redo		B5	Follow	
E3	Meter	<i>Display</i>	F#4	F13	<i>Layer 2 (Function)</i>
F3	SMPTE/Beats	<i>Display</i>	G4	F14	<i>Layer 2 (Function)</i>
D4	F9	<i>Layer 2 (Function)</i>	G#4	F15	<i>Layer 2 (Function)</i>
D#4	F10	<i>Layer 2 (Function)</i>	A4	F16	<i>Layer 2 (Function)</i>
E4	F11	<i>Layer 2 (Function)</i>			
F4	F12	<i>Layer 2 (Function)</i>			

# Appendix C

## Cubase

### Mackie Control mode function table (Nuendo/Cubase - PVC Overlay)

Controller	Function
<b>Channel Strip</b>	
Encoder 1 - 8 (Rotate) Use with button Pan, EQ, Inserts, Master, FX Sen & Por drive III	Adjust parameters of channel 1-8 according to selected function (Pan, EQ, Inserts, Master, FX Send & Por drive III ) Press the desired function and rotate the channel knob
Encoder 1 - 8 (Enter) Use with button Pan, EQ, Inserts, Master, FX Sen & Por drive III	Adjust parameters of channel 1-8 according to selected function (Pan, EQ, Inserts, Master, FX Sen & Por drive III ) Press the desired function and press the channel knob
Fader 1-8	Adjusting correspondance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
<b>Channel and fader control</b>	
Button "Motor"	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
<b>Transport</b>	
Button "(Loop)"	Activate the loop function
Button "<<"	Activate the rewind function
Button ">>"	Activate the fast forward function
Button "(Stop)"	Activate the stop function
Button "(Play)"	Activate the play function
Button "(Rec)"	Activate the record function
<b>User define function</b>	
Button "Shift" (Use with F1-F8 buttons)	Press to use F1-F8 buttons as F9-F16 correspondently
Button "F1-F8"	Self define function
<b>Assignment</b>	
Button "Pan" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "EQ" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Inserts" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Master" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "FX Send" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Por drive III i" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"

Button "Page Up <<"	Flip page backward for the above functions
Button "Page Down >>"	Flip page forward for the above functions
<b>Window control</b>	
Button "Mixer"	Switch to mixer window
Utilities	
Button "Edit"	Activate the edit function to edit the track
Button "Undo"	Activate the undo function to undo the last command
Button "Redo"	Activate the redo function to redo the last command
Button "Save"	Activate the save function
Button "Punch"	Activate the punch function
Button "Left"	Jump to the left most of a loop
Button "Right"	Jump to the far right of a loop
<b>Marker controls</b>	
Button "Prev."	Jump to previous marker point from the current position
Button "Add"	Add a marker point at the current position
Button "Next"	Jump to next marker point from the current position
<b>Automation</b>	
Button "Read"	Activate the read function for automation
Button "Write"	Activate the write function to write a automation track
<b>Navigation</b>	
Jog wheel (Rotate)	Scrolling the play-line forward & backward
Button L/R	Selecting between tracks
Button Up/Down	Selecting track vertically
Buttons "Zoom" + "L/R"	Zoom in/out track horizontally
Buttons "Zoom" + "Up/Down"	Zoom in/out track vertically

## Logic Pro X

### Mackie Control mode function table (Logic Pro)

Controller	Function
<b>Channel Strip</b>	
"Encoder 1 - 8 (Rotate) Use with button Track, Pan/Surround, EQ, Send, Plug-in & Inst."	Adjust parameters of channel 1-8 according to selected function (Track, Pan/Surround, EQ, Send, Plug-in & Inst)
"Encoder 1 - 8 (Enter) Use with button Track, Pan/Surround, EQ, Send, Plug-in & Inst."	Adjust parameters of channel 1-8 according to selected function (Track, Pan/Surround, EQ, Send, Plug-in & Inst)
Fader 1-8	Adjusting correspondance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
<b>Channel and fader control</b>	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader

Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
<b>Transport</b>	
Button "(Loop)"	Activate the loop function of the DAW
Button "<<"	Activate the rewind function of the DAW
Button ">>"	Activate the fast forward function of the DAW
Button "(Stop)"	Activate the stop function of the DAW
Button "(Play)"	Activate the play function of the DAW
Button "(Rec)"	Activate the record function of the DAW
<b>User define function</b>	
Button "Shift"	Additional function for different controls
Button "F1-F8"	Self define functions at Logic
<b>View controls</b>	
Button "Global View"	Activate to enter into Global View mode. Use in conjunction with the below 8 different views buttons to switch between different window views
Button "MIDI Tracks"	Press to lauch the MIDI tracks window view
Button "Inputs"	Press to lauch the Inputs window view
Button "Audio Tracks"	Press to lauch the Audio tracks window view
Button "Audio Inst"	Press to lauch the Audio Inst window view
Button "Aux"	Press to lauch the Aux window view
Button "Busses"	Press to lauch the Busses window view
Button "Outputs"	Press to lauch the Outputs window view
Button "User"	Press to lauch the User window view
<b>Effect/Channel control</b>	
Button "Track"	Activate the "Track" function and use in conjunction with all the knobs
Button "Pan/Surround"	"Press button: Activate Pan/Surround function Rotate knob: Adjust pan/surround parameters Press knob (enter): Center value"
Button "EQ"	"Press button: Lauch selected channel's EQ function panel Rotate knob: Adjust EQ parameters Press knob (enter): Reset to default value"
Button "Send"	"Press button: Activate Send function Rotate knob: Adjust sending bus Press knob (enter): Confirm selected bus "
Button "Plug-in"	"Press button: Lauch selected channel's Plug-in function panel Rotate knob: Adjust plug-in parameters Press knob (enter): Reset to default value"
Button "Instrument"	"Press button: Lauch selected channel's Instrument function panel Rotate knob: Adjust Instructment parameters Press knob (enter): Reset to default value"
<b>Automation</b>	
Button "Group"	Activate the group function of the selected channel
Button "Read/Off"	Activate the read function of the selected channel
Button "Write"	Activate the write function of the selected channel
Button "Touch"	Activate the touch function of the selected channel
Button "Latch"	Activate the latch function of the selected channel



Button "Trim"	Activate the trim function of the selected channel
<b>Utilities</b>	
Button "Marker"	Make a marker point along a project
Button "Nudge"	Activate the nudge function
Button "Click"	Activate the metronome click sound
Button "Drop"	Activate the drop function
Button "Replace"	Activate the replace mode (A type of overwrite recording mode where the existing audio regions in a section of the Tracks area are replaced by a new recording)
Button "Solo"	Activate the solo tool that allow you to play a region or event in isolation
Button "Save"	Activate the save function to save your project
Button "Undo"	Activate the undo function to undo the last command
Button "Cancel"	Activate the cancel function to cancel the current command
Button "Enter"	Activate the enter function
<b>Navigation</b>	
Jog wheel (Rotate)	Scrolling the play-line forward & backward
Button L/R	Selecting between tracks
Button Up/Down	Selecting track vertically
Zoom + Button Up/Down	Zoom in and out of the track

## ProTools HUI

### HUI mode function table (Pro Tool - PVC Overlay)

Function	Control sequency [xxx] = Button (xxxx) = Knob
<b>Navigation</b>	
Page up (Shift 8 channels up)	Press [Bank <<8 60]
Page down (Shift 8 channel down)	Press [Bank 8>> 60]
Track up (Shift one channel up)	Press [Channel < 69]
Track up (Shift one channel down)	Press [Channel > 69]
<b>Assign a Send</b>	
Assign Send A (e.g. Send A on channel 1)	Press [Assign 63] - Press [Send A 21] - Rotate (Channel 1 Knob)
Assign Send B (e.g. Send B on channel 2)	Press [Assign 63] - Press [Send B 22] - Rotate (Channel 2 Knob)
Assign Send C (e.g. Send C on channel 3)	Press [Assign 63] - Press [Send C 23] - Rotate [Channel 3 Knob]
Assign Send D (e.g. Send D on channel 4)	Press [Assign 63] - Press [Send D 24] - Rotate [Channel 4 Knob]
Assign Send E (e.g. Send E on channel 5)	Press [Assign 63] - Press [Send E 25] - Rotate [Channel 5 Knob]
Adjust the send level (e.g. Send A level on Ch. 1)	Press [Assign 63] - Press [Send A 21] - Rotate (Channel 1 Knob) to adjust the level
<b>Assign Plug-in</b>	
Adding a plug-in to a track's slot1-4 (e.g. xx to Ch.1 / Plug-in slot 1)	Press [Sel] on Ch.1 - Press [Plug-in 16] - Press (Knob 1-4) to select the slot 1-4 - Press [Plug-in Assign] - Rotate (Knob) to select plug-in - Press [Plug-in Assign] to exit {Tip: Press (Knob 5) to exit in any state}

Adding a plug-in to a track's slot 5 (e.g. to Ch.1 / Plug-in slot 5)	Press [Sel] on Ch.1 - Press [Plug-in <sup>16</sup> ] - Rotate (the 5th Knob) to turn page - Press (Knob 1-4) to select the slot 1-4 - Press [Plug-in Assign] - Rotate (Knob) to select plug-in - Press [Plug-in Assign] to exit {Tip: Press (Knob 5) to exit in any state}
Edit a plug-in (e.g. Plug-in on Ch. 1 / Plug-in slot 2)	Press [Sel] on Ch.1 - Press [Plug-in <sup>16</sup> ] - Press (Knob 2) - Rotate (Knob) to adjust parameters - Press (Knob 5) to exit
<b>Automation</b>	
Activate the Read function of the automation on the selected channel (e.g. Ch.1 Read function)	Press and hold [Read <sup>7</sup> ] - Press (Channel 1 Knob)
Activate the Write function of the automation on the selected channel (e.g. Ch.1 Write function)	Press and hold [Write <sup>8</sup> ] - Press (Channel 1 Knob)
Activate the Touch function of the automation on the selected channel (e.g. Ch.1 Touch function)	Press and hold [Touch <sup>9</sup> ] - Press (Channel 1 Knob)
Activate the Latch function of the automation on the selected channel (e.g. Ch.1 Latch function)	Press and hold [Write <sup>10</sup> ] - Press (Channel 1 Knob)
Activate the Trim function of the automation on the selected channel (e.g. Ch.1 Trim function)	Press and hold [Trim <sup>11</sup> ] - Press (Channel 1 Knob)
Turn Off the automation of the selected channel (e.g. Ch.1 Latch function)	Press and hold [Off <sup>12</sup> ] - Press (Channel 1 Knob)
Suspend the automation of the selected channel (e.g. Ch.1 Suspend function)	Press and hold [Off <sup>13</sup> ] - Press (Channel 1 Knob)
<b>Channel Strip</b>	
Activate the Channel Rec function	Press [Channel Rec] of the selected channel
Activate the Channel Solo function	Press [Channel Solo] of the selected channel
Activate the Channel Mute function	Press [Channel Mute] of the selected channel
Select a Channel	Press [Channel Sel] or touch the (Channel Fader cap)
<b>Control buttons</b>	
Channel Pan (Mono track)	Press [Pan <sup>15</sup> ], it light - Rotate the correspondance channel (Knob 1-8)
Channel Pan (Stereo track)	Press [Pan <sup>15</sup> ] twice, it flashes - Rotate the correspondance channel (Knob 1-8)
<b>Windows buttons</b>	
Opens or Closes the Edit window	Press [Edit <sup>28</sup> ]
Opens or Closes the Mix window	Press [Mix <sup>29</sup> ]
<b>Modifiers</b>	
Extends the edit selection's region boundary (Zoom mode off)	Press [Shift <sup>2</sup> ] - Press [<< <sup>41</sup> ] or [>> <sup>43</sup> ]
Extends the selection to the previous or next track	Press [Shift <sup>2</sup> ] - Press [40] or [44]
Centers the left or right side of the on-screen waveform selection in the Edit window	Press [Option <sup>4</sup> ] - Press [<< <sup>41</sup> ] or [>> <sup>43</sup> ]
Removes the selection from the topmost or bottommost track	Press [Option <sup>4</sup> ] - Press [40] or [44]

Disengage a fader from any Mix group. Release the button and the fader obeys group behavior again. Used to offset a fader's level within a group	Press [Ctrl ③]
Scrolls the frontmost window to the left or right	Press [Cmd ①] - Press [◀④①] or [▶④③]
Scrolls the frontmost window upward or downward	Press [Cmd ①] - Press [⬆④②] or [⬇④②]
<b>Utilities</b>	
Save the project	Press [Save ③] twice
Undo the last edit operation	Press [Undo ②]
Abort or exit a process	Press [Esc ⑭]
Defines a memory location or marker during playback or recording	Press [Enter ⑥]
<b>Transport buttons</b>	
Set Edit selection "In" point to the current locator position	Press [IN ⑦]
Set Edit selection "Out" point to the current locator position	Press [Out ⑧]
Activate the Rewind function	Press [Rewind ⑩]
Activate the Loop function	Press [Loop ⑪]
Activate the Fastforward function	Press [Fastforward ⑫]
Activate the Record function	Press [Rec ⑬]
Activate the Play function	Press [Play ⑬]
Activate the Stop function	Press [Stop ⑮]
<b>Jog Wheel &amp; Scrub button</b>	
Swicthging the Jog wheel function from Scrub to Shuttle	Press [Scrub ⑲] ( Toggles squency: Scrub - Shuttle - Off)
Scrubs or Shuttles forward	Rotate (Jog wheel) clockwise
Scrubs or Shuttles backward	Rotate (Jog wheel) anti-clockwise
<b>Zoom &amp; Navigation buttons</b>	
<i>Navigation mode (Zoom/42 button is off)</i>	
Navigation arrow	Rotate (Jog Wheel)
Moves the edit cursor to the previous region boundary or sync point	Press [◀④①]
Moves the edit cursor to the next region boundary or sync point	Press [▶④③]
Mark-in & mark-out controls	Press [⓪] & [④④] or [IN ⑦] & [Out ⑧]
<i>Zoom mode (Press Zoom/42 once to enter: light)</i>	
Decreases the horizontal zoom	Press [◀④①]
Increases the horizontal zoom	Press [▶④③]
Decreases the vertical zoom	Press [⓪]
Increases the vertical zoom	Press [④]
<i>Selection mode (Press Zoom/42 twice to enter: Flash)</i>	
Adjust the selection "In" point for making a selection	Press & hold [◀④①] - Rotate the (Jog wheel)
Adjust the selection "Out" point for making a selection	Press & hold [▶④③] - Rotate the (Jog wheel)
Positions the cursor at the current selection's left edge	Press twice [◀④①]

Positions the cursor at the current selection's right edge	Press twice [ $\gg$ ] [ $\text{Ⓢ}$ ]
Moves the selection to the previous track	Press [ $\text{Ⓢ}$ ]
Moves the selection to the next track	Press [ $\text{Ⓢ}$ ]

## Ableton Live 10

### Mackie Control mode function table (Ableton Live - PVC Overlay)

Controller	Function
<b>Channel Strip</b>	
Encoder 1 – 8 (Rotate)	Channel 1-8 pan
Encoder 1 – 8 (Enter)	Only use in conjunction with some functions
Fader 1-8	Adjusting correspondance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
<b>Fader controls</b>	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
<b>Transport</b>	
Button "(Loop)"	Activate the loop function
Button "<<"	Activate the rewind function
Button ">>"	Activate the fast forward function
Button "(Stop)"	Activate the stop function
Button "(Play)"	Activate the play function
Button "(Rec)"	Activate the record function
<b>Controls / Functions</b>	
Button "View Selector"	Press to switch between "Session view" and "Arrangement view"
Button "Track/Clip view"	Press to switch between "Track view" and "Clip view"
Button "Show/Hide browser"	Press to show or hide the left browser section
Button "Show/Clip detail"	Press to expand the Clip view area by hiding the effect section
<b>Marker controls</b>	
Button "Prev."	Jump to previous marker point from the current position
Button "Add"	Add a marker point at the current position
Button "Next"	Jump to next marker point from the current position
<b>Assignment</b>	
Button "I/O"	Press to activate the "I/O" fuction, use in conjunction with the channel knobs to adjust the audio destination for the "Audio To" setting
Button "Pan"	Press to activate the "Pan" function, use in conjunction with the channel knobs to adjust each channel pan value

Button "Send"	Press to activate the "Send" function and rotate the correspondance channel knob to adjust the Send A and Send B value
Button "Instrument Rack"	Only effect on "Instructment track". Press the Instructment Rack button and then the first channel knob to enter to adjsutment setting. Rotate channel knobs 1-8 to adjust the Marco1-8 values
Button "Return Track"	Activate to control the Return tracks
<b>Navigation</b>	
Jog wheel (Rotate)	"Session view: Scrolling through the clips up and down Arrangement view: Scrolling the play-line forward & backward"
Buttons "Zoom" + "L/R"	"Session view: Zoom button could not be activtaed Arrangement view: Zoom in/out track horizontally"
Buttons "Zoom" + "Up/Down"	"Session view: Zoom button could not be activtaed Arrangement view: Zoom in/out track horizontally"



<p>天猫官方旗舰店</p>  <p>天猫店iconproaudio旗舰店</p>	<p>抖音号</p>  <p>抖音iCON艾肯</p>	<p>哔哩哔哩</p>  <p>B站iCONProAudio</p>	<p>微信公众号</p>  <p>微信号iCON-PRO</p>	<p>官方售后QQ</p>  <p>4006311312.114.qq.com</p>
--	--	---	---	--

中国地区用户

<p>Twitter</p>  <p><a href="http://www.twitter.com/iconproaudio">www.twitter.com/iconproaudio</a></p>	<p>Instagram</p>  <p><a href="http://www.instagram.com/iconproaudio">www.instagram.com/iconproaudio</a></p>	<p>Facebook</p>  <p><a href="http://www.facebook.com/iconproaudio">www.facebook.com/iconproaudio</a></p>	<p>Youtube</p>  <p><a href="http://www.youtube.com/iconproaudio">www.youtube.com/iconproaudio</a></p>
--	--	---	--

<p>Website</p>  <p><a href="http://www.iconproaudio.com">www.iconproaudio.com</a></p>	<p>Support</p>  <p><a href="http://support.iconproaudio.com">support.iconproaudio.com</a></p>	<p>Dashboard</p>  <p><a href="http://iconproaudio.com/dashboard/">iconproaudio.com/dashboard/</a></p>
---	---	---

[www.iconproaudio.com](http://www.iconproaudio.com)